VEVOR

Upgrade · The Home Creator Way


FOOD SLICER

Model:SL-520 SL520 SL-520A SL520A

VEVOR
Upgrade·The Home Creator Way

FOOD SLICER

Model:SL-520 SL520 SL-520A SL520A

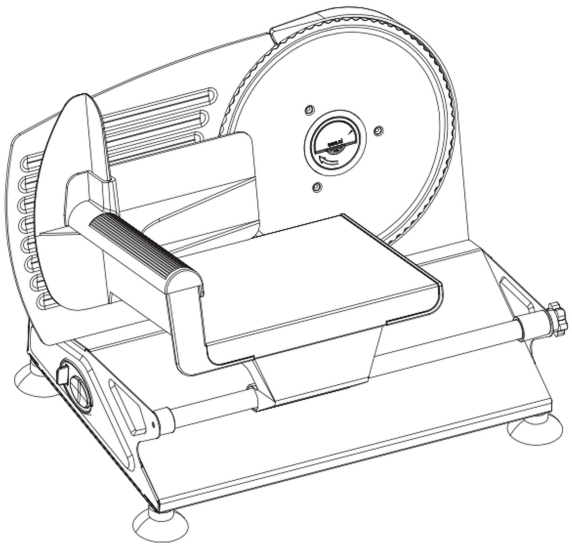

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

IMPORTANT SAFEGUARDS

	Warning-To reduce the risk of injury, user must read instructions manual carefully.

	Keep children away from the machine for fear of danger.
	Warning- For Indoor Use Only
	CORRECT DISPOSAL This product is subject to the provision of European Directive 2012/19/EU. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to collection point for recycling electrical and electronic devices.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed,including the following:

READ AND SAVE THESE INSTRUCTIONS

• Read all instructions before using.

• To protect against risk of electrical shock do not put power unit in water or other liquid.

• Close supervision is necessary when any appliance is used by or near children. Children should not use this appliance.

• Place On/Off switch in “OFF" position and remove cord plug from electrical outlet when not in use, before putting on or taking off parts and before cleaning. Do not pull power cord.

• Avoid contacting moving parts. Never feed food by hand. Always use

completely assembled slicer with food tray and food pusher.
• Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions or has been dropped or damaged in any manner. Do not service this product other than noted in this manual.
• The use of attachments not recommended or sold by manufacturer may result in injury.
• Do not use outdoors.
• Do not let cord hang over edge of table or countertop, or touch hot surfaces including the stove. Do not use an extension cord.
• Do not use appliance for other than intended use.Blade is sharp. Handle carefully when cleaning.
• The safety switch prevents accidental operation of the appliance.Do not defeat or bypass the safety switch.
• Appliance should not be used to cut frozen food or bones.
• Operate appliance only if the blade is properly locked and/or tightened.
• Always cut food with the slicer fully assembled.

THIS UNIT IS FOR, HOUSEHOLD USE ONLY

This product is not intended for commercial use. No user-serviceable parts inside. Do not attempt to service this product.

POLARIZED PLUG

This appliance has a polarized plug,(one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way.If the plug does not fit fully in the outlet, reverse the plug.If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature or modify the plug in any way. If the plug fits loosely into the AC outlet or if the AC outlet feels warm do not use that outlet.

SAVE THESE INSTRUCTIONS

DO NOT IMMERSE THE CORD IN WATER OR ANY OTHER LIQUID!

SAFETY INSTRUCTIONS

• If you ignore the safety instructions the manufacturer cannot be held responsible for damage.
• If the supply cord is damaged,it must be replaced by the manufacturer its service agent,or similarly qualified persons in order to avoid a hazard.
• Do not use this appliance with a damaged cord or plug or when the appliance has malfunctions or has been damaged in any manner.To avoid a hazard, make sure that a damaged cord or plug is replaced by a competent and qualified repair service.Do not repair this appliance yourself.
• Never move the appliance by pulling the cord and make sure the cord cannot become entangled.
• The appliance must be placed on a stable,level surface.
• This appliance is only to be used for household purposes and only for its intended purpose.
• The appliance can be used by children aged from8 years and above and persons with reduced physical,sensory or mental capabilities or lack of experience and knowledge if they are under supervision and have been given instruction concerning use of the appliance in a safe way and understand the hazards involved.Children must
not play with the appliance.Cleaning and user maintenance must not be carried out by children unless they are older than 8 years old and supervised.
• To protect yourself against an electric shock,do not immerse the cord,plug or appliance in water or any other liquid.
• Switch off the appliance and unplug from the power supply before changing accessories or handling parts that move in use.
• Always unplug the device if it is left unattended and before assembling, disassembling, or cleaning.
• Do not allow children to use the device without supervision.
• This appliance must be used with the sliding feed table and the piece holder in position unless this is not possible due to the size or shape of

food.
• Avoid accidents such as trips or falls by placing the cord in a safe position.
• If an extension cord is used,its capacity needs to be suitable for the appliance's power consumption.
• Do not operate the appliance with wet hands or while standing on a wet floor.Do not touch the power plug with wet hands.
• Do not open the appliance housing under any circumstances.Do not insert any foreign objects into the interior of the housing.
• Never use accessories that are not recommended by the manufacturer.They could pose a safety risk to the user and might damage the appliance. Only use original parts and accessories.
• Keep the appliance away from any hot surfaces and open flames. Always operate the appliance on a level,stable,clean,and dry surface. Protect the appliance against heat, dust, direct sunlight, moisture, drips, and splashing water.
• Do not place heavy objects on top of the appliance. Do not place objects with open flames, e.g.candles, on top of or beside the appliance. Do not place objects filled with water, e.g.vases, on or near the appliance.
• Do not pull the power cord to remove the plug from the electrical outlet and do not wrap the power cord around the appliance.
• Unplug the appliance from the electrical outlet when not in use and before cleaning.
• Switch off the appliance before changing accessories or handling parts that move during use.
• If the appliance should overheat, stop using the appliance and unplug from its electrical outlet.
• Never leave the appliance unattended during use.
• Dry the appliance and all accessories before connecting to the power supply and prior to attaching the accessories.
• Always turn the appliance off before disconnecting the power plug.
• Clean the appliance thoroughly prior to using it.
• During operation keep hands,hair clothing,and utensils away from the


cutting blade to avoid injuries and damage to the appliance.
• The appliance is only intended for short term operation. After an operation time of 5 minutes let it cool for at least 30 minutes. Do not overload the

SPECIFICATION

Model	SL-520 SL520 SL-520A SL520A
Rated Power	200W
Rated Input	AC120V 60Hz AC 220-240V 50/60Hz

PARTS DESCRIPTION

1	Support Plate
2	Blade
3	Blade Locking Screw
4	Power Cord
5	Base Assembly
6	Food Carriage
7	Slicing Guard
8	Dual-action On/Off switch
9	Thickness Adjustment Knob
10	Motor Assembly

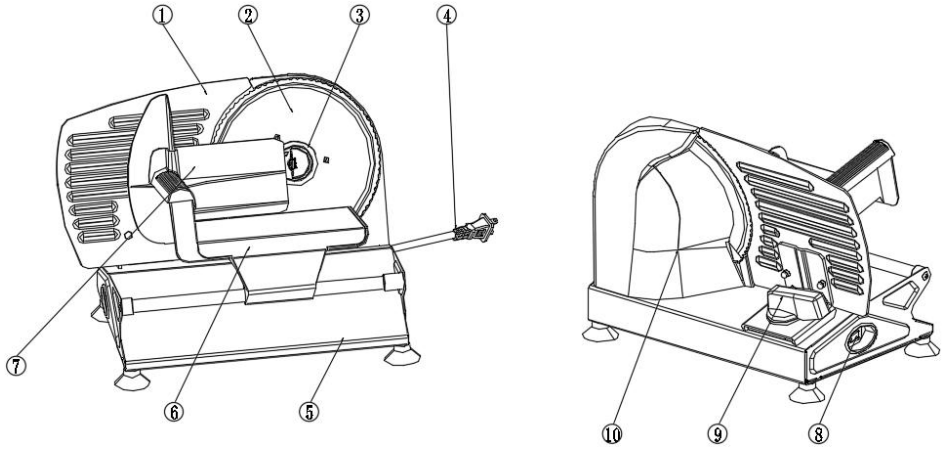

Take the appliance and accessories out of the box.Remove the stickers,protective foil or plastic from the device.

Check for the presence of all parts and for transport damage.In case of damages or incomplete delivery,please contact your dealer.

Put the power cable into the socket.(**Note:** Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage AC 120V 60Hz(AC 220-240V 50/60Hz) 200W.

Before using your appliance for the first time,wipe all removable parts with a damp cloth.Never use abrasive products.

Clean the whole appliance (see the cleaning section).

Place the appliance on a dry, flat, and stable surface.

Apply downward pressure onto the appliance so that the suction feet(7)get a good grip.

BEFORE THE FIRST USE

Use the setting button to choose the desired cutting width.

The cutting width is adjustable from 1 to 15mm. Slide the cradle to the left and place the food on the cradle.

Place the holder on the cradle;use this holder to push the food slightly against the back cover.

Activate the device by using the on/off switch which is located on the left side of the device.

NOTE: This appliance is equipped with a safety yourself then push simultaneously the on/off
switch and the appliance will start.By pushing the switch (A),first bring the safety switch towards on/off switch again the appliance will stop.
WARNING!Do not touch the blade,the blade is very sharp and can cause severe injury.
rotating blade. Catch the sliced food at the back of the device.
WARNING! Never use the device without the guard,you can seriously injure yourself.
When turning off the device the blade keeps turning for a while,so do not touch it.After 5 minutes of continued use,turn off the device and allow it to cool down,to prevent overheating of the motor.

CLEANING AND MAINTENANCE

Unplug the appliance and allow it to cool down. Use a soft,slightly damp cloth to wipe appliance surfaces.Do not allow water or any other liquid to get into the unit.
Before removing the blades,disconnect the power plug.
WARNING! Never touch the edges of the blades!Make sure the removed cutting knife cannot roll off the table!
Now you can clean the blade in soapy water,the blade is also dishwasher safe.
To put the cutting blade back into position,make sure the tabs on the blade match up to the appliance and put on the blade,lock the blade by turning the latch counterclockwise.

CLEANING THE TIE ROD AND BLADE GUARD

To disassemble the tie rod and blade guard:At the right side of the tie rod,you will find a hatch,slide this hatch to the right now you can take out the rod and you will be able to clean these parts.

WARNING!

Packaging materials are not toys. Children should not play with the

packaging materials as they pose a risk of swallowing and suffocation!

USE

Use the setting button to choose the desired cutting width.
The cutting width is adjustable from 1 to 15 mm. Slide the cradle to the left and place the food on the cradle.
Place the holder on the cradle;use this holder to push the food slightly against the back cover.
Activate the device by using the on/off switch which is located on the left side of the device.
NOTE: This appliance is equipped with a safety switch (A),first bring the safety switch towards yourself then push simultaneously the on/off switch and the appliance will start.By pushing the on/off switch again the appliance will stop.
WARNING!Do not touch the blade,the blade is very sharp and can cause severe injury.
Slide the tray slowly to the right against the rotating blade.Catch the sliced food at the back of the device.
WARNING! Never use the device without the guard,you can seriously injure yourself.

PLEASE NOTE THAT:

This appliance is only suitable for slicing food e.g. meats, cheeses,fruits, vegetables,breads,etc.The food to be sliced must be defrosted,unpackaged and deboned before it can be sliced with the appliance. Do not use it for slicing frozen food,bones, or for any other purpose.
This appliance is only suitable for private household use and it is not designed for commercial purposes.
This appliance is intended for dry indoor use only. Do not use the appliance outdoors.

HOT ROASTS — BEEF, PORK, LAMB, TURKEY, HAM

When slicing boneless roasts,remove from the oven and allow to cool for 15-20 minutes before
Cut the roast,if necessary,to fit onto the platform. Place foil underneath the platform table to catch juices and crumbs for easy cleanup(and treating yourself with the best pieces).
For rolled or tied roast,remove strings one at a time as the strings become closer to the blade (make sure the appliance is off).

CHEESE

Slice while well chilled.
serving,allow the cheese to reach room temperature.This will enhance the natural flavour. Some processed cheese may stick to the blade.
When necessary,turn the appliance off,wait for the blade to stop turning,and remove the plug. Wipe the blade with a damp cloth since moisture will help prevent the blade from sticking.

BACK BACON

Chill thoroughly before slicing. Some types of smoked bacon should have the fat removed.

COLD CUTS AND SANDWICH MEAT

Cold cuts of meat will last longer and will retain flavour longer if sliced when needed.
For best results,chill first.
Remove any plastic or hard casing before slicing. Use a constant,gentle pressure for uniform slices.

FRUITS AND VEGETABLES

Slice potatoes for thick or thin chips.
Slice carrots lengthwise in very thin strips. Soak in ice water to curl.Slice zucchini, eggplant, and squash.

BACK BACON

Chill thoroughly before slicing. Some types of smoked bacon should have the fat removed.

Cold Cuts and Sandwich Meat

Cold cuts of meat will last longer and will retain flavour longer if sliced when needed.

For best results,chill first. Remove any plastic or hard casing before slicing. Use a constant,gentle pressure for uniform slices.

FRUITS AND VEGETABLES

Slice potatoes for thick or thin chips.

Slice carrots lengthwise in very thin strips.Soak in ice water to curl.

Slice zucchini, eggplant, and squash.

CLEANING AND MAINTENANCE

Unplug the appliance and allow it to cool down. Use a soft,slightly damp cloth to wipe appliance surfaces.Do not allow water or any other liquid to get into the unit.

REMOVE THE CUTTING BLADE

Before removing the blades,disconnect the power plug.

WARNING! Never touch the edges of the blades! Make sure the removed cutting knife cannot roll off the table!Keep children at a safe distance! To remove the cutting blade.Push the ‘push button' in the middle of the cutting blade, a latch will come out;turn the latch clockwise to unlock the cutting blade.

Now you can clean the blade in soapy water,the blade is also dishwasher safe.

To put the cutting blade back into position,make sure the tabs on the blade match up to the appliance and put on the blade,lock the blade by turning the latch counter-clockwise

CLEANING THE TIE ROD AND BLADE GUARD

To disassemble the tie rod and blade guard: At the right side of the tie rod,you will find a hatch, slide this hatch to the right now you can take out the rod and you will be able to clean these parts.

PARTS	HOW TO CLEAN THEM?
Food holder	Remove and clean with soapy water. Rinse under tap water and dry thoroughly.
Sliding platform	Wipe with a soft cloth damped with some dish washing liquid.
Sliding food guide	Wipe with a clean cloth and dry thoroughly. Do not immerse in water or other liquids!

STORAGE AND DISPOSAL

STORAGE:

Store the appliance in a cool,dry,and clean place, out of the reach of children and pets.

Please keep the packaging for transporting the appliance or for storing your appliance when not in use for a prolonged time period.

PRODUCT DISPOSAL:

This product may not be disposed of with ordinary household waste,as electrical and electronic waste must be disposed of separately.

GuangZhou Superior Electric Industrial Co., Ltd.
Address: No.28,Huashan Road, Shilou Town, Panyu District, GUANGZHOU, -511447 China
E-mail: support@vevor.com





VEVOR

Upgrade · The Home Creator Way


Trancheuse à aliments

Modèle : SL- 520 SL520 SL-520A SL520A

VEVOR
Upgrade·The Home Creator Way

FOOD SLICER

Modèle : SL -520 SL520 SL-520A SL520A

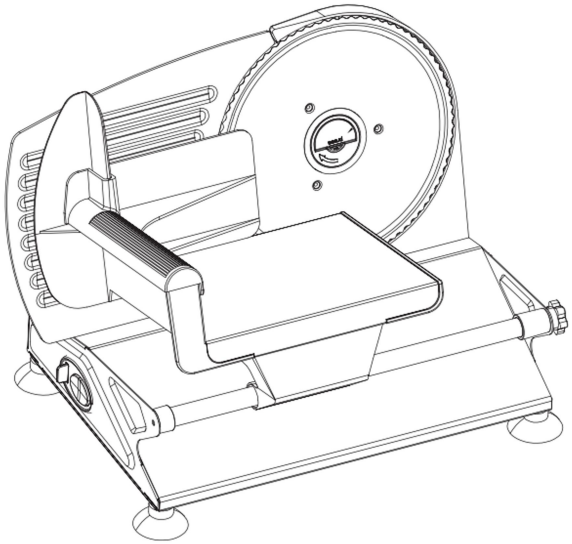

Voici les instructions originales. Veuillez lire attentivement toutes les instructions du manuel avant utilisation. VEVOR se réserve le droit d'interpréter ce manuel à sa guise. L'apparence du produit que vous recevrez peut différer. Nous vous prions de nous excuser si nous vous informons des mises à jour techniques ou logicielles concernant notre produit.

MESURES DE PROTECTION IMPORTANTES

	Avertissement – Afin de réduire les risques de blessure, l'utilisateur doit lire attentivement le manuel d'instructions.

	Tenez les enfants éloignés de la machine par mesure de précaution.
	Avertissement : Usage intérieur uniquement
	ÉLIMINATION CORRECTE Ce produit est soumis à la directive européenne 2012/19/UE. Le symbole représentant une poubelle barrée indique que ce produit nécessite une collecte sélective des déchets dans l'Union européenne. Ceci s'applique au produit et à tous les accessoires portant ce symbole. Les produits ainsi marqués ne doivent pas être jetés avec les ordures ménagères, mais doivent être déposés dans un point de collecte pour le recyclage des équipements électriques et électroniques (EEED).

JE SUIS DES GARANTIES IMPORTANTES

Lors de l'utilisation d'appareils électriques, il convient de respecter les précautions de sécurité de base. toujours être respecté, y compris les points suivants :

LISEZ ET CONSERVEZ CES DOCUMENTS INSTRUCTIONS

• Lire toutes les instructions avant utilisation.
• Pour éviter tout risque de choc électrique, ne placez pas l'unité d'alimentation à proximité. dans l'eau ou tout autre liquide.
• Une surveillance étroite est nécessaire lorsqu'un appareil est utilisé par ou À proximité des enfants. Les enfants ne doivent pas utiliser cet appareil.
• Mettez l'interrupteur marche/arrêt en position « ARRÊT » et retirez la fiche du cordon. Débranchez la prise électrique lorsqu'elle n'est pas utilisée, avant de mettre ou de prendre Retirez les pièces avant de les

nettoyer. Ne tirez pas sur le cordon d'alimentation.
• Évitez tout contact avec les pièces mobiles. Ne donnez jamais les aliments à la main. Toujours Utiliser la trancheuse entièrement assemblée avec plateau et poussoir à aliments.
• N’utilisez aucun appareil dont le cordon ou la fiche est endommagé,

après que l’ appareil a mal fonctionné ou a subi une chute ou un

dommage. De quelque manière que ce soit. N'effectuez aucune réparation sur ce produit autrement que selon les indications de ce document. manuel.
• L'utilisation d'accessoires non recommandés ou non vendus par Le fabricant peut entraîner des blessures.
• Ne pas utiliser à l'extérieur.
• Ne laissez pas le cordon pendre du bord de la table ou du comptoir, ni le toucher. Surfaces chaudes, y compris la cuisinière. Ne pas utiliser de rallonge.
• N’utilisez pas cet appareil à d’autres fins que celles prévues. La lame est tranchante. Manipulez-la avec précaution lors du nettoyage.
• Le dispositif de sécurité empêche toute mise en marche accidentelle de l'appareil. Ne pas neutraliser ni contourner le dispositif de sécurité.
• Cet appareil ne doit pas être utilisé pour couper des aliments congelés ou des os.
• N’utilisez l’appareil que si la lame est correctement verrouillée et/ou resserré.
• Coupez toujours les aliments avec la trancheuse entièrement assemblée .

CET APPAREIL EST DESTINÉ À UN USAGE DOMESTIQUE UNIQUEMENT

Ce produit n'est pas destiné à un usage commercial. Il ne contient aucune pièce réparable par l'utilisateur. Ne tentez pas de réparer ce produit.

FICHE POLARISÉE

Cet appareil possède une prise polarisée (une lame). (est plus large que l'autre). Comme mesure de sécurité pour réduisez le risque de choc électrique, cette prise est Conçue pour s'insérer dans une prise polarisée dans un seul sens. Si la fiche ne s'insère pas complètement dans la prise, inversez-la. Si la prise ne convient toujours pas, contactez un technicien qualifié. électricien. N’essayez pas de contourner ce dispositif de sécurité. modifier ou altérer la prise de quelque manière que ce soit. Si la prise s'insère mal dans Si la prise secteur est chaude, ne l'utilisez pas.

CONSERVEZ CES INSTRUCTIONS

NE PAS IMMERGER LE CORDON DANS L'EAU OU N'IMPORTE QUEL AUTRE LIQUIDE !

SÉCURITÉ INSTRUCTIONS

• Si vous ne respectez pas les consignes de sécurité, le fabricant ne pourra être tenu responsable des dommages.
• Si le cordon d'alimentation est endommagé, il doit être remplacé. remplacé par le fabricant son agent de service, ou des personnes aux qualifications similaires afin d'éviter un danger.
• N’utilisez pas cet appareil si le cordon ou la prise est endommagé(e), s’il présente un dysfonctionnement ou s’il a été endommagé de quelque manière que ce soit. Pour éviter tout problème, En cas de danger , assurez-vous qu'un cordon ou une prise endommagé(e) soit remplacé(e) par un réparateur compétent et qualifié. Service de réparation. Ne réparez pas cet appareil vous-même.
• Ne déplacez jamais l'appareil en tirant sur le cordon. et veillez à ce que le cordon ne s'emmêle pas.
• L'appareil doit être placé sur une surface stable et plane.
• Cet appareil est destiné exclusivement à un usage domestique et uniquement aux fins pour lesquelles il a été conçu.
• Cet appareil peut être utilisé par les enfants âgés de 8 ans et plus et par les personnes à mobilité réduite. capacités physiques, sensorielles ou

mentales ou leur absence l'expérience et les connaissances, s'ils sont inférieurs à ont été supervisés et ont reçu des instructions concernant l'utilisation de l'appareil en toute sécurité et Les enfants doivent comprendre les dangers encourus.
Ne jouez pas avec l'appareil. Le nettoyage et l' entretien ne doivent pas être effectués par des enfants. à moins qu'ils n'aient plus de 8 ans et supervisé.
• Pour vous protéger contre les chocs électriques, ne plongez pas le cordon, la prise ou l'appareil dans l'eau ou tout autre liquide.
• Éteignez l'appareil et débranchez-le de l'alimentation électrique avant de changer les accessoires ou de manipuler les pièces mobiles.
• Débranchez toujours l'appareil s'il est laissé sans surveillance et avant assemblage, démontage, ou le nettoyage.
• Ne laissez pas les enfants utiliser l'appareil sans surveillance.
• Cet appareil doit être utilisé avec la table d'alimentation coulissante et le support à pièces en position, sauf si cela est impossible en raison de la taille ou de la forme des aliments.
• Pour éviter les accidents tels que les trébuchements ou les chutes, placez le cordon dans une position sûre.
• Si une rallonge est utilisée, sa capacité doit être adaptée à la consommation électrique de l'appareil.
• N’utilisez pas l’appareil avec les mains mouillées ou en vous tenant sur un sol mouillé. Ne touchez pas le Brancher une prise électrique avec les mains mouillées.
• N’ouvrez en aucun cas le boîtier de l’appareil . N’insérez aucun objet étranger à l’intérieur du boîtier.
• N’utilisez jamais d’accessoires non recommandés par le fabricant. Ils pourraient présenter un danger. risque pour l'utilisateur et risque d'endommager l'appareil. Utilisez uniquement des pièces et accessoires d'origine.
• Tenez l'appareil éloigné de toute surface chaude et flammes nues.
Utilisez toujours l'appareil sur une surface plane, stable, propre et sèche. surface. Protégez l'appareil de la chaleur, poussière, lumière directe du


soleil, humidité, gouttes , et des éclaboussures d'eau.
• Ne placez pas d'objets lourds dessus. appareil. Ne pas placer objets avec flammes nues, bougies par exemple, sur ou à côté de l'appareil. Ne placez pas d'objets remplis d'eau, gousses, sur ou près de l'appareil.
• Ne tirez pas sur le cordon d'alimentation pour retirer la fiche de la prise électrique et n'enroulez pas le cordon d'alimentation autour de l'appareil.
• Débranchez l'appareil de la prise électrique. lorsqu'il n'est pas utilisé et avant le nettoyage.
• Éteignez l'appareil avant de le changer. accessoires ou manutention parties qui bougent pendant utiliser.
• Si l'appareil venait à surchauffer, Cessez d'utiliser l'appareil et débranchez-le de la prise électrique.
• Ne jamais partir l'appareil laissé sans surveillance pendant son utilisation.
• Séchez l'appareil et tout accessoires avant de brancher l'alimentation électrique et avant de fixer les accessoires.
• Éteignez toujours l'appareil avant de débrancher la prise électrique.
• Nettoyez soigneusement l'appareil avant de l'utiliser.
• Pendant l'opération, gardez vos mains et vos cheveux éloigner les vêtements et les ustensiles de la lame pour éviter les brûlures . blessures et dommages à l'appareil.
• Cet appareil est conçu uniquement pour une utilisation à court terme. opération. Après un temps de fonctionnement de 5 minutes, laissez Laisser refroidir pendant au moins 30 minutes. Ne surchargez pas le


SPÉCIFICATION

Modèle	SL -520 SL520 SL-520A SL520A
Puissance nominale	200 W
Entrée nominale	120 V CA 60 Hz CA 220-240 V 50/60 Hz

PARTIES DESCRIPTION

1	Plaque de support
2	Lame
3	Vis de blocage de la lame
4	Cordon d'alimentation
5	Assemblage de base
6	Transport de vivres
7	Protection anti-tranchage
8	Interrupteur marche/arrêt à double action
9	Bouton de réglage d'épaisseur
10	Assemblage moteur

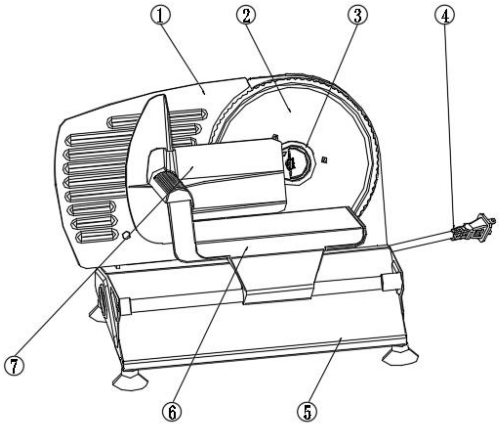

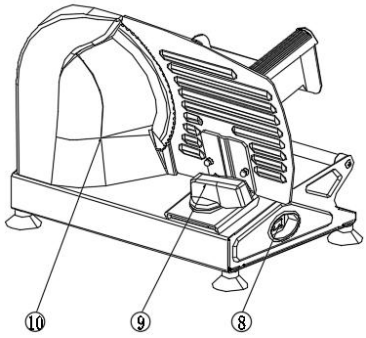

Sortez l'appareil et ses accessoires de la boîte. Retirez les autocollants, le film protecteur ou le plastique de l'emballage. le appareil.
Vérifiez la présence de toutes les pièces et pour Dommages liés au transport. En cas de dommages ou de livraison incomplète , veuillez contacter votre revendeur.

Insérez le câble d'alimentation dans la prise. (**Remarque :** Avant de brancher l'appareil, assurez-vous que la tension indiquée dessus corresponde à la tension locale. Tension AC 120V 60Hz (AC 220-240V 50/60Hz) 200W.
Avant d'utiliser votre appareil pour la première fois, essuyez toutes les surfaces. Nettoyez les parties amovibles avec un chiffon humide. Ne jamais utiliser produits abrasifs.
Nettoyez l'ensemble de l'appareil (voir la section nettoyage).
Lieu le appareil sur un sec, plat, et surface stable.
Appliquez une pression vers le bas sur l'appareil afin que les pieds à ventouses (7) s'accrochent bien.

AVANT LE PREMIÈRE UTILISATION

Utilisez le bouton de réglage pour choisir la largeur de coupe souhaitée. Le coupe largeur est réglable depuis 1 à 15 mm. Faites glisser le support vers la gauche et placez l'aliment sur le support.
Placez le support sur le berceau ; utilisez ce support pour Poussez légèrement les aliments contre la couverture arrière.
Activez l'appareil à l'aide de l'interrupteur marche/arrêt. qui se trouve sur le côté gauche de l'appareil.
REMARQUE : Cet appareil est équipé d'un dispositif de sécurité vous-même, puis appuyez simultanément sur le bouton marche/arrêt. interrupteur et l'appareil démarrer. En appuyant sur le interrupteur (A), amenez d'abord l'interrupteur de sécurité vers Appuyez de nouveau sur l'interrupteur marche/arrêt, l'appareil s'arrêtera.
ATTENTION ! Ne touchez pas la lame, la lame est très tranchant et peut causer des blessures graves.
Lame rotative. Récupérez les aliments coupés à l'arrière de l'appareil.
AVERTISSEMENT ! N’utilisez jamais l’appareil sans le Attention, vous pourriez vous blesser gravement.
Lors de l'arrêt de l'appareil, la lame continue de tourner pendant un certain temps ; ne la touchez donc pas. Après 5 minutes d'utilisation continue, éteignez l'appareil et laissez - le refroidir afin d'éviter la surchauffe du

moteur.

NETTOYAGE ET ENTRETIEN

Débranchez l'appareil et laissez-le refroidir. Essuyez ses surfaces avec un chiffon doux et légèrement humide. Veillez à ce qu'aucun liquide, ni eau ni autre, ne pénètre à l'intérieur.
Avant de retirer les lames, débranchez l'alimentation. prise.
ATTENTION ! Ne jamais toucher le tranchant des lames ! Assurez-vous que la lame retirée ne puisse pas rouler. Hors de question !
Vous pouvez maintenant nettoyer la lame à l'eau savonneuse ; elle passe également au lave-vaisselle.
Pour remettre la lame de coupe en position, assurez-vous que les languettes de la lame correspondent à celles de la lame. Placez l'appareil sur la lame et verrouillez-la en tournant le loquet dans le sens antihoraire.

NETTOYAGE DE LA BIELLE D'ENTRAÎNEMENT ET DU PROTÈGE-LAME

Pour démonter la biellette de direction et le protège-lame : sur le côté droit de la biellette de direction, vous trouverez une trappe. Faites glisser cette trappe vers la droite pour pouvoir retirer… Avec une tige, vous pourrez nettoyer ces pièces.

AVERTISSEMENT!

Les emballages ne sont pas des jouets. Les enfants ne doivent pas jouer avec les emballages. car elles présentent un risque d'ingestion et d'étouffement !

UTILISER

Utilisez le bouton de réglage pour choisir le paramètre souhaité. largeur de coupe.
La largeur de coupe est réglable de 1 à 15 mm. Faites glisser le berceau vers la gauche et placez la nourriture dessus. le berceau.
Placez le support sur le berceau ; utilisez ce support pour Poussez

légèrement les aliments contre la couverture arrière.
Activez l'appareil à l'aide de l'interrupteur marche/arrêt. qui se trouve sur le côté gauche de l'appareil.
REMARQUE : Cet appareil est équipé d'un dispositif de sécurité interrupteur (A), amenez d'abord l'interrupteur de sécurité vers vous-même, puis appuyez simultanément sur le bouton marche/arrêt. Appuyez sur l'interrupteur et l'appareil démarrera. Appuyez de nouveau sur l'interrupteur marche/ arrêt , l'appareil s'arrêtera.
ATTENTION ! Ne touchez pas la lame, la lame est très tranchant et peut causer des blessures graves .
Faites glisser lentement le plateau vers la droite contre le Lame rotative.
Récupérez les aliments coupés à l'arrière. l'appareil.
AVERTISSEMENT ! N'utilisez jamais l'appareil sans le Attention, vous pourriez vous blesser gravement.

VEUILLEZ NOTER QUE :
Cet appareil convient uniquement pour trancher aliments, par exemple viandes , fromages, fruits, légumes, pains, etc. nourriture à être Les tranches doivent être décongelées, déballées et désossé avant de pouvoir être tranché avec le appareil. Ne pas utiliser pour trancher des aliments congelés nourriture, os, ou à toute autre fin.
Cet appareil est uniquement destiné à un usage domestique privé et n'est pas conçu pour un usage commercial.
Cet appareil est conçu pour une utilisation en intérieur uniquement, dans un endroit sec. N'utilisez pas l'appareil
en plein air.

RÔTIS CHAUDS - BŒUF, PORC, AGNEAU, DINDE, JAMBON
Lors de la découpe des rôtis désossés, retirez-les du enfournez et laissez refroidir pendant 15 à 20 minutes avant.
Coupez le rôti, si nécessaire, pour qu'il tienne sur la plateforme. Placez du papier aluminium sous la plateforme pour récupérer le jus et les miettes et faciliter le nettoyage (et vous permettre de savourer les meilleurs morceaux).

Pour les rôtis roulés ou ficelés, retirez les ficelles une à une au fur et à mesure qu'elles se rapprochent de la lame (assurez-vous que l'appareil est éteint).

FROMAGE

Trancher pendant que glacé.

Pour servir, laissez le fromage atteindre la pièce La température permettra de rehausser la saveur naturelle. Certains fromages fondus peuvent coller à la lame.

Si nécessaire, éteignez l'appareil, attendez que la lame s'arrête de tourner, puis débranchez-le. Essuyez la lame avec un chiffon humide : l'humidité empêchera qu'elle ne colle.

BACON DE DOS

Bien refroidir avant de trancher. Pour certains types de bacon fumé, il faut retirer le gras.

CHARCUTERIE ET VIANDE POUR SANDWICHS

Les charcuteries froides seront durera plus longtemps et durera Conserve sa saveur plus longtemps si on la tranche au besoin.

Pour un résultat optimal, réfrigérez d'abord.

Retirez toute pellicule plastique ou coque dure avant de trancher. Exercez une pression constante et légère pour obtenir des tranches uniformes.

FRUITS ET LÉGUMES

Coupez les pommes de terre en tranches pour obtenir des frites épaisses ou fines.

Coupez les carottes en fines lamelles dans le sens de la longueur.

Faites-les tremper dans de l'eau glacée pour les faire friser. Coupez les courgettes en tranches. aubergine, et de la courge.

BACON DE DOS

Froideur bien nettoyer avant de trancher. Certains types de fumés Il faut

retirer le gras du bacon.

Charcuterie et viande à sandwich
Les charcuteries froides seront durera plus longtemps et durera Conserve sa saveur plus longtemps si on la tranche au besoin.
Pour un résultat optimal, réfrigérez d'abord. Retirez toute enveloppe plastique ou dure avant de trancher. Exercez une pression constante et légère pour obtenir des tranches uniformes.

FRUITS ET LÉGUMES
Coupez les pommes de terre en tranches pour obtenir des frites épaisses ou fines.
Coupez les carottes en fines lamelles dans le sens de la longueur.
Faites-les tremper dans de l'eau glacée pour les faire friser.
Tranchez les courgettes, aubergine, et de la courge.

NETTOYAGE ET ENTRETIEN
Débranchez l'appareil et laissez-le refroidir. Utilisez un chiffon doux et légèrement humide pour essuyer l'appareil. surfaces. Ne laissez pas d'eau ou tout autre liquide pénétrer dans l'appareil.

RETIREZ LA LAME DE COUPE
Avant de retirer le lames, débranchez la prise électrique.

ATTENTION ! Ne jamais toucher les bords des lames ! Assurez-vous que la lame de coupe retirée ne puisse pas rouler Hors de la table ! Gardez les enfants à distance de sécurité ! Pour retirer la lame de coupe, appuyez sur le bouton « pousser ». bouton' au milieu de la lame de coupe, un loquet volonté Sortez ; tournez le loquet dans le sens des aiguilles d'une montre pour déverrouiller la lame de coupe.
Vous pouvez maintenant nettoyer la lame à l'eau savonneuse ; elle passe également au lave-vaisselle.
Pour remettre la lame de coupe en position, assurez-vous que les

languettes de la lame correspondent à celles de la lame. Installez l'appareil et placez la lame, verrouillez-la en tournant le loquet dans le sens antihoraire.

NETTOYAGE DE LA BIELLE D'ENTRAÎNEMENT ET DU PROTÈGE-LAME

Pour démonter la biellette de direction et la lame garde: Du côté droit de la biellette de direction, vous trouverez trouver une trappe, Faites glisser cette trappe vers la droite, vous pouvez maintenant retirer la tige et nettoyer ces pièces.

PARTIES	COMMENT NETTOYER EUX ?
support alimentaire	Retirer et nettoyer à l'eau savonneuse. Rincer à l'eau du robinet et sécher soigneusement.
Plateforme coulissante	Essuyer avec un chiffon doux légèrement humidifié avec du liquide vaisselle. liquide vaisselle.
Glissement guide alimentaire	Essuyez avec un chiffon propre et séchez soigneusement. Ne pas immerger dans l'eau ou tout autre liquide !

STOCKAGE ET ÉLIMINATION

STOCKAGE:

Rangez l'appareil dans un endroit frais, sec et propre, hors de portée des enfants et des animaux domestiques.

Veuillez conserver l'emballage pour le transport du pour votre appareil ou pour le ranger lorsqu'il n'est pas utilisé pendant une période prolongée.

ÉLIMINATION DES PRODUITS :

Ce produit ne doit pas être jeté avec les ordures ménagères ordinaires, car il contient des composants électriques et électroniques. Les déchets doivent être éliminés séparément.

GuangZhou Superior Electric Industrial Co., Ltd.
Adresse : n° 28, route Huashan, ville de Shilou, District de Panyu, GUANGZHOU, -511447 Chine
Courriel : support@vevor.com





VEVOR

Upgrade · The Home Creator Way


Gemüseschneidemaschine

Modell: SL- 520 SL520 SL-520A SL520A

VEVOR
Upgrade · The Home Creator Way

FOOD SLICER

Modell: SL -520 SL520 SL-520A SL520A

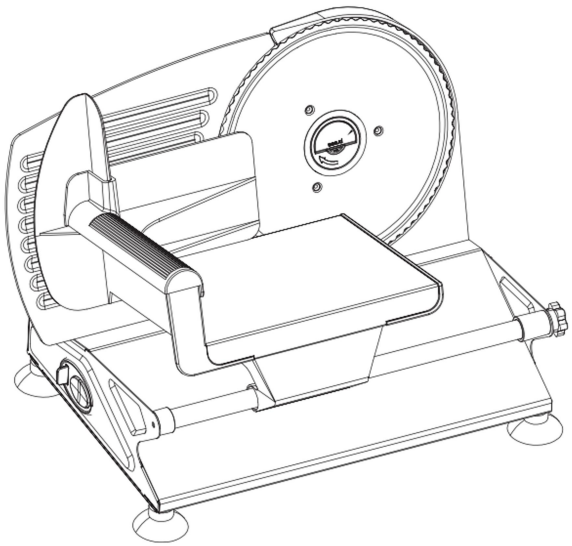

Dies ist die Originalanleitung. Bitte lesen Sie die gesamte Bedienungsanleitung vor der Inbetriebnahme sorgfältig durch. VEVOR behält sich die Auslegung der Bedienungsanleitung vor. Das Aussehen des Produkts kann von dem gelieferten Produkt abweichen. Wir bitten um Verständnis, dass wir Sie nicht erneut über etwaige Technologie- oder Software-Updates informieren werden .

WICHTIGE SICHERHEITSVORKEHRUNGEN

	Warnung – Um das Verletzungsrisiko zu verringern, muss der Benutzer die Bedienungsanleitung sorgfältig lesen.

	Halten Sie Kinder aus Gefahrengründen von der Maschine fern.
	Warnung – Nur für den Gebrauch in Innenräumen
	KORREKTE ENTSORGUNG Dieses Produkt unterliegt den Bestimmungen der europäischen Richtlinie 2012/19/EU. Das Symbol einer durchgestrichenen Mülltonne bedeutet, dass das Produkt in der Europäischen Union separat entsorgt werden muss. Dies gilt für das Produkt und alle mit diesem Symbol gekennzeichneten Zubehörteile. Produkte dieser Art dürfen nicht im normalen Hausmüll entsorgt werden, sondern müssen zu einer Sammelstelle für das Recycling von Elektro- und Elektronikgeräten gebracht werden.

WICHTIGE SICHERHEITSVORKEHRUNGEN

Bei der Verwendung elektrischer Geräte sollten grundlegende Sicherheitsvorkehrungen getroffen werden. stets zu befolgen, einschließlich der folgenden Punkte:

LESEN UND AUFBEWAHREN ANWEISUNGEN

• Lesen Sie vor Gebrauch alle Anweisungen.
• Um sich vor Stromschlägen zu schützen, stellen Sie das Netzteil nicht auf die gleiche Weise auf. in Wasser oder einer anderen Flüssigkeit.
• Bei der Benutzung von Geräten durch Erwachsene ist eine enge Überwachung erforderlich. In der Nähe von Kindern. Kinder sollten dieses Gerät nicht benutzen.
• Den Ein-/Ausschalter in die Position „AUS“ stellen und den Netzstecker abziehen Vor dem An- und Ausziehen aus der Steckdose ziehen, wenn der

Gebrauch nicht erfolgt. Teile entfernen und vor der Reinigung nicht am Netzkabel ziehen.
• Vermeiden Sie den Kontakt mit beweglichen Teilen. Füttern Sie niemals mit der Hand. Verwenden Sie die komplett montierte Schneidemaschine mit Lebensmittelschale und Lebensmittelstopfer.
• Betreiben Sie kein Gerät mit beschädigtem Kabel oder Stecker, nachdem das Gerät Fehlfunktionen aufweist oder heruntergefallen oder beschädigt wurde. Jegliche Art und Weise. Dieses Produkt darf nur wie in dieser Anleitung beschrieben repariert werden. Handbuch.
• Die Verwendung von Anbauteilen, die nicht von uns empfohlen oder verkauft werden Der Hersteller kann zu Verletzungen führen.
• Nicht im Freien verwenden.
• Achten Sie darauf, dass das Kabel nicht über die Tisch- oder Arbeitsplattenkante hängt oder diese berührt. Heiße Oberflächen, einschließlich des Herdes. Verwenden Sie kein Verlängerungskabel.
• Verwenden Sie das Gerät nur für den vorgesehenen Zweck. Die Klinge ist scharf. Gehen Sie beim Reinigen vorsichtig damit um.
• Der Sicherheitsschalter verhindert ein versehentliches Einschalten des Geräts. Der Sicherheitsschalter darf nicht außer Kraft gesetzt oder überbrückt werden.
• Das Gerät sollte nicht zum Schneiden von gefrorenen Lebensmitteln oder Knochen verwendet werden.
• Das Gerät darf nur betrieben werden, wenn die Klinge ordnungsgemäß verriegelt ist und/oder festgezogen.
• Schneiden Sie Lebensmittel immer nur mit vollständig montiertem Schneidegerät .

DIESES GERÄT IST NUR FÜR DEN HAUSHALTSGEBRAUCH BESTIMMT.

Dieses Produkt ist nicht für den gewerblichen Gebrauch bestimmt. Es enthält keine vom Benutzer wartbaren Teile. Versuchen Sie nicht, dieses Produkt selbst zu reparieren.

POLARISIERTER STECKER

Dieses Gerät hat einen polarisierten Stecker (einpolig). ist breiter als die andere). Als Sicherheitsmerkmal Um das Risiko eines Stromschlags zu verringern, ist dieser Stecker Der Stecker passt nur in einer Richtung in eine polarisierte Steckdose. Falls der Stecker nicht vollständig in die Steckdose passt, drehen Sie ihn um. Passt der Stecker immer noch nicht, wenden Sie sich an einen qualifizierten Fachmann. Elektriker. Versuchen Sie nicht, diese Sicherheitsvorrichtung zu umgehen. Den Stecker in keiner Weise verändern oder anpassen. Wenn der Stecker locker sitzt in Wenn sich die Steckdose warm anfühlt, benutzen Sie diese Steckdose nicht.

BEWAHREN SIE DIESE ANWEISUNGEN AUF

DAS KABEL NICHT IN WASSER EINTAUCHEN ODER JEDE ANDERE FLÜSSIGKEIT!

SICHERHEIT ANWEISUNGEN

• Werden die Sicherheitshinweise nicht beachtet, kann der Hersteller für entstandene Schäden nicht haftbar gemacht werden.
• Wenn das Netzkabel beschädigt ist, muss es ... ersetzt vom Hersteller dessen Serviceagenten oder gleich qualifizierte Personen, um eine Gefahr.
• Verwenden Sie dieses Gerät nicht mit einem beschädigten Kabel oder Stecker oder wenn das Gerät Fehlfunktionen aufweist oder auf sonstige Weise beschädigt ist. Um Schäden zu vermeiden, Um Gefahren zu vermeiden , stellen Sie sicher, dass ein beschädigtes Kabel oder ein beschädigter Stecker von einem kompetenten und qualifizierten Reparaturfachmann ausgetauscht wird. Reparieren Sie dieses Gerät nicht selbst.
• Das Gerät niemals am Kabel ziehen, um es zu bewegen. und achten Sie darauf, dass sich das Kabel nicht verheddert.
• Das Gerät muss auf einer stabilen, ebenen Fläche aufgestellt werden.
• Dieses Gerät darf nur für Haushaltszwecke und ausschließlich für den vorgesehenen Zweck verwendet werden.

• Das Gerät kann von Kindern ab 8 Jahren und von Personen mit eingeschränkter Sehfähigkeit verwendet werden. körperliche, sensorische oder geistige Fähigkeiten oder deren Fehlen Erfahrung und Wissen, falls sie unter Aufsicht und Anweisungen wurden erteilt in Bezug auf die sichere Verwendung des Geräts und Kinder müssen die damit verbundenen Gefahren verstehen.
Kinder dürfen nicht mit dem Gerät spielen. Reinigung und Wartung dürfen nicht von Kindern durchgeführt werden. es sei denn, sie sind älter als 8 Jahre und beaufsichtigt.
• Um sich vor einem Stromschlag zu schützen, tauchen Sie das Kabel, den Stecker oder das Gerät nicht in Wasser oder andere Flüssigkeiten.
• Schalten Sie das Gerät aus und ziehen Sie den Netzstecker, bevor Sie Zubehörteile wechseln oder bewegliche Teile handhaben.
• Ziehen Sie immer den Netzstecker, wenn Sie das Gerät unbeaufsichtigt lassen. vor Montage, Demontage, oder Reinigung.
• Erlauben Sie Kindern nicht, das Gerät ohne Erlaubnis zu benutzen Aufsicht.
• Dieses Gerät muss mit dem verschiebbaren Zuführtisch und dem Stückhalter in Position verwendet werden, es sei denn, dies ist aufgrund der Größe oder Form der Lebensmittel nicht möglich.
• Um Unfälle wie Stolpern oder Stürze zu vermeiden, platzieren Sie das Kabel an einer sicheren Stelle.
• Wird ein Verlängerungskabel verwendet, muss dessen Kapazität dem Stromverbrauch des Geräts entsprechen.
• Bedienen Sie das Gerät nicht mit nassen Händen oder auf nassem Boden. Berühren Sie nicht die Netzstecker mit nassen Händen.
• Das Gerätegehäuse darf unter keinen Umständen geöffnet werden . Führen Sie keine Fremdkörper in das Innere des Gehäuses ein.
• Verwenden Sie niemals Zubehör, das nicht vom Hersteller empfohlen wird. Es könnte ein Sicherheitsrisiko darstellen. Es besteht ein Risiko für den Benutzer und es könnte das Gerät beschädigen. Verwenden Sie ausschließlich Originalteile und -zubehör.
• Halten Sie das Gerät von heißen Oberflächen fern und offene Flammen.

Betreiben Sie das Gerät stets auf einer ebenen, stabilen, sauberen und trockenen Fläche. Oberfläche. Schützen Sie das Gerät vor Hitze. Staub, direktes Sonnenlicht, Feuchtigkeit, Tropfen und spritzendes Wasser.
• Stellen Sie keine schweren Gegenstände darauf. Gerät. Nicht platzieren Objekte mit offene Flammen, Kerzen, oben auf oder neben dem Gerät. Stellen Sie keine mit Wasser gefüllten Gegenstände hinein. Egvasen, auf oder in der Nähe des Geräts.
• Ziehen Sie nicht am Netzkabel, um den Stecker aus der Steckdose zu ziehen, und wickeln Sie das Netzkabel nicht um das Gerät.
• Ziehen Sie den Netzstecker des Geräts aus der Steckdose. wenn es nicht in Gebrauch ist und vor der Reinigung.
• Schalten Sie das Gerät vor dem Umschalten aus. Zubehör oder Handhabung Teile, die sich während verwenden.
• Sollte das Gerät überhitzen, Beenden Sie die Benutzung des Geräts und ziehen Sie den Stecker aus der Steckdose.
• Verlasse niemals das Gerät während des Gebrauchs unbeaufsichtigt lassen.
• Trocknen Sie das Gerät und alles andere ab. Zubehör vor dem Anschließen an die Stromversorgung und vor dem Anbringen des Zubehörs.
• Schalten Sie das Gerät immer aus, bevor Sie den Netzstecker ziehen .
• Reinigen Sie das Gerät vor der Benutzung gründlich.
• Halten Sie während der Operation Hände und Haare sauber Kleidung und Utensilien sollten von der Schneideklinge ferngehalten werden, um Verletzungen zu vermeiden . Verletzungen und Schäden am Gerät.
• Das Gerät ist nur für den kurzfristigen Gebrauch bestimmt. Betrieb. Nach einer Operationszeit von 5 Minuten lassen Sie Mindestens 30 Minuten abkühlen lassen . Überlasten Sie den


SPEZIFIKATION


Modell	SL -520 SL520 SL-520A SL520A
Nennleistung	200 W

Nenneingang	AC120V 60 Hz Wechselstrom 220 – 240 V, 50/60 Hz

TEILE BESCHREIBUNG

1	Stützplatte
2	Klinge
3	Klingenverriegelungsschraube
4	Netzkabel
5	Grundbaugruppe
6	Lebensmitteltransport
7	Schneidschutz
8	Doppelfunktions-Ein/Aus-Schalter
9	Dickenverstellknopf
10	Motorbaugruppe

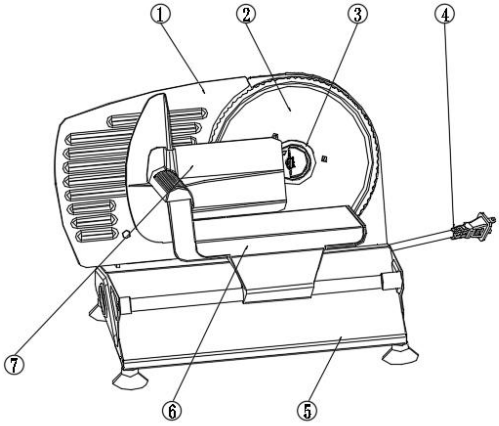

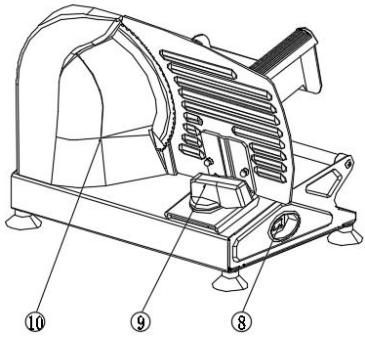

Nehmen Sie das Gerät und das Zubehör aus dem Karton. Entfernen Sie die Aufkleber, die Schutzfolie oder die Plastikverpackung. Die Gerät. Prüfen Sie, ob alle Teile vorhanden sind und ob Transportschäden. Im Falle von Schäden oder unvollständiger Lieferung wenden Sie sich bitte an Ihren Händler.
Stecken Sie das Netzkabel in die Steckdose. (**Hinweis:)** Vergewissern Sie sich vor dem Anschließen des Geräts, dass die auf dem Gerät angegebene Spannung mit der örtlichen Spannung übereinstimmt.
Spannung AC 120V 60Hz (AC 220-240V 50/60Hz) 200W.
Wischen Sie vor der ersten Benutzung Ihres Geräts alle Oberflächen ab. Abnehmbare Teile mit einem feuchten Tuch abwischen. Niemals verwenden Schleifmittel.
Reinigen Sie das gesamte Gerät (siehe Abschnitt Reinigung).
Ort Die Gerät An A trocken, Wohnung, Und stabile Oberfläche.
Üben Sie Druck nach unten auf das Gerät aus, damit die Saugfüße (7) guten Halt finden.

VOR DER ERSTE VERWENDUNG

Mit der Einstelltaste kann die gewünschte Schnittbreite ausgewählt werden.
Der Schneiden Breite Ist einstellbar aus 1 Zu 15 mm. Schieben Sie die Halterung nach links und legen Sie das Futter in die Halterung.
Setzen Sie den Halter auf die Wiege; verwenden Sie diesen Halter, um Drücken Sie das Essen leicht gegen die Rückseite des Deckels.
Aktivieren Sie das Gerät mithilfe des Ein-/Ausschalters. die sich auf der linken Seite des Geräts befindet.
HINWEIS: Dieses Gerät ist mit einer Sicherheitsvorrichtung ausgestattet. Drücken Sie dann gleichzeitig den Ein-/Ausschalter.
Schalten Sie um und das Gerät wird Start. Durch Drücken der Schalter (A), bringen Sie zuerst den Sicherheitsschalter in Richtung Schalten Sie das Gerät erneut ein und aus, dann schaltet es sich ab.
WARNUNG! Berühren Sie die Klinge nicht , die Klinge ist sehr scharf und kann schwere Verletzungen verursachen.

rotierende Klinge. Fangen Sie die geschnittenen Lebensmittel auf der Rückseite des Geräts auf.
WARNUNG! Benutzen Sie das Gerät niemals ohne die Pass auf, du kannst dich ernsthaft verletzen.
Beim Ausschalten des Geräts dreht sich die Klinge noch eine Weile nach, berühren Sie sie daher nicht. Schalten Sie das Gerät nach 5 Minuten ununterbrochenem Gebrauch aus und lassen Sie es abkühlen, um eine Überhitzung des Motors zu vermeiden.

REINIGUNG UND WARTUNG

Ziehen Sie den Netzstecker und lassen Sie das Gerät abkühlen. Wischen Sie die Oberflächen mit einem weichen, leicht feuchten Tuch ab. Achten Sie darauf, dass kein Wasser oder andere Flüssigkeiten in das Gerät gelangen.
Vor dem Entfernen der Klingen die Stromzufuhr unterbrechen. Stecker.
WARNUNG! Berühren Sie niemals die Klingenkanten! Stellen Sie sicher, dass das entfernte Schneidmesser nicht wegrollen kann. Vom Tisch!
Sie können die Klinge nun in Seifenwasser reinigen; die Klinge ist außerdem spülmaschinenfest.
Um die Schneidklinge wieder in Position zu bringen, achten Sie darauf, dass die Nasen an der Klinge mit den entsprechenden Stellen übereinstimmen. Setzen Sie das Gerät auf die Klinge und verriegeln Sie die Klinge durch Drehen des Riegels gegen den Uhrzeigersinn.

Reinigung der Spurstange und des Bremssattelschutzes

Zum Demontieren der Spurstange und des Blattschutzes: Rechts an der Spurstange befindet sich eine Klappe. Schieben Sie diese Klappe nach rechts, nun können Sie die Spurstange und den Blattschutz entnehmen. Mit der Stange können Sie diese Teile reinigen.

WARNUNG!

Verpackungsmaterialien sind kein Spielzeug. Kinder sollten nicht mit den Verpackungsmaterialien spielen. da sie die Gefahr des Verschluckens

und Erstickens darstellen!

VERWENDEN

Verwenden Sie die Einstellungsschaltfläche, um die gewünschte Option auszuwählen. Schnittbreite.

Die Schnittbreite ist von 1 bis 15 mm einstellbar. Schieben Sie die Wiege nach links und legen Sie das Essen darauf. die Wiege.

Setzen Sie den Halter auf die Wiege; verwenden Sie diesen Halter, um Drücken Sie das Essen leicht gegen die Rückseite des Deckels.

Aktivieren Sie das Gerät mithilfe des Ein-/Ausschalters. die sich auf der linken Seite des Geräts befindet.

HINWEIS: Dieses Gerät ist mit einer Sicherheitsvorrichtung ausgestattet. Schalter (A), bringen Sie zuerst den Sicherheitsschalter in Richtung Drücken Sie dann gleichzeitig den Ein-/Ausschalter. Schalten Sie den Schalter ein, und das Gerät startet. Durch Drücken des Schalters Schalten Sie das Gerät erneut ein/ aus, dann schaltet es sich ab.

WARNUNG! Berühren Sie die Klinge nicht , die Klinge ist sehr scharf und kann schwere Verletzungen verursachen .

Schieben Sie das Tablett langsam nach rechts gegen die rotierende Klinge. Fangen Sie das geschnittene Lebensmittel auf der Rückseite auf. das Gerät.

WARNUNG! Benutzen Sie das Gerät niemals ohne die Pass auf, du kannst dich ernsthaft verletzen.

BITTE BEACHTEN SIE:

Dieses Gerät eignet sich nur zum Schneiden. Lebensmittel, z. B. Fleisch , Käse, Früchte, Gemüse, Brot usw. Essen zum Geschnittenes Gemüse muss aufgetaut, ausgepackt und entbeint, bevor es mit dem Gerät. Nicht zum Schneiden von gefrorenen Lebensmitteln verwenden. Nahrung, Knochen, oder für jeden anderen Zweck.

Dieses Gerät ist nur für den privaten Gebrauch geeignet und nicht für gewerbliche Zwecke bestimmt.

Dieses Gerät ist nur für den Gebrauch in trockenen Innenräumen bestimmt.

Das Gerät nicht benutzen
draußen.

SCHARFES RINDERBRATEN SCHWEINEFLEISCH, LAMM, TRUTHAHN, SCHINKEN

Beim Aufschneiden von Braten ohne Knochen, nehmen Sie ihn aus dem Ofen. Im Ofen 15-20 Minuten abkühlen lassen, bevor
Schneiden Sie den Braten gegebenenfalls so zu, dass er auf die Plattform passt. Legen Sie Alufolie unter die Plattform, um austretenden Saft und Krümel aufzufangen und so die Reinigung zu erleichtern (und sich die besten Stücke zu gönnen).
Bei gerolltem oder gebundenem Braten die Fäden einzeln entfernen, sobald sie sich der Klinge nähern (achten Sie darauf, dass das Gerät ausgeschaltet ist).

KÄSE

Schneiden Sie, solange es noch gut ist gekühlt.
Beim Servieren darauf achten, dass der Käse genügend Platz erreicht. Die Temperatur wird erhöht. Dadurch wird der natürliche Geschmack verstärkt. Manche Schmelzkäsesorten können am Messer haften bleiben.
Schalten Sie das Gerät bei Bedarf aus, warten Sie, bis die Klinge zum Stillstand gekommen ist, und ziehen Sie den Stecker. Wischen Sie die Klinge mit einem feuchten Tuch ab , da Feuchtigkeit ein Festkleben verhindert.

Rückenspeck

Vor dem Anschneiden gut durchkühlen lassen. Bei einigen Sorten geräuchertem Speck sollte das Fett entfernt werden.

Aufschnitt und Sandwichfleisch

Aufschnitt wird länger halten und wird Der Geschmack bleibt länger erhalten, wenn man das Gemüse erst bei Bedarf in Scheiben schneidet. Für beste Ergebnisse vorher kühlen.

Entfernen Sie vor dem Schneiden jegliche Plastik- oder Hartschalenreste. Üben Sie einen gleichmäßigen, leichten Druck aus, um gleichmäßige Scheiben zu erhalten.

OBST UND GEMÜSE

Kartoffeln in dicke oder dünne Pommes schneiden.
Karotten längs in sehr dünne Streifen schneiden. In Eiswasser einweichen, damit sie sich einrollen. Zucchini in Scheiben schneiden. Aubergine, und Kürbis.

Rückenspeck

Kühlen Vor dem Schneiden gründlich waschen. Einige Arten von geräuchertem Vom Speck sollte das Fett entfernt werden.

Aufschnitt und Sandwichfleisch

Aufschnitt wird länger halten und wird Der Geschmack bleibt länger erhalten, wenn man das Gemüse erst bei Bedarf in Scheiben schneidet. Für beste Ergebnisse vorher kühlen. Entfernen Sie vor dem Schneiden jegliche Plastik- oder Hartschalenreste. Üben Sie einen gleichmäßigen, leichten Druck aus, um gleichmäßige Scheiben zu erhalten.

OBST UND GEMÜSE

Kartoffeln in dicke oder dünne Pommes schneiden.
Karotten längs in sehr dünne Streifen schneiden. In Eiswasser einweichen, damit sie sich einrollen.
Zucchini in Scheiben schneiden, Aubergine, und Kürbis.

REINIGUNG UND WARTUNG

Ziehen Sie den Netzstecker und lassen Sie das Gerät abkühlen. Verwenden Sie ein weiches, leicht feuchtes Tuch, um das Gerät abzuwischen. Oberflächen. Achten Sie darauf, dass kein Wasser oder andere Flüssigkeiten in das Gerät gelangen.

SCHNEIDKLINGE ENTFERNEN
Bevor Sie die Klingen, Netzstecker ziehen.

WARNUNG! Berühren Sie niemals die Kanten der Klingen! Stellen Sie sicher, dass das entfernte Schneidmesser nicht wegrollen kann. Vom Tisch! Kinder auf sichere Distanz halten! Zum Entfernen der Schneidklinge drücken Sie den „Drücken“-Knopf. Taste' in der Mitte der Schneidklinge, ein Riegel Wille Herausnehmen; den Riegel im Uhrzeigersinn drehen, um ihn zu entriegeln. die Schneidklinge.
Sie können die Klinge nun in Seifenwasser reinigen; die Klinge ist außerdem spülmaschinenfest.
Um die Schneidklinge wieder in Position zu bringen, achten Sie darauf, dass die Nasen an der Klinge mit den entsprechenden Stellen übereinstimmen. Gerät und setzen Sie die Klinge auf, verriegeln Sie die Klinge durch Drehen des Riegels gegen den Uhrzeigersinn

Reinigung der Spurstange und des Bremssattelschutzes

Zum Zerlegen der Spurstange und des Blattes bewachen: Auf der rechten Seite der Spurstange werden Sie Finde eine Luke, Schieben Sie diese Klappe jetzt nach rechts, dann können Sie die Stange herausnehmen und diese Teile reinigen.

TEILE	REINIGUNGSHINWEISE IHNEN ?
Lebensmittelhalter	Entfernen und mit Seifenwasser reinigen. Unter fließendem Wasser abspülen und gründlich trocknen.
Schiebeplattform	Mit einem weichen, mit etwas Spülmittel angefeuchteten Tuch abwischen. Waschmittel.
Gleiten Ernährungsleitfaden	Mit einem sauberen Tuch abwischen und gründlich trocknen. Nicht in Wasser oder andere Flüssigkeiten eintauchen!

LAGERUNG UND ENTSORGUNG

LAGERUNG:

Bewahren Sie das Gerät an einem kühlen, trockenen und sauberen Ort außerhalb der Reichweite von Kindern und Haustieren auf.
Bitte bewahren Sie die Verpackung für den Transport auf. zum Aufbewahren Ihres Geräts oder zur Aufbewahrung Ihres Geräts, wenn Sie es längere Zeit nicht benutzen.

PRODUKTENTSORGUNG:

Dieses Produkt darf nicht im normalen Hausmüll entsorgt werden, da es elektrische und elektronische Bauteile enthält. Abfälle müssen getrennt entsorgt werden.

GuangZhou Superior Electric Industrial Co., Ltd.
Adresse: Nr. 28, Huashan Road, Shilou Town, Bezirk Panyu, GUANGZHOU, -511447 China
E-Mail: support@vevor.com





VEVOR

Upgrade · The Home Creator Way


FOOD SLICER

Model:SL-520 SL520 SL-520A SL520A

VEVOR
Upgrade·The Home Creator Way

FOOD SLICER

Model:SL-520 SL520 SL-520A SL520A

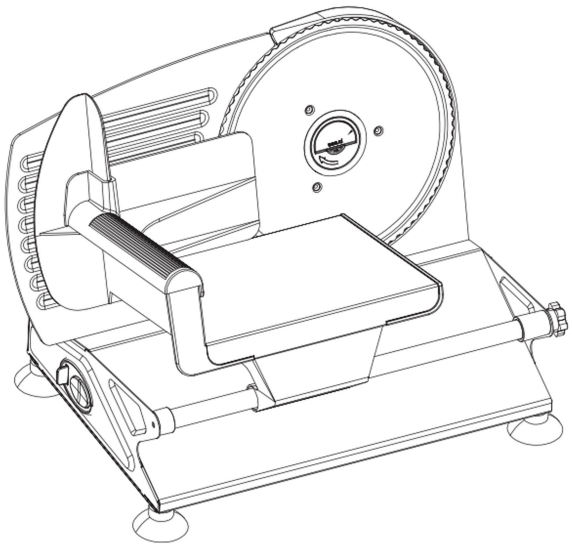

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

IMPORTANT SAFEGUARDS

	Warning-To reduce the risk of injury, user must read instructions manual carefully.

	Keep children away from the machine for fear of danger.
	Warning- For Indoor Use Only
	CORRECT DISPOSAL This product is subject to the provision of European Directive 2012/19/EU. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to collection point for recycling electrical and electronic devices.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed,including the following:

READ AND SAVE THESE INSTRUCTIONS

• Read all instructions before using.

• To protect against risk of electrical shock do not put power unit in water or other liquid.

• Close supervision is necessary when any appliance is used by or near children. Children should not use this appliance.

• Place On/Off switch in “OFF" position and remove cord plug from electrical outlet when not in use, before putting on or taking off parts and before cleaning. Do not pull power cord.

• Avoid contacting moving parts. Never feed food by hand. Always use

completely assembled slicer with food tray and food pusher.
• Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions or has been dropped or damaged in any manner. Do not service this product other than noted in this manual.
• The use of attachments not recommended or sold by manufacturer may result in injury.
• Do not use outdoors.
• Do not let cord hang over edge of table or countertop, or touch hot surfaces including the stove. Do not use an extension cord.
• Do not use appliance for other than intended use.Blade is sharp. Handle carefully when cleaning.
• The safety switch prevents accidental operation of the appliance.Do not defeat or bypass the safety switch.
• Appliance should not be used to cut frozen food or bones.
• Operate appliance only if the blade is properly locked and/or tightened.
• Always cut food with the slicer fully assembled.

THIS UNIT IS FOR, HOUSEHOLD USE ONLY

This product is not intended for commercial use. No user-serviceable parts inside. Do not attempt to service this product.

POLARIZED PLUG

This appliance has a polarized plug,(one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way.If the plug does not fit fully in the outlet, reverse the plug.If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature or modify the plug in any way. If the plug fits loosely into the AC outlet or if the AC outlet feels warm do not use that outlet.

SAVE THESE INSTRUCTIONS

DO NOT IMMERSE THE CORD IN WATER OR ANY OTHER LIQUID!

SAFETY INSTRUCTIONS

• If you ignore the safety instructions the manufacturer cannot be held responsible for damage.
• If the supply cord is damaged,it must be replaced by the manufacturer its service agent,or similarly qualified persons in order to avoid a hazard.
• Do not use this appliance with a damaged cord or plug or when the appliance has malfunctions or has been damaged in any manner.To avoid a hazard, make sure that a damaged cord or plug is replaced by a competent and qualified repair service.Do not repair this appliance yourself.
• Never move the appliance by pulling the cord and make sure the cord cannot become entangled.
• The appliance must be placed on a stable,level surface.
• This appliance is only to be used for household purposes and only for its intended purpose.
• The appliance can be used by children aged from8 years and above and persons with reduced physical,sensory or mental capabilities or lack of experience and knowledge if they are under supervision and have been given instruction concerning use of the appliance in a safe way and understand the hazards involved.Children must
not play with the appliance.Cleaning and user maintenance must not be carried out by children unless they are older than 8 years old and supervised.
• To protect yourself against an electric shock,do not immerse the cord,plug or appliance in water or any other liquid.
• Switch off the appliance and unplug from the power supply before changing accessories or handling parts that move in use.
• Always unplug the device if it is left unattended and before assembling, disassembling, or cleaning.
• Do not allow children to use the device without supervision.
• This appliance must be used with the sliding feed table and the piece holder in position unless this is not possible due to the size or shape of

food.
• Avoid accidents such as trips or falls by placing the cord in a safe position.
• If an extension cord is used,its capacity needs to be suitable for the appliance's power consumption.
• Do not operate the appliance with wet hands or while standing on a wet floor.Do not touch the power plug with wet hands.
• Do not open the appliance housing under any circumstances.Do not insert any foreign objects into the interior of the housing.
• Never use accessories that are not recommended by the manufacturer.They could pose a safety risk to the user and might damage the appliance. Only use original parts and accessories.
• Keep the appliance away from any hot surfaces and open flames. Always operate the appliance on a level,stable,clean,and dry surface. Protect the appliance against heat, dust, direct sunlight, moisture, drips, and splashing water.
• Do not place heavy objects on top of the appliance. Do not place objects with open flames, e.g.candles, on top of or beside the appliance. Do not place objects filled with water, e.g.vases, on or near the appliance.
• Do not pull the power cord to remove the plug from the electrical outlet and do not wrap the power cord around the appliance.
• Unplug the appliance from the electrical outlet when not in use and before cleaning.
• Switch off the appliance before changing accessories or handling parts that move during use.
• If the appliance should overheat, stop using the appliance and unplug from its electrical outlet.
• Never leave the appliance unattended during use.
• Dry the appliance and all accessories before connecting to the power supply and prior to attaching the accessories.
• Always turn the appliance off before disconnecting the power plug.
• Clean the appliance thoroughly prior to using it.
• During operation keep hands,hair clothing,and utensils away from the


cutting blade to avoid injuries and damage to the appliance.
• The appliance is only intended for short term operation. After an operation time of 5 minutes let it cool for at least 30 minutes. Do not overload the

SPECIFICATION

Model	SL-520 SL520 SL-520A SL520A
Rated Power	200W
Rated Input	AC120V 60Hz AC 220-240V 50/60Hz

PARTS DESCRIPTION

1	Support Plate
2	Blade
3	Blade Locking Screw
4	Power Cord
5	Base Assembly
6	Food Carriage
7	Slicing Guard
8	Dual-action On/Off switch
9	Thickness Adjustment Knob
10	Motor Assembly

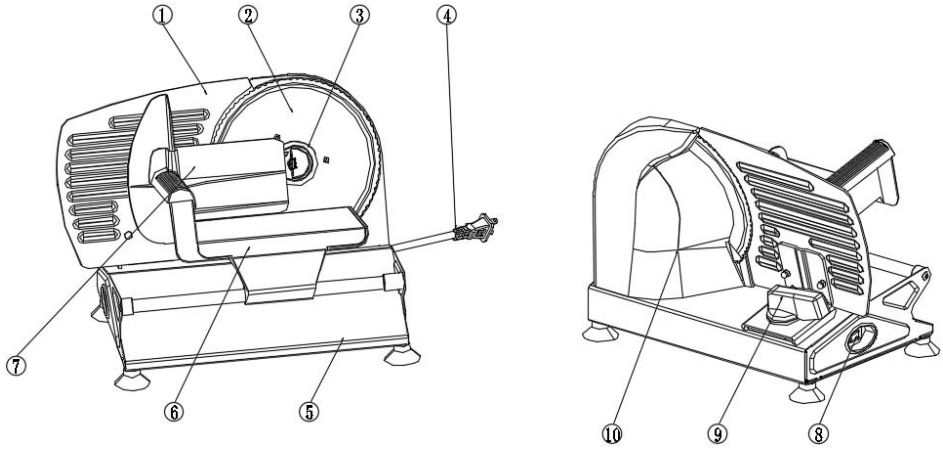

Take the appliance and accessories out of the box.Remove the stickers,protective foil or plastic from the device.

Check for the presence of all parts and for transport damage.In case of damages or incomplete delivery,please contact your dealer.

Put the power cable into the socket.(**Note:** Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage AC 120V 60Hz(AC 220-240V 50/60Hz) 200W.

Before using your appliance for the first time,wipe all removable parts with a damp cloth.Never use abrasive products.

Clean the whole appliance (see the cleaning section).

Place the appliance on a dry, flat, and stable surface.

Apply downward pressure onto the appliance so that the suction feet(7)get a good grip.

BEFORE THE FIRST USE

Use the setting button to choose the desired cutting width.

The cutting width is adjustable from 1 to 15mm. Slide the cradle to the left and place the food on the cradle.

Place the holder on the cradle;use this holder to push the food slightly against the back cover.

Activate the device by using the on/off switch which is located on the left side of the device.

NOTE: This appliance is equipped with a safety yourself then push simultaneously the on/off
switch and the appliance will start.By pushing the switch (A),first bring the safety switch towards on/off switch again the appliance will stop.
WARNING!Do not touch the blade,the blade is very sharp and can cause severe injury.
rotating blade. Catch the sliced food at the back of the device.
WARNING! Never use the device without the guard,you can seriously injure yourself.
When turning off the device the blade keeps turning for a while,so do not touch it.After 5 minutes of continued use,turn off the device and allow it to cool down,to prevent overheating of the motor.

CLEANING AND MAINTENANCE

Unplug the appliance and allow it to cool down. Use a soft,slightly damp cloth to wipe appliance surfaces.Do not allow water or any other liquid to get into the unit.
Before removing the blades,disconnect the power plug.
WARNING! Never touch the edges of the blades!Make sure the removed cutting knife cannot roll off the table!
Now you can clean the blade in soapy water,the blade is also dishwasher safe.
To put the cutting blade back into position,make sure the tabs on the blade match up to the appliance and put on the blade,lock the blade by turning the latch counterclockwise.

CLEANING THE TIE ROD AND BLADE GUARD

To disassemble the tie rod and blade guard:At the right side of the tie rod,you will find a hatch,slide this hatch to the right now you can take out the rod and you will be able to clean these parts.

WARNING!

Packaging materials are not toys. Children should not play with the

packaging materials as they pose a risk of swallowing and suffocation!

USE

Use the setting button to choose the desired cutting width.
The cutting width is adjustable from 1 to 15 mm. Slide the cradle to the left and place the food on the cradle.
Place the holder on the cradle;use this holder to push the food slightly against the back cover.
Activate the device by using the on/off switch which is located on the left side of the device.
NOTE: This appliance is equipped with a safety switch (A),first bring the safety switch towards yourself then push simultaneously the on/off switch and the appliance will start.By pushing the on/off switch again the appliance will stop.
WARNING!Do not touch the blade,the blade is very sharp and can cause severe injury.
Slide the tray slowly to the right against the rotating blade.Catch the sliced food at the back of the device.
WARNING! Never use the device without the guard,you can seriously injure yourself.

PLEASE NOTE THAT:

This appliance is only suitable for slicing food e.g. meats, cheeses,fruits, vegetables,breads,etc.The food to be sliced must be defrosted,unpackaged and deboned before it can be sliced with the appliance. Do not use it for slicing frozen food,bones, or for any other purpose.
This appliance is only suitable for private household use and it is not designed for commercial purposes.
This appliance is intended for dry indoor use only. Do not use the appliance outdoors.

HOT ROASTS — BEEF, PORK, LAMB, TURKEY, HAM

When slicing boneless roasts,remove from the oven and allow to cool for 15-20 minutes before
Cut the roast,if necessary,to fit onto the platform. Place foil underneath the platform table to catch juices and crumbs for easy cleanup(and treating yourself with the best pieces).
For rolled or tied roast,remove strings one at a time as the strings become closer to the blade (make sure the appliance is off).

CHEESE

Slice while well chilled.
serving,allow the cheese to reach room temperature.This will enhance the natural flavour. Some processed cheese may stick to the blade.
When necessary,turn the appliance off,wait for the blade to stop turning,and remove the plug. Wipe the blade with a damp cloth since moisture will help prevent the blade from sticking.

BACK BACON

Chill thoroughly before slicing. Some types of smoked bacon should have the fat removed.

COLD CUTS AND SANDWICH MEAT

Cold cuts of meat will last longer and will retain flavour longer if sliced when needed.
For best results,chill first.
Remove any plastic or hard casing before slicing. Use a constant,gentle pressure for uniform slices.

FRUITS AND VEGETABLES

Slice potatoes for thick or thin chips.
Slice carrots lengthwise in very thin strips. Soak in ice water to curl.Slice zucchini, eggplant, and squash.

BACK BACON

Chill thoroughly before slicing. Some types of smoked bacon should have the fat removed.

Cold Cuts and Sandwich Meat

Cold cuts of meat will last longer and will retain flavour longer if sliced when needed.

For best results,chill first. Remove any plastic or hard casing before slicing. Use a constant,gentle pressure for uniform slices.

FRUITS AND VEGETABLES

Slice potatoes for thick or thin chips.

Slice carrots lengthwise in very thin strips.Soak in ice water to curl.

Slice zucchini, eggplant, and squash.

CLEANING AND MAINTENANCE

Unplug the appliance and allow it to cool down. Use a soft,slightly damp cloth to wipe appliance surfaces.Do not allow water or any other liquid to get into the unit.

REMOVE THE CUTTING BLADE

Before removing the blades,disconnect the power plug.

WARNING! Never touch the edges of the blades! Make sure the removed cutting knife cannot roll off the table!Keep children at a safe distance! To remove the cutting blade.Push the ‘push button' in the middle of the cutting blade, a latch will come out;turn the latch clockwise to unlock the cutting blade.

Now you can clean the blade in soapy water,the blade is also dishwasher safe.

To put the cutting blade back into position,make sure the tabs on the blade match up to the appliance and put on the blade,lock the blade by turning the latch counter-clockwise

CLEANING THE TIE ROD AND BLADE GUARD

To disassemble the tie rod and blade guard: At the right side of the tie rod,you will find a hatch, slide this hatch to the right now you can take out the rod and you will be able to clean these parts.

PARTS	HOW TO CLEAN THEM?
Food holder	Remove and clean with soapy water. Rinse under tap water and dry thoroughly.
Sliding platform	Wipe with a soft cloth damped with some dish washing liquid.
Sliding food guide	Wipe with a clean cloth and dry thoroughly. Do not immerse in water or other liquids!

STORAGE AND DISPOSAL

STORAGE:

Store the appliance in a cool,dry,and clean place, out of the reach of children and pets.

Please keep the packaging for transporting the appliance or for storing your appliance when not in use for a prolonged time period.

PRODUCT DISPOSAL:

This product may not be disposed of with ordinary household waste,as electrical and electronic waste must be disposed of separately.

GuangZhou Superior Electric Industrial Co., Ltd.
Address: No.28,Huashan Road, Shilou Town, Panyu District, GUANGZHOU, -511447 China
E-mail: support@vevor.com





VEVOR

Upgrade · The Home Creator Way


FOOD SLICER

Model:SL-520 SL520 SL-520A SL520A

VEVOR
Upgrade·The Home Creator Way

FOOD SLICER

Model:SL-520 SL520 SL-520A SL520A

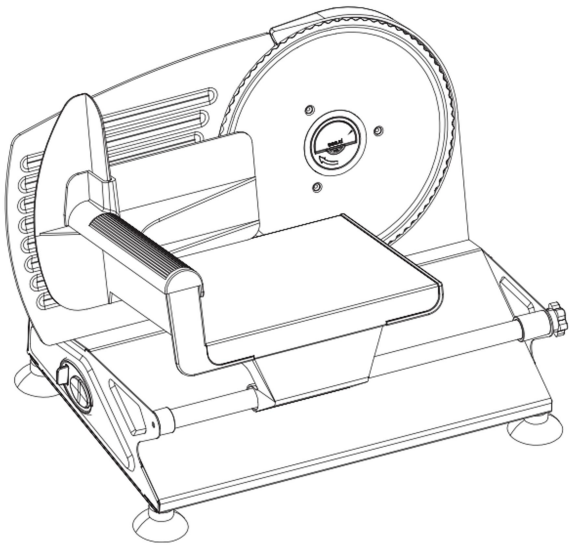

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

IMPORTANT SAFEGUARDS

	Warning-To reduce the risk of injury, user must read instructions manual carefully.

	Keep children away from the machine for fear of danger.
	Warning- For Indoor Use Only
	CORRECT DISPOSAL This product is subject to the provision of European Directive 2012/19/EU. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to collection point for recycling electrical and electronic devices.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed,including the following:

READ AND SAVE THESE INSTRUCTIONS

• Read all instructions before using.

• To protect against risk of electrical shock do not put power unit in water or other liquid.

• Close supervision is necessary when any appliance is used by or near children. Children should not use this appliance.

• Place On/Off switch in “OFF" position and remove cord plug from electrical outlet when not in use, before putting on or taking off parts and before cleaning. Do not pull power cord.

• Avoid contacting moving parts. Never feed food by hand. Always use

completely assembled slicer with food tray and food pusher.
• Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions or has been dropped or damaged in any manner. Do not service this product other than noted in this manual.
• The use of attachments not recommended or sold by manufacturer may result in injury.
• Do not use outdoors.
• Do not let cord hang over edge of table or countertop, or touch hot surfaces including the stove. Do not use an extension cord.
• Do not use appliance for other than intended use.Blade is sharp. Handle carefully when cleaning.
• The safety switch prevents accidental operation of the appliance.Do not defeat or bypass the safety switch.
• Appliance should not be used to cut frozen food or bones.
• Operate appliance only if the blade is properly locked and/or tightened.
• Always cut food with the slicer fully assembled.

THIS UNIT IS FOR, HOUSEHOLD USE ONLY

This product is not intended for commercial use. No user-serviceable parts inside. Do not attempt to service this product.

POLARIZED PLUG

This appliance has a polarized plug,(one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way.If the plug does not fit fully in the outlet, reverse the plug.If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature or modify the plug in any way. If the plug fits loosely into the AC outlet or if the AC outlet feels warm do not use that outlet.

SAVE THESE INSTRUCTIONS

DO NOT IMMERSE THE CORD IN WATER OR ANY OTHER LIQUID!

SAFETY INSTRUCTIONS

• If you ignore the safety instructions the manufacturer cannot be held responsible for damage.
• If the supply cord is damaged,it must be replaced by the manufacturer its service agent,or similarly qualified persons in order to avoid a hazard.
• Do not use this appliance with a damaged cord or plug or when the appliance has malfunctions or has been damaged in any manner.To avoid a hazard, make sure that a damaged cord or plug is replaced by a competent and qualified repair service.Do not repair this appliance yourself.
• Never move the appliance by pulling the cord and make sure the cord cannot become entangled.
• The appliance must be placed on a stable,level surface.
• This appliance is only to be used for household purposes and only for its intended purpose.
• The appliance can be used by children aged from8 years and above and persons with reduced physical,sensory or mental capabilities or lack of experience and knowledge if they are under supervision and have been given instruction concerning use of the appliance in a safe way and understand the hazards involved.Children must
not play with the appliance.Cleaning and user maintenance must not be carried out by children unless they are older than 8 years old and supervised.
• To protect yourself against an electric shock,do not immerse the cord,plug or appliance in water or any other liquid.
• Switch off the appliance and unplug from the power supply before changing accessories or handling parts that move in use.
• Always unplug the device if it is left unattended and before assembling, disassembling, or cleaning.
• Do not allow children to use the device without supervision.
• This appliance must be used with the sliding feed table and the piece holder in position unless this is not possible due to the size or shape of

food.
• Avoid accidents such as trips or falls by placing the cord in a safe position.
• If an extension cord is used,its capacity needs to be suitable for the appliance's power consumption.
• Do not operate the appliance with wet hands or while standing on a wet floor.Do not touch the power plug with wet hands.
• Do not open the appliance housing under any circumstances.Do not insert any foreign objects into the interior of the housing.
• Never use accessories that are not recommended by the manufacturer.They could pose a safety risk to the user and might damage the appliance. Only use original parts and accessories.
• Keep the appliance away from any hot surfaces and open flames. Always operate the appliance on a level,stable,clean,and dry surface. Protect the appliance against heat, dust, direct sunlight, moisture, drips, and splashing water.
• Do not place heavy objects on top of the appliance. Do not place objects with open flames, e.g.candles, on top of or beside the appliance. Do not place objects filled with water, e.g.vases, on or near the appliance.
• Do not pull the power cord to remove the plug from the electrical outlet and do not wrap the power cord around the appliance.
• Unplug the appliance from the electrical outlet when not in use and before cleaning.
• Switch off the appliance before changing accessories or handling parts that move during use.
• If the appliance should overheat, stop using the appliance and unplug from its electrical outlet.
• Never leave the appliance unattended during use.
• Dry the appliance and all accessories before connecting to the power supply and prior to attaching the accessories.
• Always turn the appliance off before disconnecting the power plug.
• Clean the appliance thoroughly prior to using it.
• During operation keep hands,hair clothing,and utensils away from the


cutting blade to avoid injuries and damage to the appliance.
• The appliance is only intended for short term operation. After an operation time of 5 minutes let it cool for at least 30 minutes. Do not overload the

SPECIFICATION

Model	SL-520 SL520 SL-520A SL520A
Rated Power	200W
Rated Input	AC120V 60Hz AC 220-240V 50/60Hz

PARTS DESCRIPTION

1	Support Plate
2	Blade
3	Blade Locking Screw
4	Power Cord
5	Base Assembly
6	Food Carriage
7	Slicing Guard
8	Dual-action On/Off switch
9	Thickness Adjustment Knob
10	Motor Assembly

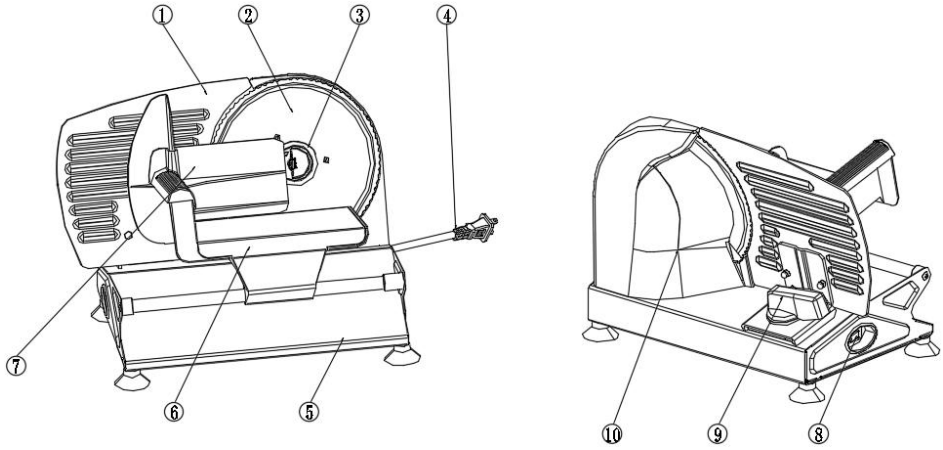

Take the appliance and accessories out of the box.Remove the stickers,protective foil or plastic from the device.

Check for the presence of all parts and for transport damage.In case of damages or incomplete delivery,please contact your dealer.

Put the power cable into the socket.(**Note:** Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage AC 120V 60Hz(AC 220-240V 50/60Hz) 200W.

Before using your appliance for the first time,wipe all removable parts with a damp cloth.Never use abrasive products.

Clean the whole appliance (see the cleaning section).

Place the appliance on a dry, flat, and stable surface.

Apply downward pressure onto the appliance so that the suction feet(7)get a good grip.

BEFORE THE FIRST USE

Use the setting button to choose the desired cutting width.

The cutting width is adjustable from 1 to 15mm. Slide the cradle to the left and place the food on the cradle.

Place the holder on the cradle;use this holder to push the food slightly against the back cover.

Activate the device by using the on/off switch which is located on the left side of the device.

NOTE: This appliance is equipped with a safety yourself then push simultaneously the on/off
switch and the appliance will start.By pushing the switch (A),first bring the safety switch towards on/off switch again the appliance will stop.
WARNING!Do not touch the blade,the blade is very sharp and can cause severe injury.
rotating blade. Catch the sliced food at the back of the device.
WARNING! Never use the device without the guard,you can seriously injure yourself.
When turning off the device the blade keeps turning for a while,so do not touch it.After 5 minutes of continued use,turn off the device and allow it to cool down,to prevent overheating of the motor.

CLEANING AND MAINTENANCE

Unplug the appliance and allow it to cool down. Use a soft,slightly damp cloth to wipe appliance surfaces.Do not allow water or any other liquid to get into the unit.
Before removing the blades,disconnect the power plug.
WARNING! Never touch the edges of the blades!Make sure the removed cutting knife cannot roll off the table!
Now you can clean the blade in soapy water,the blade is also dishwasher safe.
To put the cutting blade back into position,make sure the tabs on the blade match up to the appliance and put on the blade,lock the blade by turning the latch counterclockwise.

CLEANING THE TIE ROD AND BLADE GUARD

To disassemble the tie rod and blade guard:At the right side of the tie rod,you will find a hatch,slide this hatch to the right now you can take out the rod and you will be able to clean these parts.

WARNING!

Packaging materials are not toys. Children should not play with the

packaging materials as they pose a risk of swallowing and suffocation!

USE

Use the setting button to choose the desired cutting width.
The cutting width is adjustable from 1 to 15 mm. Slide the cradle to the left and place the food on the cradle.
Place the holder on the cradle;use this holder to push the food slightly against the back cover.
Activate the device by using the on/off switch which is located on the left side of the device.
NOTE: This appliance is equipped with a safety switch (A),first bring the safety switch towards yourself then push simultaneously the on/off switch and the appliance will start.By pushing the on/off switch again the appliance will stop.
WARNING!Do not touch the blade,the blade is very sharp and can cause severe injury.
Slide the tray slowly to the right against the rotating blade.Catch the sliced food at the back of the device.
WARNING! Never use the device without the guard,you can seriously injure yourself.

PLEASE NOTE THAT:

This appliance is only suitable for slicing food e.g. meats, cheeses,fruits, vegetables,breads,etc.The food to be sliced must be defrosted,unpackaged and deboned before it can be sliced with the appliance. Do not use it for slicing frozen food,bones, or for any other purpose.
This appliance is only suitable for private household use and it is not designed for commercial purposes.
This appliance is intended for dry indoor use only. Do not use the appliance outdoors.

HOT ROASTS — BEEF, PORK, LAMB, TURKEY, HAM

When slicing boneless roasts,remove from the oven and allow to cool for 15-20 minutes before
Cut the roast,if necessary,to fit onto the platform. Place foil underneath the platform table to catch juices and crumbs for easy cleanup(and treating yourself with the best pieces).
For rolled or tied roast,remove strings one at a time as the strings become closer to the blade (make sure the appliance is off).

CHEESE

Slice while well chilled.
serving,allow the cheese to reach room temperature.This will enhance the natural flavour. Some processed cheese may stick to the blade.
When necessary,turn the appliance off,wait for the blade to stop turning,and remove the plug. Wipe the blade with a damp cloth since moisture will help prevent the blade from sticking.

BACK BACON

Chill thoroughly before slicing. Some types of smoked bacon should have the fat removed.

COLD CUTS AND SANDWICH MEAT

Cold cuts of meat will last longer and will retain flavour longer if sliced when needed.
For best results,chill first.
Remove any plastic or hard casing before slicing. Use a constant,gentle pressure for uniform slices.

FRUITS AND VEGETABLES

Slice potatoes for thick or thin chips.
Slice carrots lengthwise in very thin strips. Soak in ice water to curl.Slice zucchini, eggplant, and squash.

BACK BACON

Chill thoroughly before slicing. Some types of smoked bacon should have the fat removed.

Cold Cuts and Sandwich Meat

Cold cuts of meat will last longer and will retain flavour longer if sliced when needed.

For best results,chill first. Remove any plastic or hard casing before slicing. Use a constant,gentle pressure for uniform slices.

FRUITS AND VEGETABLES

Slice potatoes for thick or thin chips.

Slice carrots lengthwise in very thin strips.Soak in ice water to curl.

Slice zucchini, eggplant, and squash.

CLEANING AND MAINTENANCE

Unplug the appliance and allow it to cool down. Use a soft,slightly damp cloth to wipe appliance surfaces.Do not allow water or any other liquid to get into the unit.

REMOVE THE CUTTING BLADE

Before removing the blades,disconnect the power plug.

WARNING! Never touch the edges of the blades! Make sure the removed cutting knife cannot roll off the table!Keep children at a safe distance! To remove the cutting blade.Push the ‘push button' in the middle of the cutting blade, a latch will come out;turn the latch clockwise to unlock the cutting blade.

Now you can clean the blade in soapy water,the blade is also dishwasher safe.

To put the cutting blade back into position,make sure the tabs on the blade match up to the appliance and put on the blade,lock the blade by turning the latch counter-clockwise

CLEANING THE TIE ROD AND BLADE GUARD

To disassemble the tie rod and blade guard: At the right side of the tie rod,you will find a hatch, slide this hatch to the right now you can take out the rod and you will be able to clean these parts.

PARTS	HOW TO CLEAN THEM?
Food holder	Remove and clean with soapy water. Rinse under tap water and dry thoroughly.
Sliding platform	Wipe with a soft cloth damped with some dish washing liquid.
Sliding food guide	Wipe with a clean cloth and dry thoroughly. Do not immerse in water or other liquids!

STORAGE AND DISPOSAL

STORAGE:

Store the appliance in a cool,dry,and clean place, out of the reach of children and pets.

Please keep the packaging for transporting the appliance or for storing your appliance when not in use for a prolonged time period.

PRODUCT DISPOSAL:

This product may not be disposed of with ordinary household waste,as electrical and electronic waste must be disposed of separately.

GuangZhou Superior Electric Industrial Co., Ltd.
Address: No.28,Huashan Road, Shilou Town, Panyu District, GUANGZHOU, -511447 China
E-mail: support@vevor.com





VEVOR

Upgrade · The Home Creator Way


KRAJALNICA DO ŻYWNOŚCI

Model: SL- 520 SL520 SL-520A SL520A

VEVOR
Upgrade·The Home Creator Way

FOOD SLICER

Model: SL- 520 SL520 SL-520A SL520A

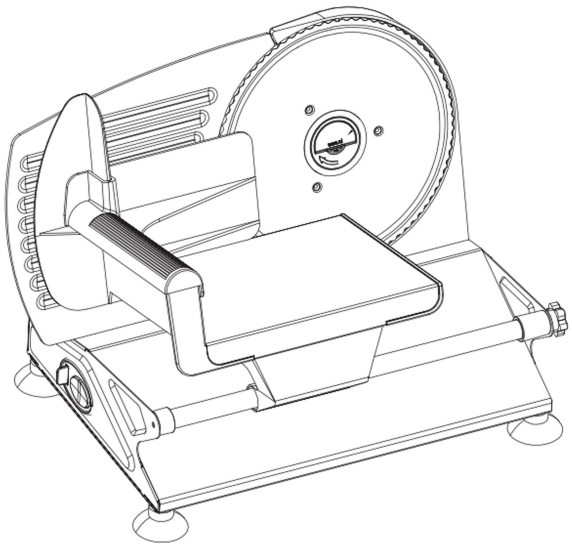

To jest oryginalna instrukcja obsługi. Przed użyciem prosimy o dokładne zapoznanie się z treścią instrukcji. Firma VEVOR zastrzega sobie prawo do jednoznacznej interpretacji niniejszej instrukcji obsługi. Wygląd produktu zależy od stanu, w jakim go otrzymali Państwo. Prosimy o wyrozumiałość, ale nie będziemy Państwa ponownie informować o aktualizacjach technologicznych lub oprogramowania naszego produktu.

WAŻNE ZABEZPIECZENIA

	Ostrzeżenie: Aby zminimalizować ryzyko obrażeń, użytkownik powinien uważnie przeczytać instrukcję obsługi.

	Trzymaj dzieci z dala od urządzenia, aby nie stwarzały zagrożenia.
	Ostrzeżenie – wyłącznie do użytku wewnątrz pomieszczeń
	PRAWIDŁOWA UTYLIZACJA Niniejszy produkt podlega przepisom dyrektywy europejskiej 2012/19/UE. Symbol przedstawiający przekreślony kosz na śmieci na kółkach oznacza, że produkt wymaga selektywnej zbiórki odpadów w Unii Europejskiej. Dotyczy to produktu i wszystkich akcesoriów oznaczonych tym symbolem. Produktów oznaczonych tym symbolem nie wolno wyrzucać razem z normalnymi odpadami domowymi, lecz należy je oddać do punktu zbiórki w celu recyklingu urządzeń elektrycznych i elektronicznych.

WAŻNE ZABEZPIECZENIA

Podczas korzystania z urządzeń elektrycznych należy zachować podstawowe środki ostrożności należy zawsze przestrzegać, w tym następujących zasad:

PRZECZYTAJ I ZACHOWAJ TO INSTRUKCJE

• Przed użyciem należy przeczytać wszystkie instrukcje.
• Aby uniknąć ryzyka porażenia prądem elektrycznym, nie należy umieszczać urządzenia zasilającego w wodzie lub innym płynie.
• W przypadku korzystania z jakiegokolwiek urządzenia przez osobę trzecią lub w pobliżu dzieci. Dzieci nie powinny używać tego urządzenia.
• Ustaw przełącznik w pozycji „WYŁ.” i wyjmij wtyczkę przewodu. odłącz od gniazdka elektrycznego, gdy nie jest używany, przed założeniem lub

zabraniem Wyłącz części i przed czyszczeniem. Nie ciągnij za przewód zasilający.
• Unikaj kontaktu z ruchomymi częściami. Nigdy nie podawaj jedzenia ręcznie. Zawsze użyj całkowicie zmontowanej krajalnicy z tacką na żywność i popychaczem do żywności.
• Nie należy używać żadnego urządzenia z uszkodzonym przewodem lub wtyczką, po awarii urządzenia lub jego upadku lub uszkodzeniu. W żaden sposób. Nie serwisuj tego produktu w sposób inny niż wskazany w niniejszej instrukcji. podręcznik.
• Stosowanie akcesoriów, które nie są zalecane lub sprzedawane przez producenta może spowodować obrażenia.
• Nie stosować na zewnątrz.
• Nie pozwól, aby przewód zwisał z krawędzi stołu lub blatu, ani nie dotykał gorących powierzchni, w tym kuchenki. Nie używaj przedłużacza.
• Nie używaj urządzenia niezgodnie z przeznaczeniem. Ostrze jest ostre. Zachowaj ostrożność podczas czyszczenia.
• Wyłącznik bezpieczeństwa zapobiega przypadkowemu uruchomieniu urządzenia. Nie należy omijać ani omijać wyłącznika bezpieczeństwa.
• Urządzenia nie należy używać do krojenia mrożonek i kości.
• Używaj urządzenia tylko wtedy, gdy ostrze jest prawidłowo zablokowane i/lub zaciśnięte.
• Zawsze kroj żywność przy użyciu całkowicie zmontowanej krajalnicy .

TO URZĄDZENIE JEST PRZEZNACZONE WYŁĄCZNIE DO UŻYTKU DOMOWEGO

Ten produkt nie jest przeznaczony do użytku komercyjnego. Wewnątrz nie ma części, które mogłyby zostać naprawione przez użytkownika. Nie należy podejmować prób naprawy tego produktu.

WTYCZKA POLARYZOWANA

To urządzenie ma wtyczkę spolaryzowaną (jeden bolec jest szerszy od drugiego). Jako element bezpieczeństwa aby zmniejszyć ryzyko porażenia prądem, ta wtyczka jest przeznaczony do podłączenia do gniazdka

spolaryzowanego tylko w jeden sposób. Jeśli wtyczka nie pasuje całkowicie do gniazdka, należy ją odwrócić wtyczka. Jeśli nadal nie pasuje, skontaktuj się z wykwalifikowanym elektryk. Nie próbuj obejść tego zabezpieczenia nie modyfikować ani nie modyfikować wtyczki w żaden sposób. Jeżeli wtyczka luźno pasuje do gniazdka prądu zmiennego lub jeśli gniazdko jest ciepłe, nie należy z niego korzystać.

ZACHOWAJ TE INSTRUKCJE

NIE ZANURZAJ PRZEWODU W WODZIE ANI JAKIKOLWIEK INNY PŁYN!

BEZPIECZEŃSTWO INSTRUKCJE

• Producent nie ponosi odpowiedzialności za szkody powstałe w wyniku zignorowania instrukcji bezpieczeństwa.
• Jeżeli przewód zasilający jest uszkodzony, należy go wymienić. zastąpiony przez producenta jego agent serwisowy lub podobnie wykwalifikowanych osób, aby uniknąć zaryzykować.
• Nie używaj tego urządzenia, jeśli przewód lub wtyczka są uszkodzone lub jeśli urządzenie działa nieprawidłowo lub zostało w jakikolwiek sposób uszkodzone. Aby uniknąć zagrożenie , należy upewnić się, że uszkodzony przewód lub wtyczkę wymieni kompetentny i wykwalifikowany serwisant Serwis. Nie naprawiaj tego urządzenia samodzielnie.
• Nigdy nie przesuwaj urządzenia, ciągnąc za przewód. i upewnij się, że przewód nie zaplącze się.
• Urządzenie należy ustawić na stabilnej i równej powierzchni.
• To urządzenie należy używać wyłącznie w celach domowych i zgodnie z jego przeznaczeniem.
• Urządzenie może być używane przez dzieci w wieku od 8 lat i osoby o ograniczonej sprawności ruchowej. zdolności fizyczne, sensoryczne lub umysłowe lub ich brak doświadczenie i wiedzę, jeśli są pod nadzór i otrzymali instrukcje dotyczące bezpiecznego korzystania z urządzenia i zrozumieć związane z tym zagrożenia. Dzieci muszą

nie bawić się urządzeniem. Czyszczenie i konserwacja urządzenia nie mogą być wykonywane przez dzieci chyba że mają ponad 8 lat i nadzorowany.
• Aby uchronić się przed porażeniem prądem elektrycznym, nie zanurzaj przewodu, wtyczki ani urządzenia w wodzie ani innym płynie.
• Przed wymianą akcesoriów lub dotykaniem ruchomych części urządzenia wyłącz je i odłącz od zasilania.
• Zawsze odłączaj urządzenie od zasilania, jeśli pozostawiasz je bez nadzoru. zanim złożenie, rozmontowywanie, lub czyszczenia.
• Nie należy pozwalać dzieciom na korzystanie z urządzenia bez nadzór.
• Urządzenie należy używać z zamontowanym przesuwnym stołem podającym i uchwytem na kawałki, chyba że jest to niemożliwe ze względu na rozmiar lub kształt żywności.
• Aby uniknąć wypadków, takich jak potknięcia czy upadki, umieść przewód w bezpiecznym miejscu.
• W przypadku stosowania przedłużacza jego moc musi być dostosowana do poboru mocy przez urządzenie.
• Nie należy obsługiwać urządzenia mokrymi rękami lub stojąc na mokrej podłodze. Nie dotykać urządzenia. wtyczki zasilającej mokrymi rękami.
• Pod żadnym pozorem nie otwieraj obudowy urządzenia . Nie wkładaj żadnych obcych przedmiotów do wnętrza obudowy.
• Nigdy nie używaj akcesoriów, których nie zaleca producent. Mogą one stanowić zagrożenie dla bezpieczeństwa. stwarzać ryzyko dla użytkownika i może uszkodzić urządzenie. Stosuj wyłącznie oryginalne części i akcesoria.
• Trzymaj urządzenie z dala od gorących powierzchni i otwartego ognia. Zawsze używaj urządzenia na równym, stabilnym, czystym i suchym podłożu. powierzchnia. Chroń urządzenie przed ciepłem, pył, bezpośrednie światło słoneczne, wilgoć, kapie , i rozpryskiwania się wody.
• Nie umieszczaj ciężkich przedmiotów na górze urządzenie. Nie umieszczać obiekty z otwartego ognia, np. świec, na urządzeniu lub obok niego. Nie umieszczaj przedmiotów wypełnionych wodą, wazony, na lub w pobliżu urządzenia.

• Nie należy ciągnąć za przewód zasilający w celu wyjęcia wtyczki z gniazdka elektrycznego i nie należy owijać przewodu zasilającego wokół urządzenia.
• Odłącz urządzenie od gniazdka elektrycznego gdy nie jest używany i przed czyszczeniem.
• Przed zmianą wyłącz urządzenie. akcesoria lub obsługa części, które poruszają się podczas używać.
• Jeśli urządzenie ulegnie przegrzaniu, Przestań używać urządzenia i odłącz je od gniazdka elektrycznego.
• Nigdy nie odchodź pozostawiania urządzenia bez nadzoru podczas użytkowania.
• Wysusz urządzenie i wszystkie akcesoria przed podłączeniem do zasilania i przed zamocowaniem akcesoriów.
• Zawsze wyłączaj urządzenie przed odłączeniem wtyczki zasilania.
• Przed użyciem dokładnie wyczyść urządzenie.
• Podczas operacji trzymaj ręce i włosy ubrania i naczynia z dala od ostrza tnącego, aby uniknąć obrażeń ciała i uszkodzenia urządzenia.
• Urządzenie przeznaczone jest wyłącznie do krótkotrwałego użytku działanie. Po 5 minutach działania pozwól odstawić do ostygnięcia na co najmniej 30 minut. Nie przeciążaj


SPECYFIKACJA


Model	**SL -520 SL520 SL-520A SL520A**
Moc znamionowa	200 W
Znamionowe wejście	Prąd zmienny 120 V 60Hz Prąd zmienny 220-240 V 50/60 Hz

STRONY OPIS

1	Płyta podporowa

2	Ostrze
3	Śruba blokująca ostrze
4	Przewód zasilający
5	Zespół podstawy
6	Wózek z jedzeniem
7	Osłona tnąca
8	Podwójny przełącznik włączania/wyłączania
9	Pokrętło regulacji grubości
10	Zespół silnika

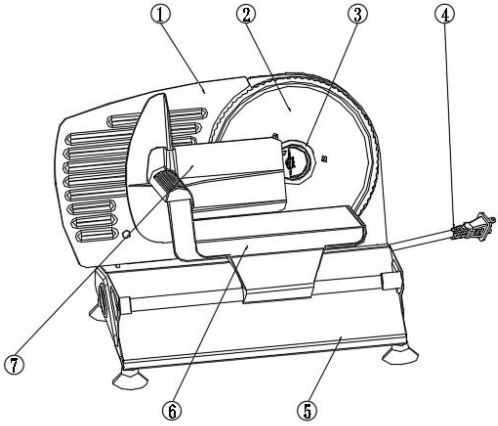

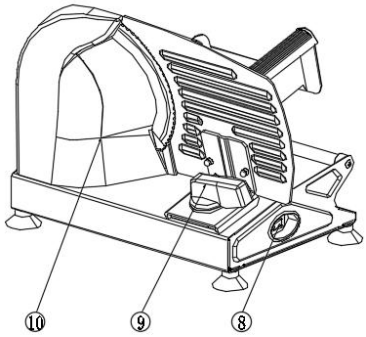

Wyjmij urządzenie i akcesoria z pudełka. Usuń naklejki, folię ochronną lub plastik z urządzenia. ten urządzenie.

Sprawdź obecność wszystkich części i uszkodzenia transportowe. W przypadku uszkodzeń lub niekompletnej dostawy, prosimy o kontakt ze sprzedawcą.

Podłącz przewód zasilający do gniazdka. (**Uwaga:** Przed podłączeniem urządzenia należy upewnić się, że napięcie podane na urządzeniu jest

zgodne z napięciem lokalnym. Napięcie prądu zmiennego 120 V 60 Hz

(prąd zmienny 220 – 240 V 50/60 Hz) 200 W.

Przed pierwszym użyciem urządzenia należy je dokładnie wyczyścić. zdejmowalne części wilgotną ściereczką. Nigdy nie używaj produkty ścierne.
Wyczyść całe urządzenie (patrz część dotycząca czyszczenia).
Miejsce ten urządzenie NA A suchy, płaski, I stabilna powierzchnia.
Wywieraj nacisk na urządzenie, tak aby przyssawki (7) dobrze się trzymały.

ZANIM THE PIERWSZE UŻYCIE

Użyj przycisku ustawień, aby wybrać żądaną szerokość koszenia.
Ten cięcie szerokość Jest nastawny z 1 Do 15 mm. Przesuń kołyskę w lewo i umieść jedzenie na kołysce.
Umieść uchwyt na kołysce; użyj tego uchwytu, aby dociśnij jedzenie lekko do tylnej pokrywy.
Włącz urządzenie za pomocą przełącznika włącz/wyłącz który znajduje się po lewej stronie urządzenia.
UWAGA: Urządzenie jest wyposażone w wyłącznik bezpieczeństwa następnie naciśnij jednocześnie przycisk włączania/wyłączania przełącznik i urządzenie będzie start.Naciskając przełącznik (A), najpierw ustaw wyłącznik bezpieczeństwa w kierunku Ponowne naciśnięcie przycisku włącz/wyłącz spowoduje zatrzymanie urządzenia.
UWAGA! Nie dotykaj ostrza, ponieważ jest ono bardzo ostre i mogą spowodować poważne obrażenia.
obracające się ostrze. Złap pokrojone jedzenie z tyłu urządzenia.
OSTRZEŻENIE! Nigdy nie używaj urządzenia bez Uważaj, możesz zrobić sobie poważną krzywdę.
Po wyłączeniu urządzenia ostrze obraca się jeszcze przez chwilę, dlatego nie należy go dotykać. Po 5 minutach ciągłego użytkowania wyłącz urządzenie i odczekaj , aż ostygnie, aby zapobiec przegrzaniu silnika.

CZYSZCZENIE I KONSERWACJA

Odłącz urządzenie od zasilania i pozwól mu ostygnąć. Do przecierania powierzchni urządzenia używaj miękkiej, lekko wilgotnej ściereczki. Nie dopuść do przedostania się wody ani żadnej innej cieczy do wnętrza urządzenia.

Przed wyjęciem ostrzy należy odłączyć zasilanie wtyczka.

UWAGA! Nigdy nie dotykaj krawędzi ostrzy! Upewnij się, że wyjęty nóż tnący nie może się toczyć. ze stołu!

Teraz możesz czyścić ostrze w wodzie z mydłem, ostrze można również myć w zmywarce.

Aby ponownie umieścić ostrze tnące w odpowiedniej pozycji, upewnij się, że wypustki na ostrzu pasują do siebie. urządzenie i załóż ostrze, zablokuj ostrze przekręcając zatrzask przeciwnie do ruchu wskazówek zegara.

CZYSZCZENIE DRĄŻKA KIEROWNICZEGO I OSŁONY OSTRZA

Aby zdemontować drążek kierowniczy i osłonę ostrza: Po prawej stronie drążka kierowniczego znajduje się klapa, przesuń tę klapę w prawo, aby wyjąć pręt i będziesz mógł wyczyścić te części.

OSTRZEŻENIE!

Materiały opakowaniowe nie są zabawkami. Dzieci nie powinny bawić się materiałami opakowaniowymi. ponieważ istnieje ryzyko połknięcia i uduszenia!

UŻYWAĆ

Wybierz żądaną opcję za pomocą przycisku ustawień szerokość cięcia. Szerokość cięcia jest regulowana w zakresie od 1 do 15 mm. Przesuń kołyskę w lewo i umieść na niej jedzenie kołyska.

Umieść uchwyt na kołysce; użyj tego uchwytu, aby dociśnij jedzenie lekko do tylnej pokrywy.

Włącz urządzenie za pomocą przełącznika włącz/wyłącz który znajduje się po lewej stronie urządzenia.

UWAGA: Urządzenie jest wyposażone w wyłącznik bezpieczeństwa

przełącznik (A), najpierw ustaw wyłącznik bezpieczeństwa w kierunku następnie naciśnij jednocześnie przycisk włączania/wyłączania przełącznik, a urządzenie się uruchomi.Naciskając Ponowne naciśnięcie przycisku włącz/ wyłącz spowoduje zatrzymanie urządzenia.
UWAGA! Nie dotykaj ostrza, ponieważ jest ono bardzo ostre i mogą spowodować poważne obrażenia .
Przesuń tackę powoli w prawo, w kierunku przeciwnym do ruchu wskazówek zegara. obracające się ostrze. Chwytaj pokrojone jedzenie z tyłu urządzenie.
OSTRZEŻENIE! Nigdy nie używaj urządzenia bez Uważaj, możesz zrobić sobie poważną krzywdę.

UWAGA:
To urządzenie nadaje się wyłącznie do krojenia jedzenie, np. mięso , sery, owoce, warzywa, pieczywo itp. jedzenie do bycia pokrojone muszą być rozmrożone, nieopakowane i odkostnione przed pokrojeniem w plastry urządzenie. Nie używać do krojenia mrożonek jedzenie, kości, lub w jakimkolwiek innym celu.
Urządzenie nadaje się wyłącznie do użytku domowego i nie jest przeznaczone do celów komercyjnych.
Urządzenie przeznaczone jest wyłącznie do użytku wewnątrz pomieszczeń, na sucho. Nie używaj urządzenia
na powietrzu.

GORĄCE PIECZENIE WOŁOWE, WIEPRZOWINA, JAGNIĘCINA, INDYK, SZYNKA
Podczas krojenia pieczeni bez kości należy wyjąć ją z piekarniku i pozostawić do ostygnięcia na 15-20 minut przed
W razie potrzeby pokrój pieczeń tak, aby zmieściła się na platformie.
Umieść folię pod stołem platformy, aby zbierała soki i okruchy, co ułatwi czyszczenie (i pozwoli Ci delektować się najlepszymi kawałkami).
W przypadku pieczeni zwijanej lub wiązanej, usuwaj włókna po jednym, w miarę jak będą się one zbliżać do ostrza (upewnij się, że urządzenie jest wyłączone).

SER
Pokrój dobrze schłodzony.
podczas podawania pozwól serowi osiągnąć odpowiednią temperaturę Temperatura. Wzmocni to naturalny smak. Niektóre sery topione mogą przyklejać się do ostrza.
W razie potrzeby wyłącz urządzenie, poczekaj, aż ostrze przestanie się obracać, i wyjmij wtyczkę z gniazdka. Przetrzyj ostrze wilgotną ściereczką , ponieważ wilgoć zapobiegnie jego przywieraniu.

BEKON
Przed pokrojeniem dokładnie schłodzić. Niektóre rodzaje wędzonego boczku należy pozbawić tłuszczu.

WĘDLINY I MIĘSA KANAPKOWE
Wędliny będą trwać dłużej i będzie zachowują smak na dłużej, jeśli zostaną pokrojone w razie potrzeby.
Aby uzyskać najlepsze rezultaty, najpierw schłodź.
Przed krojeniem usuń folię lub twardą osłonkę. Używaj stałego, delikatnego nacisku, aby uzyskać równomierne plastry.

OWOCE I WARZYWA
Pokrój ziemniaki na grube lub cienkie frytki.
Pokrój marchewkę wzdłuż w bardzo cienkie paski. Namocz w lodowatej wodzie, aby się zwinęła. Pokrój cukinię w plasterki. bakłażan, i squash.

BEKON
Chłod dokładnie przed pokrojeniem. Niektóre rodzaje wędzonych z boczku należy usunąć tłuszcz.

Wędliny i mięso kanapkowe
Wędliny będą trwać dłużej i będzie zachowują smak na dłużej, jeśli zostaną pokrojone w razie potrzeby.

Aby uzyskać najlepsze rezultaty, najpierw schłodź. Przed krojeniem usuń folię lub twardą osłonkę. Używaj stałego, delikatnego nacisku, aby uzyskać równomierne plastry.

OWOCE I WARZYWA

Pokrój ziemniaki na grube lub cienkie frytki.
Marchewkę pokrój wzdłuż na bardzo cienkie paski. Namocz w lodowatej wodzie, aż się zwinie.
Pokrój cukinię, bakłażan, i squash.

CZYSZCZENIE I KONSERWACJA

Odłącz urządzenie od zasilania i pozwól mu ostygnąć. Do czyszczenia urządzenia należy używać miękkiej, lekko wilgotnej ściereczki. powierzchnie. Nie dopuść, aby do wnętrza urządzenia dostała się woda lub inna ciecz.

ZDJĄĆ OSTRZE TNĄCE

Przed usunięciem ostrza, odłącz wtyczkę zasilającą.

UWAGA! Nigdy nie dotykaj krawędzi ostrzy! Upewnij się, że wyjęty nóż tnący nie może się toczyć ze stołu! Trzymaj dzieci w bezpiecznej odległości! Aby wyjąć ostrze tnące, naciśnij przycisk „push” przycisk' w środku ostrza tnącego, zatrzask będzie wyjdź; przekręć zatrzask zgodnie z ruchem wskazówek zegara, aby odblokować ostrze tnące.
Teraz możesz czyścić ostrze w wodzie z mydłem, ostrze można również myć w zmywarce.
Aby ponownie umieścić ostrze tnące w odpowiedniej pozycji, upewnij się, że wypustki na ostrzu pasują do siebie. urządzenie i załóż ostrze, zablokuj ostrze, obracając zatrzask przeciwnie do ruchu wskazówek zegara

CZYSZCZENIE DRĄŻKA KIEROWNICZEGO I OSŁONY OSTRZA

Aby zdemontować drążek kierowniczy i ostrze strażnik: Po prawej stronie drążka kierowniczego znajdziesz znajdź właz, Przesuń teraz tę

klapę w prawo – możesz wyjąć pręt i wyczyścić te części.

STRONY	JAK CZYŚCIĆ ICH ?
Uchwyt na żywność	Zdjąć i wyczyścić wodą z mydłem. Opłukać pod bieżącą wodą i dokładnie wysuszyć.
Platforma przesuwna	Przetrzeć miękką szmatką zwilżoną niewielką ilością płynu do naczyń. płyn do prania.
Przesuwny przewodnik żywieniowy	Przetrzyj czystą szmatką i dokładnie osusz. Nie zanurzaj w wodzie ani innych płynach!

PRZECHOWYWANIE I UTYLIZACJA
SKŁADOWANIE:
Przechowuj urządzenie w chłodnym, suchym i czystym miejscu, poza zasięgiem dzieci i zwierząt domowych.
Proszę zachować opakowanie do transportu urządzenia lub do przechowywania urządzenia, gdy nie jest ono używane przez dłuższy czas.

UTYLIZACJA PRODUKTU:
Tego produktu nie należy wyrzucać razem ze zwykłymi odpadami domowymi, tak jak urządzeń elektrycznych i elektronicznych. odpady muszą być utylizowane oddzielnie.

GuangZhou Superior Electric Industrial Co., Ltd.
Adres: nr 28, Huashan Road, Shilou Town, Dystrykt Panyu, GUANGZHOU, -511447 Chiny
Adres e-mail: support@vevor.com





VEVOR

Upgrade · The Home Creator Way


FOOD SLICER

Model:SL-520 SL520 SL-520A SL520A

VEVOR
Upgrade·The Home Creator Way

FOOD SLICER

Model:SL-520 SL520 SL-520A SL520A

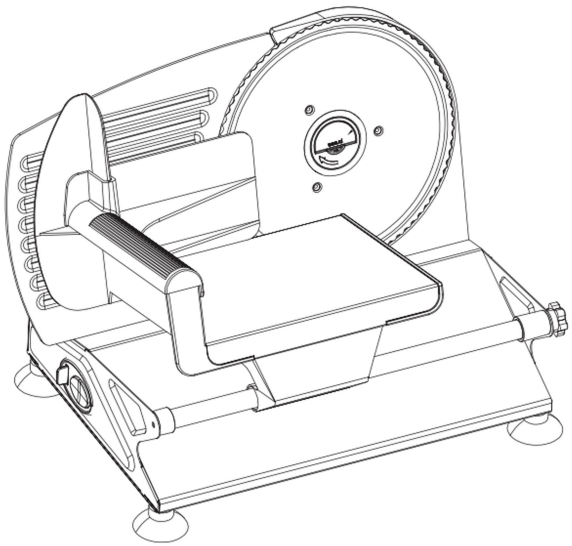

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

IMPORTANT SAFEGUARDS

	Warning-To reduce the risk of injury, user must read instructions manual carefully.

	Keep children away from the machine for fear of danger.
	Warning- For Indoor Use Only
	CORRECT DISPOSAL This product is subject to the provision of European Directive 2012/19/EU. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to collection point for recycling electrical and electronic devices.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed,including the following:

READ AND SAVE THESE INSTRUCTIONS

• Read all instructions before using.

• To protect against risk of electrical shock do not put power unit in water or other liquid.

• Close supervision is necessary when any appliance is used by or near children. Children should not use this appliance.

• Place On/Off switch in “OFF" position and remove cord plug from electrical outlet when not in use, before putting on or taking off parts and before cleaning. Do not pull power cord.

• Avoid contacting moving parts. Never feed food by hand. Always use

completely assembled slicer with food tray and food pusher.
• Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions or has been dropped or damaged in any manner. Do not service this product other than noted in this manual.
• The use of attachments not recommended or sold by manufacturer may result in injury.
• Do not use outdoors.
• Do not let cord hang over edge of table or countertop, or touch hot surfaces including the stove. Do not use an extension cord.
• Do not use appliance for other than intended use.Blade is sharp. Handle carefully when cleaning.
• The safety switch prevents accidental operation of the appliance.Do not defeat or bypass the safety switch.
• Appliance should not be used to cut frozen food or bones.
• Operate appliance only if the blade is properly locked and/or tightened.
• Always cut food with the slicer fully assembled.

THIS UNIT IS FOR, HOUSEHOLD USE ONLY

This product is not intended for commercial use. No user-serviceable parts inside. Do not attempt to service this product.

POLARIZED PLUG

This appliance has a polarized plug,(one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way.If the plug does not fit fully in the outlet, reverse the plug.If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature or modify the plug in any way. If the plug fits loosely into the AC outlet or if the AC outlet feels warm do not use that outlet.

SAVE THESE INSTRUCTIONS

DO NOT IMMERSE THE CORD IN WATER OR ANY OTHER LIQUID!

SAFETY INSTRUCTIONS

• If you ignore the safety instructions the manufacturer cannot be held responsible for damage.
• If the supply cord is damaged,it must be replaced by the manufacturer its service agent,or similarly qualified persons in order to avoid a hazard.
• Do not use this appliance with a damaged cord or plug or when the appliance has malfunctions or has been damaged in any manner.To avoid a hazard, make sure that a damaged cord or plug is replaced by a competent and qualified repair service.Do not repair this appliance yourself.
• Never move the appliance by pulling the cord and make sure the cord cannot become entangled.
• The appliance must be placed on a stable,level surface.
• This appliance is only to be used for household purposes and only for its intended purpose.
• The appliance can be used by children aged from8 years and above and persons with reduced physical,sensory or mental capabilities or lack of experience and knowledge if they are under supervision and have been given instruction concerning use of the appliance in a safe way and understand the hazards involved.Children must
not play with the appliance.Cleaning and user maintenance must not be carried out by children unless they are older than 8 years old and supervised.
• To protect yourself against an electric shock,do not immerse the cord,plug or appliance in water or any other liquid.
• Switch off the appliance and unplug from the power supply before changing accessories or handling parts that move in use.
• Always unplug the device if it is left unattended and before assembling, disassembling, or cleaning.
• Do not allow children to use the device without supervision.
• This appliance must be used with the sliding feed table and the piece holder in position unless this is not possible due to the size or shape of

food.
• Avoid accidents such as trips or falls by placing the cord in a safe position.
• If an extension cord is used,its capacity needs to be suitable for the appliance's power consumption.
• Do not operate the appliance with wet hands or while standing on a wet floor.Do not touch the power plug with wet hands.
• Do not open the appliance housing under any circumstances.Do not insert any foreign objects into the interior of the housing.
• Never use accessories that are not recommended by the manufacturer.They could pose a safety risk to the user and might damage the appliance. Only use original parts and accessories.
• Keep the appliance away from any hot surfaces and open flames. Always operate the appliance on a level,stable,clean,and dry surface. Protect the appliance against heat, dust, direct sunlight, moisture, drips, and splashing water.
• Do not place heavy objects on top of the appliance. Do not place objects with open flames, e.g.candles, on top of or beside the appliance. Do not place objects filled with water, e.g.vases, on or near the appliance.
• Do not pull the power cord to remove the plug from the electrical outlet and do not wrap the power cord around the appliance.
• Unplug the appliance from the electrical outlet when not in use and before cleaning.
• Switch off the appliance before changing accessories or handling parts that move during use.
• If the appliance should overheat, stop using the appliance and unplug from its electrical outlet.
• Never leave the appliance unattended during use.
• Dry the appliance and all accessories before connecting to the power supply and prior to attaching the accessories.
• Always turn the appliance off before disconnecting the power plug.
• Clean the appliance thoroughly prior to using it.
• During operation keep hands,hair clothing,and utensils away from the


cutting blade to avoid injuries and damage to the appliance.
• The appliance is only intended for short term operation. After an operation time of 5 minutes let it cool for at least 30 minutes. Do not overload the

SPECIFICATION

Model	SL-520 SL520 SL-520A SL520A
Rated Power	200W
Rated Input	AC120V 60Hz AC 220-240V 50/60Hz

PARTS DESCRIPTION

1	Support Plate
2	Blade
3	Blade Locking Screw
4	Power Cord
5	Base Assembly
6	Food Carriage
7	Slicing Guard
8	Dual-action On/Off switch
9	Thickness Adjustment Knob
10	Motor Assembly

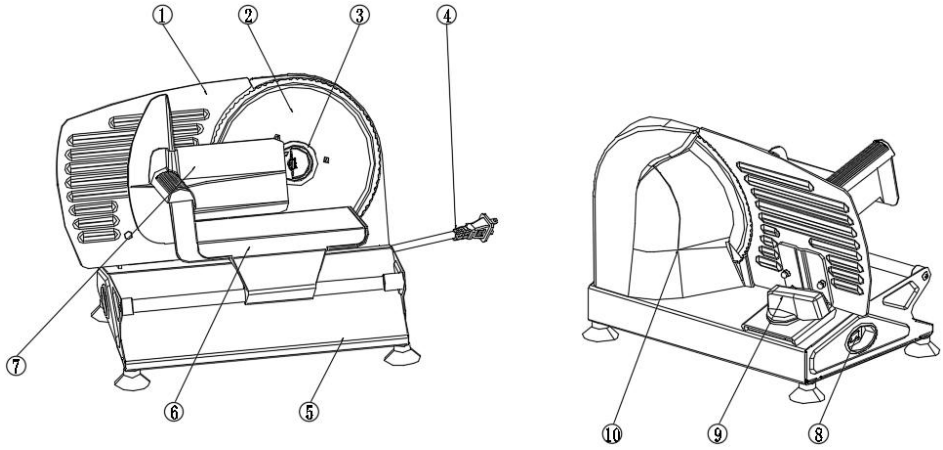

Take the appliance and accessories out of the box.Remove the stickers,protective foil or plastic from the device.

Check for the presence of all parts and for transport damage.In case of damages or incomplete delivery,please contact your dealer.

Put the power cable into the socket.(**Note:** Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage AC 120V 60Hz(AC 220-240V 50/60Hz) 200W.

Before using your appliance for the first time,wipe all removable parts with a damp cloth.Never use abrasive products.

Clean the whole appliance (see the cleaning section).

Place the appliance on a dry, flat, and stable surface.

Apply downward pressure onto the appliance so that the suction feet(7)get a good grip.

BEFORE THE FIRST USE

Use the setting button to choose the desired cutting width.

The cutting width is adjustable from 1 to 15mm. Slide the cradle to the left and place the food on the cradle.

Place the holder on the cradle;use this holder to push the food slightly against the back cover.

Activate the device by using the on/off switch which is located on the left side of the device.

NOTE: This appliance is equipped with a safety yourself then push simultaneously the on/off
switch and the appliance will start.By pushing the switch (A),first bring the safety switch towards on/off switch again the appliance will stop.
WARNING!Do not touch the blade,the blade is very sharp and can cause severe injury.
rotating blade. Catch the sliced food at the back of the device.
WARNING! Never use the device without the guard,you can seriously injure yourself.
When turning off the device the blade keeps turning for a while,so do not touch it.After 5 minutes of continued use,turn off the device and allow it to cool down,to prevent overheating of the motor.

CLEANING AND MAINTENANCE

Unplug the appliance and allow it to cool down. Use a soft,slightly damp cloth to wipe appliance surfaces.Do not allow water or any other liquid to get into the unit.
Before removing the blades,disconnect the power plug.
WARNING! Never touch the edges of the blades!Make sure the removed cutting knife cannot roll off the table!
Now you can clean the blade in soapy water,the blade is also dishwasher safe.
To put the cutting blade back into position,make sure the tabs on the blade match up to the appliance and put on the blade,lock the blade by turning the latch counterclockwise.

CLEANING THE TIE ROD AND BLADE GUARD

To disassemble the tie rod and blade guard:At the right side of the tie rod,you will find a hatch,slide this hatch to the right now you can take out the rod and you will be able to clean these parts.

WARNING!

Packaging materials are not toys. Children should not play with the

packaging materials as they pose a risk of swallowing and suffocation!

USE

Use the setting button to choose the desired cutting width.
The cutting width is adjustable from 1 to 15 mm. Slide the cradle to the left and place the food on the cradle.
Place the holder on the cradle;use this holder to push the food slightly against the back cover.
Activate the device by using the on/off switch which is located on the left side of the device.
NOTE: This appliance is equipped with a safety switch (A),first bring the safety switch towards yourself then push simultaneously the on/off switch and the appliance will start.By pushing the on/off switch again the appliance will stop.
WARNING!Do not touch the blade,the blade is very sharp and can cause severe injury.
Slide the tray slowly to the right against the rotating blade.Catch the sliced food at the back of the device.
WARNING! Never use the device without the guard,you can seriously injure yourself.

PLEASE NOTE THAT:

This appliance is only suitable for slicing food e.g. meats, cheeses,fruits, vegetables,breads,etc.The food to be sliced must be defrosted,unpackaged and deboned before it can be sliced with the appliance. Do not use it for slicing frozen food,bones, or for any other purpose.
This appliance is only suitable for private household use and it is not designed for commercial purposes.
This appliance is intended for dry indoor use only. Do not use the appliance outdoors.

HOT ROASTS — BEEF, PORK, LAMB, TURKEY, HAM

When slicing boneless roasts,remove from the oven and allow to cool for 15-20 minutes before
Cut the roast,if necessary,to fit onto the platform. Place foil underneath the platform table to catch juices and crumbs for easy cleanup(and treating yourself with the best pieces).
For rolled or tied roast,remove strings one at a time as the strings become closer to the blade (make sure the appliance is off).

CHEESE

Slice while well chilled.
serving,allow the cheese to reach room temperature.This will enhance the natural flavour. Some processed cheese may stick to the blade.
When necessary,turn the appliance off,wait for the blade to stop turning,and remove the plug. Wipe the blade with a damp cloth since moisture will help prevent the blade from sticking.

BACK BACON

Chill thoroughly before slicing. Some types of smoked bacon should have the fat removed.

COLD CUTS AND SANDWICH MEAT

Cold cuts of meat will last longer and will retain flavour longer if sliced when needed.
For best results,chill first.
Remove any plastic or hard casing before slicing. Use a constant,gentle pressure for uniform slices.

FRUITS AND VEGETABLES

Slice potatoes for thick or thin chips.
Slice carrots lengthwise in very thin strips. Soak in ice water to curl.Slice zucchini, eggplant, and squash.

BACK BACON

Chill thoroughly before slicing. Some types of smoked bacon should have the fat removed.

Cold Cuts and Sandwich Meat

Cold cuts of meat will last longer and will retain flavour longer if sliced when needed.

For best results,chill first. Remove any plastic or hard casing before slicing. Use a constant,gentle pressure for uniform slices.

FRUITS AND VEGETABLES

Slice potatoes for thick or thin chips.

Slice carrots lengthwise in very thin strips.Soak in ice water to curl.

Slice zucchini, eggplant, and squash.

CLEANING AND MAINTENANCE

Unplug the appliance and allow it to cool down. Use a soft,slightly damp cloth to wipe appliance surfaces.Do not allow water or any other liquid to get into the unit.

REMOVE THE CUTTING BLADE

Before removing the blades,disconnect the power plug.

WARNING! Never touch the edges of the blades! Make sure the removed cutting knife cannot roll off the table!Keep children at a safe distance! To remove the cutting blade.Push the ‘push button' in the middle of the cutting blade, a latch will come out;turn the latch clockwise to unlock the cutting blade.

Now you can clean the blade in soapy water,the blade is also dishwasher safe.

To put the cutting blade back into position,make sure the tabs on the blade match up to the appliance and put on the blade,lock the blade by turning the latch counter-clockwise

CLEANING THE TIE ROD AND BLADE GUARD

To disassemble the tie rod and blade guard: At the right side of the tie rod,you will find a hatch, slide this hatch to the right now you can take out the rod and you will be able to clean these parts.

PARTS	HOW TO CLEAN THEM?
Food holder	Remove and clean with soapy water. Rinse under tap water and dry thoroughly.
Sliding platform	Wipe with a soft cloth damped with some dish washing liquid.
Sliding food guide	Wipe with a clean cloth and dry thoroughly. Do not immerse in water or other liquids!

STORAGE AND DISPOSAL

STORAGE:

Store the appliance in a cool,dry,and clean place, out of the reach of children and pets.

Please keep the packaging for transporting the appliance or for storing your appliance when not in use for a prolonged time period.

PRODUCT DISPOSAL:

This product may not be disposed of with ordinary household waste,as electrical and electronic waste must be disposed of separately.

GuangZhou Superior Electric Industrial Co., Ltd.
Address: No.28,Huashan Road, Shilou Town, Panyu District, GUANGZHOU, -511447 China
E-mail: support@vevor.com





VEVOR

Upgrade · The Home Creator Way


FOOD SLICER

Model:SL-520 SL520 SL-520A SL520A

VEVOR
Upgrade·The Home Creator Way

FOOD SLICER

Model:SL-520 SL520 SL-520A SL520A

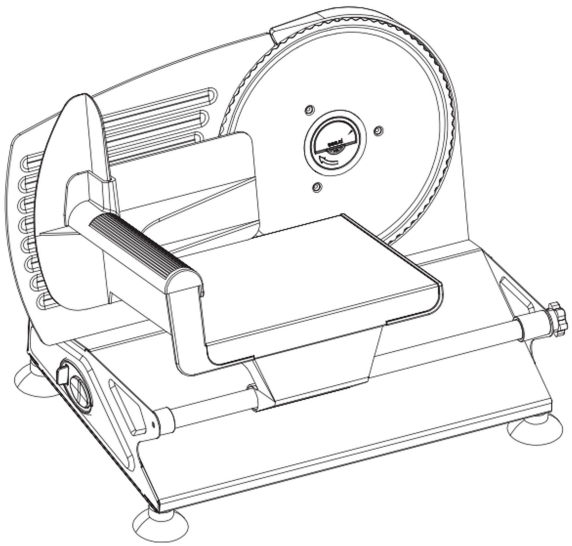

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

IMPORTANT SAFEGUARDS

	Warning-To reduce the risk of injury, user must read instructions manual carefully.

	Keep children away from the machine for fear of danger.
	Warning- For Indoor Use Only
	CORRECT DISPOSAL This product is subject to the provision of European Directive 2012/19/EU. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to collection point for recycling electrical and electronic devices.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed,including the following:

READ AND SAVE THESE INSTRUCTIONS

• Read all instructions before using.

• To protect against risk of electrical shock do not put power unit in water or other liquid.

• Close supervision is necessary when any appliance is used by or near children. Children should not use this appliance.

• Place On/Off switch in “OFF" position and remove cord plug from electrical outlet when not in use, before putting on or taking off parts and before cleaning. Do not pull power cord.

• Avoid contacting moving parts. Never feed food by hand. Always use

completely assembled slicer with food tray and food pusher.
• Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions or has been dropped or damaged in any manner. Do not service this product other than noted in this manual.
• The use of attachments not recommended or sold by manufacturer may result in injury.
• Do not use outdoors.
• Do not let cord hang over edge of table or countertop, or touch hot surfaces including the stove. Do not use an extension cord.
• Do not use appliance for other than intended use.Blade is sharp. Handle carefully when cleaning.
• The safety switch prevents accidental operation of the appliance.Do not defeat or bypass the safety switch.
• Appliance should not be used to cut frozen food or bones.
• Operate appliance only if the blade is properly locked and/or tightened.
• Always cut food with the slicer fully assembled.

THIS UNIT IS FOR, HOUSEHOLD USE ONLY

This product is not intended for commercial use. No user-serviceable parts inside. Do not attempt to service this product.

POLARIZED PLUG

This appliance has a polarized plug,(one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way.If the plug does not fit fully in the outlet, reverse the plug.If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature or modify the plug in any way. If the plug fits loosely into the AC outlet or if the AC outlet feels warm do not use that outlet.

SAVE THESE INSTRUCTIONS

DO NOT IMMERSE THE CORD IN WATER OR ANY OTHER LIQUID!

SAFETY INSTRUCTIONS

• If you ignore the safety instructions the manufacturer cannot be held responsible for damage.
• If the supply cord is damaged,it must be replaced by the manufacturer its service agent,or similarly qualified persons in order to avoid a hazard.
• Do not use this appliance with a damaged cord or plug or when the appliance has malfunctions or has been damaged in any manner.To avoid a hazard, make sure that a damaged cord or plug is replaced by a competent and qualified repair service.Do not repair this appliance yourself.
• Never move the appliance by pulling the cord and make sure the cord cannot become entangled.
• The appliance must be placed on a stable,level surface.
• This appliance is only to be used for household purposes and only for its intended purpose.
• The appliance can be used by children aged from8 years and above and persons with reduced physical,sensory or mental capabilities or lack of experience and knowledge if they are under supervision and have been given instruction concerning use of the appliance in a safe way and understand the hazards involved.Children must
not play with the appliance.Cleaning and user maintenance must not be carried out by children unless they are older than 8 years old and supervised.
• To protect yourself against an electric shock,do not immerse the cord,plug or appliance in water or any other liquid.
• Switch off the appliance and unplug from the power supply before changing accessories or handling parts that move in use.
• Always unplug the device if it is left unattended and before assembling, disassembling, or cleaning.
• Do not allow children to use the device without supervision.
• This appliance must be used with the sliding feed table and the piece holder in position unless this is not possible due to the size or shape of

food.
• Avoid accidents such as trips or falls by placing the cord in a safe position.
• If an extension cord is used,its capacity needs to be suitable for the appliance's power consumption.
• Do not operate the appliance with wet hands or while standing on a wet floor.Do not touch the power plug with wet hands.
• Do not open the appliance housing under any circumstances.Do not insert any foreign objects into the interior of the housing.
• Never use accessories that are not recommended by the manufacturer.They could pose a safety risk to the user and might damage the appliance. Only use original parts and accessories.
• Keep the appliance away from any hot surfaces and open flames. Always operate the appliance on a level,stable,clean,and dry surface. Protect the appliance against heat, dust, direct sunlight, moisture, drips, and splashing water.
• Do not place heavy objects on top of the appliance. Do not place objects with open flames, e.g.candles, on top of or beside the appliance. Do not place objects filled with water, e.g.vases, on or near the appliance.
• Do not pull the power cord to remove the plug from the electrical outlet and do not wrap the power cord around the appliance.
• Unplug the appliance from the electrical outlet when not in use and before cleaning.
• Switch off the appliance before changing accessories or handling parts that move during use.
• If the appliance should overheat, stop using the appliance and unplug from its electrical outlet.
• Never leave the appliance unattended during use.
• Dry the appliance and all accessories before connecting to the power supply and prior to attaching the accessories.
• Always turn the appliance off before disconnecting the power plug.
• Clean the appliance thoroughly prior to using it.
• During operation keep hands,hair clothing,and utensils away from the


cutting blade to avoid injuries and damage to the appliance.
• The appliance is only intended for short term operation. After an operation time of 5 minutes let it cool for at least 30 minutes. Do not overload the

SPECIFICATION

Model	SL-520 SL520 SL-520A SL520A
Rated Power	200W
Rated Input	AC120V 60Hz AC 220-240V 50/60Hz

PARTS DESCRIPTION

1	Support Plate
2	Blade
3	Blade Locking Screw
4	Power Cord
5	Base Assembly
6	Food Carriage
7	Slicing Guard
8	Dual-action On/Off switch
9	Thickness Adjustment Knob
10	Motor Assembly

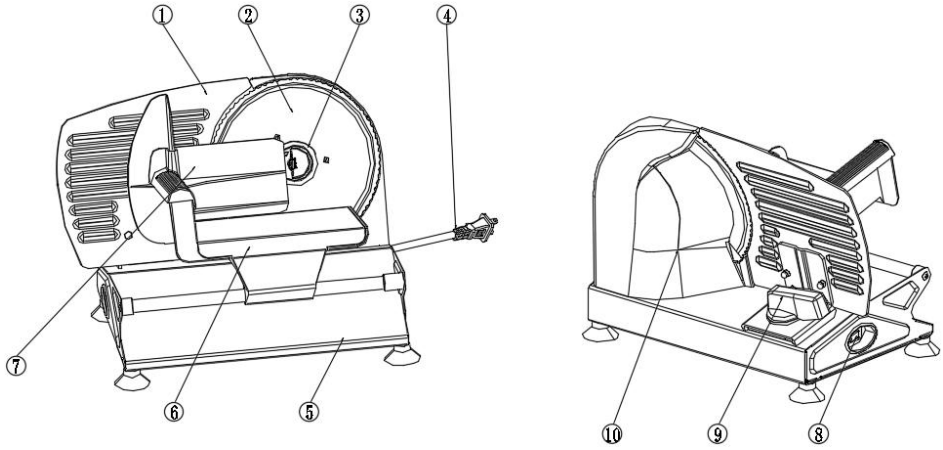

Take the appliance and accessories out of the box.Remove the stickers,protective foil or plastic from the device.

Check for the presence of all parts and for transport damage.In case of damages or incomplete delivery,please contact your dealer.

Put the power cable into the socket.(**Note:** Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage AC 120V 60Hz(AC 220-240V 50/60Hz) 200W.

Before using your appliance for the first time,wipe all removable parts with a damp cloth.Never use abrasive products.

Clean the whole appliance (see the cleaning section).

Place the appliance on a dry, flat, and stable surface.

Apply downward pressure onto the appliance so that the suction feet(7)get a good grip.

BEFORE THE FIRST USE

Use the setting button to choose the desired cutting width.

The cutting width is adjustable from 1 to 15mm. Slide the cradle to the left and place the food on the cradle.

Place the holder on the cradle;use this holder to push the food slightly against the back cover.

Activate the device by using the on/off switch which is located on the left side of the device.

NOTE: This appliance is equipped with a safety yourself then push simultaneously the on/off
switch and the appliance will start.By pushing the switch (A),first bring the safety switch towards on/off switch again the appliance will stop.
WARNING!Do not touch the blade,the blade is very sharp and can cause severe injury.
rotating blade. Catch the sliced food at the back of the device.
WARNING! Never use the device without the guard,you can seriously injure yourself.
When turning off the device the blade keeps turning for a while,so do not touch it.After 5 minutes of continued use,turn off the device and allow it to cool down,to prevent overheating of the motor.

CLEANING AND MAINTENANCE

Unplug the appliance and allow it to cool down. Use a soft,slightly damp cloth to wipe appliance surfaces.Do not allow water or any other liquid to get into the unit.
Before removing the blades,disconnect the power plug.
WARNING! Never touch the edges of the blades!Make sure the removed cutting knife cannot roll off the table!
Now you can clean the blade in soapy water,the blade is also dishwasher safe.
To put the cutting blade back into position,make sure the tabs on the blade match up to the appliance and put on the blade,lock the blade by turning the latch counterclockwise.

CLEANING THE TIE ROD AND BLADE GUARD

To disassemble the tie rod and blade guard:At the right side of the tie rod,you will find a hatch,slide this hatch to the right now you can take out the rod and you will be able to clean these parts.

WARNING!

Packaging materials are not toys. Children should not play with the

packaging materials as they pose a risk of swallowing and suffocation!

USE

Use the setting button to choose the desired cutting width.
The cutting width is adjustable from 1 to 15 mm. Slide the cradle to the left and place the food on the cradle.
Place the holder on the cradle;use this holder to push the food slightly against the back cover.
Activate the device by using the on/off switch which is located on the left side of the device.
NOTE: This appliance is equipped with a safety switch (A),first bring the safety switch towards yourself then push simultaneously the on/off switch and the appliance will start.By pushing the on/off switch again the appliance will stop.
WARNING!Do not touch the blade,the blade is very sharp and can cause severe injury.
Slide the tray slowly to the right against the rotating blade.Catch the sliced food at the back of the device.
WARNING! Never use the device without the guard,you can seriously injure yourself.

PLEASE NOTE THAT:

This appliance is only suitable for slicing food e.g. meats, cheeses,fruits, vegetables,breads,etc.The food to be sliced must be defrosted,unpackaged and deboned before it can be sliced with the appliance. Do not use it for slicing frozen food,bones, or for any other purpose.
This appliance is only suitable for private household use and it is not designed for commercial purposes.
This appliance is intended for dry indoor use only. Do not use the appliance outdoors.

HOT ROASTS — BEEF, PORK, LAMB, TURKEY, HAM

When slicing boneless roasts,remove from the oven and allow to cool for 15-20 minutes before
Cut the roast,if necessary,to fit onto the platform. Place foil underneath the platform table to catch juices and crumbs for easy cleanup(and treating yourself with the best pieces).
For rolled or tied roast,remove strings one at a time as the strings become closer to the blade (make sure the appliance is off).

CHEESE

Slice while well chilled.
serving,allow the cheese to reach room temperature.This will enhance the natural flavour. Some processed cheese may stick to the blade.
When necessary,turn the appliance off,wait for the blade to stop turning,and remove the plug. Wipe the blade with a damp cloth since moisture will help prevent the blade from sticking.

BACK BACON

Chill thoroughly before slicing. Some types of smoked bacon should have the fat removed.

COLD CUTS AND SANDWICH MEAT

Cold cuts of meat will last longer and will retain flavour longer if sliced when needed.
For best results,chill first.
Remove any plastic or hard casing before slicing. Use a constant,gentle pressure for uniform slices.

FRUITS AND VEGETABLES

Slice potatoes for thick or thin chips.
Slice carrots lengthwise in very thin strips. Soak in ice water to curl.Slice zucchini, eggplant, and squash.

BACK BACON

Chill thoroughly before slicing. Some types of smoked bacon should have the fat removed.

Cold Cuts and Sandwich Meat

Cold cuts of meat will last longer and will retain flavour longer if sliced when needed.

For best results,chill first. Remove any plastic or hard casing before slicing. Use a constant,gentle pressure for uniform slices.

FRUITS AND VEGETABLES

Slice potatoes for thick or thin chips.

Slice carrots lengthwise in very thin strips.Soak in ice water to curl.

Slice zucchini, eggplant, and squash.

CLEANING AND MAINTENANCE

Unplug the appliance and allow it to cool down. Use a soft,slightly damp cloth to wipe appliance surfaces.Do not allow water or any other liquid to get into the unit.

REMOVE THE CUTTING BLADE

Before removing the blades,disconnect the power plug.

WARNING! Never touch the edges of the blades! Make sure the removed cutting knife cannot roll off the table!Keep children at a safe distance! To remove the cutting blade.Push the ‘push button' in the middle of the cutting blade, a latch will come out;turn the latch clockwise to unlock the cutting blade.

Now you can clean the blade in soapy water,the blade is also dishwasher safe.

To put the cutting blade back into position,make sure the tabs on the blade match up to the appliance and put on the blade,lock the blade by turning the latch counter-clockwise

CLEANING THE TIE ROD AND BLADE GUARD

To disassemble the tie rod and blade guard: At the right side of the tie rod,you will find a hatch, slide this hatch to the right now you can take out the rod and you will be able to clean these parts.

PARTS	HOW TO CLEAN THEM?
Food holder	Remove and clean with soapy water. Rinse under tap water and dry thoroughly.
Sliding platform	Wipe with a soft cloth damped with some dish washing liquid.
Sliding food guide	Wipe with a clean cloth and dry thoroughly. Do not immerse in water or other liquids!

STORAGE AND DISPOSAL

STORAGE:

Store the appliance in a cool,dry,and clean place, out of the reach of children and pets.

Please keep the packaging for transporting the appliance or for storing your appliance when not in use for a prolonged time period.

PRODUCT DISPOSAL:

This product may not be disposed of with ordinary household waste,as electrical and electronic waste must be disposed of separately.

GuangZhou Superior Electric Industrial Co., Ltd.
Address: No.28,Huashan Road, Shilou Town, Panyu District, GUANGZHOU, -511447 China
E-mail: support@vevor.com



