VEVOR

Upgrade · The Home Creator Way


Countertop Blenders

MODEL:HS-608C

VEVOR
Upgrade·The Home Creator Way

Countertop Blenders

MODEL:HS-608C

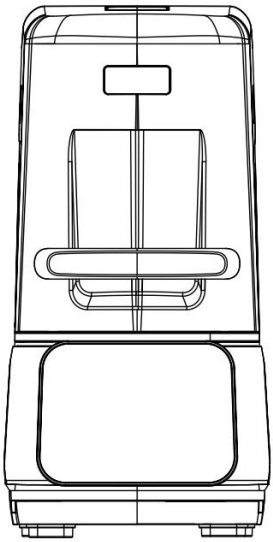

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

	Warning-To reduce the risk of injury, user must read instructions manual carefully.
	Indoor Use Only



CORRECT DISPOSAL

This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices

FCC Information:

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1) This product may cause harmful interference.

2)This product must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this product not expressly approved by the party.responsible for compliance could void the user's authority to operate the product.

Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television


	reception,which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures. · Reorient or relocate the receiving antenna. · Increase the distance between the product and receiver. · Connect the product to an outlet on a circuit different from that to which the receiver is connected. · Consult the dealer or an experienced radio/TV technician for assistance.

Introduction

Thank you for choosing our High Speed Blender.
All the staff of our company will serve you wholeheartedly.
In order to use this machine correctly and effectively, please readthis manual carefully before using.

Major Component Name

Pictures are for reference only,please referto the material object!

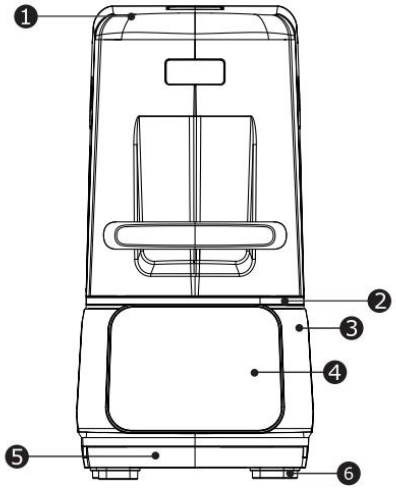

1.Soundproof Cover
2.Jar mat
3.Base Housing
4.Touch screen control
5.Base bottom
6. Rubber feet

The apparatus is intended to be used for domestic and similar applications as than:
kitchen employees in shops,offices and other workenvironments;
Farms;
By clients of hotels,motels and other residential-typeenvironments;
Bed and Breakfast type environments.

Points for Attention

WARNING:

1. Warning-To reduce the risk of injury, user must read instructions manual carefully.
2. The product complies with relevant standards and regulations. Installation of this device must comply with all applicable regulations, and it should only be operated in well-ventilated areas. Please read the user manual before installing and using this equipment.
3. This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. Children shall not play with the appliance.
5. This product shall not be used by children. Keep the appliance and its cord out of reach of children.
6. This product is intended to be used in household and similar applications
7. Please properly keep product. Check whether the product is abnormal before use. If it is abnormal, please stop using it.
8. Please use the product according to the intended use, warn of potential injury from misuse.
9. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Note:

◆Do not put metal objects such as knives,forks,spoons, etc.into the cup.

◆When cleaning,do not clean the knife directly by hand.If you use cleaning tools,please pay attention to safety.

◆ The contents of the cup should not be too full.Do not exceed two thirds of the capacity of the cup.

Please dose the lid of the cup when using.

◆ Before starting,make sure the cup is on the base. It is completely fixed on.

◆Because of the high horsepower,please hold the cup slightly when you start to use it.

◆Be sure to cover the cup when using the stirring bar while the motor is running.

◆Whether the cup is placed on the table or not.

Do not use your hand to fetch food from that cup because the blade is sharp and easy to cut.

◆To pour food out,remove the cup from the frame.

◆Be careful to touch the switch before and after start-up.

◆Utensils cannot be immersed in water.



Care should be taken when handling cutting blades especially when removing blades from containment cups,emptying containment cups,and during cleaning.

◆Remember to pull off the plug when not in use.

◆Do not lift the lid of the cup until the stirring knife has completely stopped rotating.

◆Be sure to separate the frame from the cup when cleaning and make sure to pull off the plug first.

◆Do not immerse the motor base in water or put it in the dishwasher for cleaning.


◆Keep a proper distance to prevent the child from improper movement and causing danger when the child is not allowed to be nearby during the start-up.

◆If the power cord is damaged,it must be replaced by a professional in the manufacturer's maintenance department or similar department in order to avoid danger.

Cleaning and Maintenance Methods

◆Always pull off the plug when cleaning and maintaining.
◆Carefully scrub the cup body and lid with a sponge or cloth and dry.
◆Do not put your hand into the cup for cleaning.
◆Wipe the rotating shaft and motor base with a dry cloth (remember!Do not rinse with water).
◆When it is not easy to wipe,wipe it with neutral lotion, and then wipe it with dry cloth until it is dlean.

Function Introduction

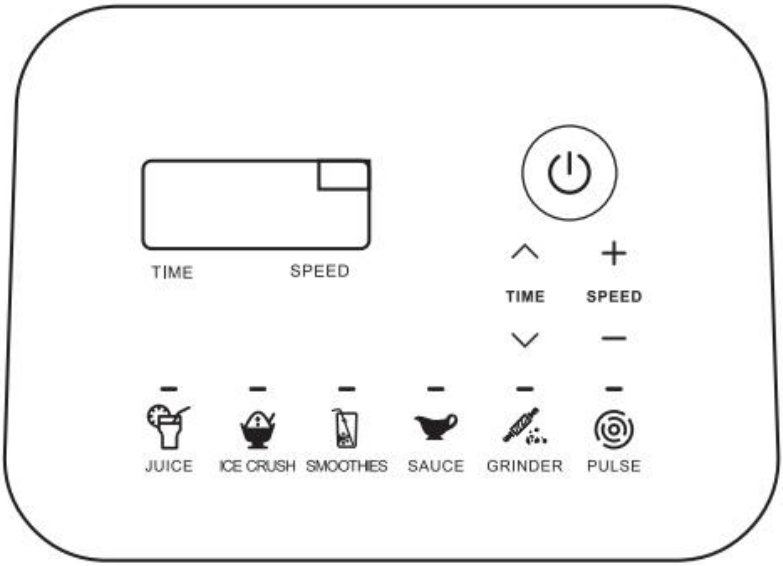

◆LED Display

◆ The system powers on,the buzzer emits a single sound,
and the entire screen(digtal tube and all indicator lights) is statically

illuminated for 2 seconds;then the 6 indicator lights are semi-lit(the color screen icons can be seen),and the 4-digt display shows "0000",indicating that the system is in standby mode.

◆ **Start/Cancel Button**

◆When in standby mode,select the desired working mode, and the corresponding indicator light will flash.Click the"On/Off Key",and the indicator light will remain on.The system will then enter this working mode and start working according to the corresponding program;if within 5 seconds,the "Start/Cancel Key"is not clicked,the indicator light will go off,and the system willautomatically return to the standby state.

◆When starting any working mode from the power on,click the "On/Off Key",and the buzzer willemit a single sound. The system willimmediately stop the current operation and exit the current working mode,returning to the standby state.

◆When starting the juice (JUICE), smoothie (ICE CRUSH),milkshake (SMOOTHIES), sauce(SAUCE), or grinder(GRINDER) working modes, no other keys can be pressedto change the working mode. For example, the "Time" and"Gear"keys cannot be used. Only the "On/Off Key" can beused to cancel the working mode and return to the standby state.

◆ **JUICE**

◆When the system is in standby mode, press the "Juice"button. The corresponding indicator light will flash. Thenclick the "On/Off Key"once. The indicator light will remainon and the system will start working.

◆Start working. The digital display shows a 30-second countdown. The motor operates at speed 1 for 3 seconds,then switches to speed 5 for 25 seconds, then switches to speed 2 for 2 seconds before ending.

◆ **ICE CRUSH**

◆When the system is in standby mode, press the "Ice"button. The

corresponding indicator light will flash and the buzzer will sound once. Then, click the "On/Off KeyKnob". The indicator light will remain on and the system will start working.

◆Start working.The digital display shows 40 seconds countdown.Motor starts in 1st gear for 1 second,then directly operates in 9th gear for 3 seconds,and the motor stops for 2 seconds(only after the motor has completely stopped can the next cycle of work begin).This cycle is repeated continuously for 7 cycles before ending.

◆  **SMOOTHIES**

◆ When the system is in standby mode, press the "Smoothie" button. The corresponding indicator light will flash and the buzzer will sound once. Then, click the "On/Off Key Knob".The indicator light will remain on and the system will start working.

◆ Start working. The digital display shows a countdown of 45 seconds. The motor operates at speed 1 for 2 seconds,then switches to speed 5 for 6 seconds, then to speed 9 for 12 seconds, and this cycle repeats by switching backto speed 1 for 2 seconds, then to speed '5 for 6 seconds,and to speed 9 until the end.

◆  **Sauce**

◆When the system is in standby mode, press the sauce button. The corresponding indicator light will flash and thebuzzer will sound once. Then, click the "On/Off key knob".The indicator light will remain on and the system will startworking.

◆Start working. The digital display shows 20 seconds countdown. The motor operates at speed 1 for 5 seconds,then switches to speed 5 for 10 seconds, then switches tospeed 3 for 5 seconds and finally stops.

◆ **GRINDER**

◆ When the system is in standby mode, press the grinding button. The corresponding indicator light will flash and the buzzer will sound once. Then click the "On/Off key" again.The indicator light will remain on and the system will start working.

◆ Start working. The digital display shows 040. The countdown begins. (The motor operates at 3rd gear for 5seconds, then switches to 9th gear for 15 seconds. This cycle repeats continuously for 2 times before the operation ends.)

◆ **PuLse**

◆ In the standby mode, press and hold the "PULSE" key for 2 seconds, and the motor will start working immediately.The 3-digit display shows the working time. The motor will first operate at 1 gear for 3 seconds, then switch to 9 gear.When the speed reaches 9 gear, it will continue to operat eat this speed. At any time during this period, if you release the key, the motor will immediately stop working.

◆ [Note: Each long press is limited to 30 seconds. After 30 seconds, it will automatically exit the working mode. You need to press the key again to enter the working mode.] When selecting the corresponding function, the 4-digitdisplay screen will show the corresponding time and gear.

◆Time

◆ Working process: When the icon key is touched for thefirst time, the default duration is 30 seconds. By pressing "+"or"-" to select the time, the duration can be increased or decreased by 10-90S After the 90S cycle,click the "U)"button again. When touch the Speed button by pressing "+"or "-"to select the speed, the durantion can be increased or decreased by 1-9 levels.

Important Guide

Automatic Overload Protection:
Your blender motor is designed to protect itself from overheating.
If the motor shuts off, follow these instructions:



OVERHEAT PROTECTION RESET BUTTON

◆Reduce the quantity of the ingredients in your container.
◆Press the overheat protection reset button under themotor base.
◆Turn off the the machine for up to 20 minutes to reset.
◆Reset time will be extended if high room temperatures exist.
◆To reduce the reset time, unplug the machine, remove the jug and blow air into the center section of the bottom with a fan or hair dryer on the cool setting.
◆Blend on higher speed to avoid overheating.
◆Blending on a low or medium speed can cause overheating.

Warranty

Claim according to current law.
Cash receipt with purchase date shall be enclosed with anyclaims.
When raising a claim the appliance must be returned to thestore of purchase.

Fault Analysis

Status	Cause	Solution

Not working	◆The powe is unplugged ◆ The protection device of themotor is disconnected	◆ Plug the plug into the socket with the correct voltage ◆ Put the main engine in ventilation places to cool for about 20 minutes
Over shaking	◆The main engine is imbalanced ◆ The conditioning cup is not completely.put into the main engine ◆ Over amount of ingredients	◆ Put the main engine in fat place ◆ Put the conditioning cup completely into the main engine ◆ Adjust the amount of ingredents
Water spilling from the lid	◆ The water exceeds the maximum ◆ The lid is not correctly covered	◆ Adjust the amount of water ◆Make sure the lid is correctly covered

Note:
Above are common trouble analysis and troubleshooting methods.For other troubles, please contact our customer service department, or go directly to our designated repair point for repair.
Do not dismantle and repair yourself.

Safety Instrutions

When the product will not be used for a long period of time,or if you are leaving for an extended absence, please unplug the power cord.
Even in standby mode, some parts remain energized, and insulation deterioration or electrical leakage may cause fire.
• Do not spray volatile oils, paints, or insecticides on the product.
Doing so may cause electric shock or fire.
Always unplug the power cord when the product is not in use for a long

time or when you are away.
Some parts remain energized in standby mode and may causefire due to insulation cracks or leakage.
• Do not pull the power cord when unplugging.
Always hold and pull the plug directly.
Ensure the power cord is plugged in securely before use.The plug must fit tightly into the socket with no looseness or incomplete insertion.
• Do not step on the power cord.
Damaging the power cord or socket can lead to electric shock, burns, or leakage.
If the power cord is damaged, it must be replaced by the manufacturer, a service agent, or a qualified technician to avoid danger.

Switch off the power when you are away or before going to sleep.
This reduces the risk of fire caused by wiring faults and helps save electricity.
• Do not expose the product to combustible substances or areas where mechanical oil vapors are present.
This can cause cracks, odors, or fire accidents.
• Do not use the product in damp areas such as bathrooms.
Moisture can cause poor insulation, leakage, or malfunction.
• Do not use damaged power cords or plugs.
This may result in electric shock, short circuit, or fire.
• Do not use multiple extension sockets or share outlets with other appliances.
Overloading may cause overheating or fire hazards.
• Do not unplug the power cord with wet hands.
Doing so may result in electric shock.

Safety Instrutions

To ensure safe use and avoid injury and property damage caused to you and others please do comply with the following safety precautions.

Any incorrect use due to non-compliance might lead to accidents

The following situations haven't been taken into consideration:

..... Use by un-attended children and the disabled

..... Children playing with the product

Meaning of the signs in the instructions:



Manufacturer: ZHONGSHAN CITY HAISHANG ELECTRIC APPLIANCE CO., LTD

Address: 401 Room, Building 1, No.18 Mincheng east Road, Jidong second community, Xiaolan Town, ZHONGSHAN CITY Guangdong Province, CHINA

E-mail: support@vevor.com



VEVOR

Upgrade · The Home Creator Way


Mélangeurs de comptoir

MODÈLE : HS-608C

VEVOR
Upgrade·The Home Creator Way

Countertop Blenders

MODÈLE : HS-608C

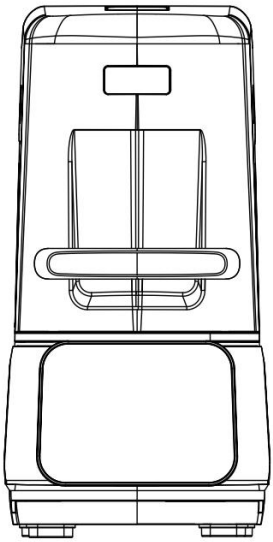

Voici le mode d'emploi original. Veuillez lire attentivement toutes les instructions du manuel avant utilisation. VEVOR se réserve le droit d'interpréter ce manuel à sa guise. L'apparence du produit que vous recevrez peut différer. Nous vous prions de nous excuser si nous ne vous informons pas des mises à jour techniques ou logicielles concernant notre produit.

	Avertissement – Afin de réduire les risques de blessure, l'utilisateur doit lire attentivement le manuel d'instructions.

	Usage intérieur uniquement
	**ÉLIMINATION CORRECTE** Ce produit est soumis aux dispositions de la directive européenne 2012/19/CE. Le symbole représentant une poubelle barrée indique que le produit doit être collecté séparément des déchets ménagers dans l'Union européenne. Ceci s'applique au produit et à tous les accessoires portant ce symbole. Les produits ainsi marqués ne doivent pas être jetés avec les ordures ménagères ordinaires, mais doivent être déposés dans un point de collecte pour le recyclage des appareils électriques et électroniques (EEED).
	**Informations de la FCC :** ATTENTION : Les changements ou modifications non expressément approuvés par la partie responsable de la conformité pourraient annuler le droit de l'utilisateur à utiliser l'équipement ! Cet appareil est conforme à la partie 15 des règles de la FCC. Son fonctionnement est soumis aux deux conditions suivantes : 1) Ce produit peut provoquer des interférences nuisibles. 2) Ce produit doit accepter toute interférence reçue, y compris les interférences pouvant entraîner un fonctionnement indésirable. **AVERTISSEMENT :** Toute modification apportée à ce produit sans l'autorisation expresse de la partie responsable de sa conformité peut annuler le droit de l'utilisateur à utiliser le produit. Remarque : Ce produit a été testé et déclaré conforme aux limites applicables aux appareils numériques de classe B, conformément à la partie 15 des règles de la FCC. Ces limites


	sont conçues pour offrir une protection raisonnable contre les interférences nuisibles dans une installation résidentielle. Ce produit génère, utilise et peut émettre de l'énergie radiofréquence. S'il n'est pas installé et utilisé conformément aux instructions, il peut causer des interférences nuisibles aux communications radio. Toutefois, il n'existe aucune garantie que des interférences ne se produiront pas dans une installation particulière. Si ce produit cause des interférences nuisibles à la réception radio ou télévisée (ce qui peut être déterminé en l'éteignant et en le rallumant), l'utilisateur est invité à essayer de corriger ces interférences en appliquant une ou plusieurs des mesures suivantes. • Réorienter ou déplacer l'antenne de réception. • Augmenter la distance entre le produit et le destinataire. • Branchez le produit sur une prise de courant d'un circuit différent de celui auquel le récepteur est branché. • Consultez votre revendeur ou un technicien radio/TV expérimenté pour obtenir de l'aide.

Introduction

Merci d'avoir choisi notre mixeur haute vitesse.
Tout le personnel de notre entreprise sera à votre service avec dévouement.
Afin d'utiliser cette machine correctement et efficacement, veuillez lire attentivement ce manuel avant utilisation .

Nom du composant principal

Les images sont données à titre indicatif uniquement, veuillez vous référer à l'objet réel !

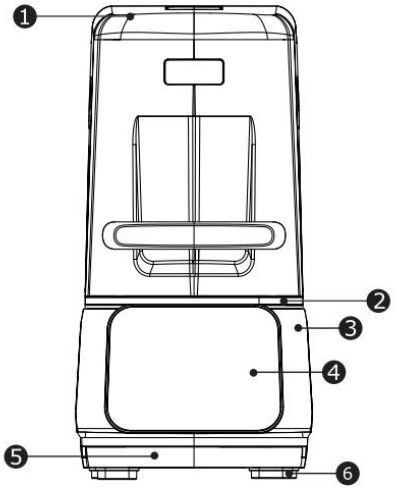

1. Insonorisé Couverture
2. Tapis pour pot
3. Logement de base
4. Écran tactile contrôle
5. Base bas
6. Caoutchouc pieds

L'appareil est destiné à un usage domestique et applications similaires à : employés de cuisine dans magasins, bureaux et autres environnements de travail ;
Fermes ;
Par les clients des hôtels, motels et autres environnements résidentiels ;
Environnements de type Bed and Breakfast .

Points à retenir

AVERTISSEMENT:

1. Avertissement - Afin de réduire les risques de blessure, l'utilisateur doit lire attentivement le manuel d'instructions.
2. Ce produit est conforme aux normes et réglementations en vigueur. Son installation doit respecter toutes les réglementations applicables et son utilisation doit se faire uniquement dans des zones bien ventilées. Veuillez lire attentivement le manuel d'utilisation avant d'installer et d'utiliser cet équipement.
3. Ce produit n'est pas destiné à être utilisé par des personnes (y compris les enfants) dont les capacités physiques, sensorielles ou mentales sont

réduites, ou qui manquent d'expérience et de connaissances, à moins qu'elles n'aient reçu la surveillance ou les instructions concernant l'utilisation de l'appareil de la part d'une personne responsable de leur sécurité.
4. Les enfants ne doivent pas jouer avec l'appareil.
5. Ce produit ne doit pas être utilisé par des enfants. Gardez l'appareil et son cordon hors de portée des enfants.
6. Ce produit est destiné à être utilisé dans des applications domestiques et similaires.
7. Veuillez conserver le produit correctement. Vérifiez son état avant utilisation. En cas d'anomalie, cessez immédiatement l'utilisation.
8. Veuillez utiliser le produit conformément à son usage prévu et prendre connaissance des risques de blessures liés à une mauvaise utilisation.
9. Si le cordon d'alimentation est endommagé, il doit être remplacé par le fabricant, son agent de service ou des personnes qualifiées de manière similaire afin d'éviter tout danger.

Note:

◆Ne mettez pas d'objets métalliques tels que des couteaux, des fourchettes, des cuillères, etc. dans la tasse.

◆Lors du nettoyage, ne nettoyez pas le couteau directement à la main. Si vous utilisez des outils de nettoyage, veuillez faire attention à la sécurité.

◆ Le contenu de la tasse ne doit pas être trop important. Ne pas dépasser les deux tiers de la capacité de la tasse.

Veuillez refermer le couvercle de la tasse avant utilisation.

◆ Avant de commencer, assurez-vous que la tasse est bien fixée sur la base.

◆En raison de sa puissance élevée, veuillez tenir légèrement la tasse lorsque vous commencez à l'utiliser.

◆Veillez à couvrir la tasse lorsque vous utilisez le barreau mélangeur pendant que le moteur est en marche.

◆Que la tasse soit posée sur la table ou non.

N’utilisez pas votre main pour prendre de la nourriture dans cette tasse car la lame est tranchante et facile à couper.

◆Pour verser les aliments, retirez la tasse de son support.
◆Veillez à toucher l’interrupteur avant et après le démarrage .
◆Les ustensiles ne peuvent pas être immergés dans l’eau .




Il convient d'être prudent lors de la manipulation lames de coupe, notamment lors du retrait des lames des godets de récupération, lors de la vidange récipients de confinement et pendant le nettoyage .
◆N'oubliez pas de débrancher l'appareil lorsqu'il n'est pas utilisé.
◆Ne soulevez pas le couvercle de la tasse tant que le couteau mélangeur n’a pas complètement cessé de tourner.
◆Veillez à séparer le cadre de la tasse lorsque Nettoyez et assurez-vous de retirer la prise au préalable.
◆Ne pas immerger le socle du moteur dans l'eau ni le mettre au lave-vaisselle pour le nettoyer.
◆Gardez une distance appropriée pour éviter que l'enfant ne soit inapte à… mouvement et causant un danger lorsque le L'enfant ne doit pas se trouver à proximité pendant le démarrage.
◆Si le cordon d'alimentation est endommagé, il doit être remplacé par un professionnel de la maintenance du fabricant département ou département similaire afin d'éviter tout danger .

Méthodes de nettoyage et d'entretien

◆Toujours retirer la prise lors du nettoyage et de l'entretien.
◆Frottez soigneusement le corps et le couvercle de la tasse avec une éponge ou un chiffon, puis séchez.
◆Ne mettez pas votre main dans la tasse pour la nettoyer.
◆Essuyez l'arbre rotatif et la base du moteur avec un chiffon sec (n'oubliez pas ! Ne rincez pas à l'eau).
◆S'il n'est pas facile de l'essuyer, essuyez-le avec une lotion neutre, puis essuyez-le avec un chiffon sec jusqu'à ce qu'il soit propre.

Présentation de la fonction

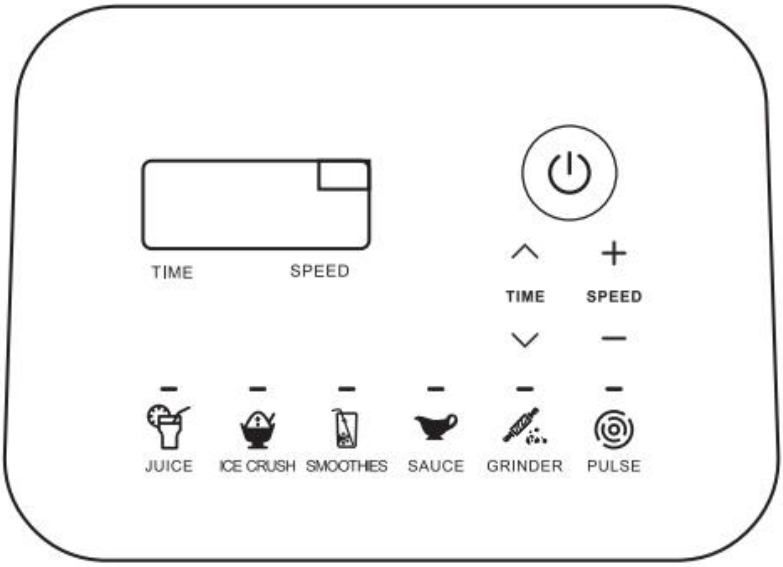

◆LED Afficher

◆ Le système s'allume, le buzzer émet un seul son,
et l'écran entier (tube numérique et tous les voyants) est illuminé de façon statique pendant 2 secondes ; puis les 6 voyants s'allument partiellement (les icônes couleur de l'écran sont visibles), et L'affichage à 4 chiffres indique « 0000 », ce qui signifie que le système est en mode veille.

◆ **Bouton Démarrer/Annuler**

◆Quand dans attendre mode,sélectionner le voulu fonctionnement En mode marche/arrêt, le voyant correspondant clignote. Appuyez sur la touche « Marche/Arrêt », et le voyant reste allumé. Le système passera alors en mode de fonctionnement et commencera à fonctionner. Conformément au programme correspondant ; si la touche « Démarrer/Annuler » n'est pas enfoncée dans les 5 secondes, le voyant s'éteint et le système revient automatiquement à l'état initial. état de veille.

◆Lors du démarrage de n'importe quel mode de fonctionnement à partir

de la mise sous tension, cliquez
La touche « Marche/Arrêt » est actionnée et un signal sonore retentit. Le système interrompt immédiatement l'opération en cours et quitte le mode de fonctionnement actuel pour revenir en mode veille. État.
◆Lors du démarrage des modes de fonctionnement jus (JUICE), smoothie (ICE CRUSH), milkshake (SMOOTHIES), sauce (SAUCE) ou broyeur (GRINDER), aucune autre touche ne peut être enfoncée pour changer de mode de fonctionnement. Par exemple, les touches « Heure » et « Vitesse » sont inutilisables. Seule la touche « Marche/Arrêt » permet de désactiver le mode de fonctionnement et de revenir à l'état de veille.

◆  **JUS**

◆ Lorsque le système est en veille, appuyez sur le bouton « Juice ». Le voyant correspondant clignote. Appuyez ensuite une fois sur le bouton « Marche/Arrêt ». Le voyant reste allumé et le système démarre.
◆Démarrez le travail. L'affichage numérique indique 30 secondes Compte à rebours. Le moteur fonctionne à la vitesse 1 pendant 3 secondes, puis passe à la vitesse 5 pendant 25 secondes, puis à la vitesse 2 pendant 2 secondes avant de s'arrêter.

◆  **GLACE ÉCRASER**

◆ Lorsque le système est en veille, appuyez sur le bouton « Ice ». Le voyant correspondant clignote et un signal sonore retentit. Appuyez ensuite sur le bouton marche/arrêt. Le voyant reste allumé et le système se met en marche.
◆Démarrez le fonctionnement. L'affichage numérique indique 40 secondes Compte à rebours. Le moteur démarre en première vitesse pendant 1 seconde, puis Le moteur fonctionne directement en 9e vitesse pendant 3 secondes, puis s'arrête pendant 2 secondes (uniquement après que le moteur ait complètement atteint sa vitesse maximale). (Le cycle de travail suivant peut commencer une fois arrêté.) Ce cycle est répété en

continu pendant 7 cycles avant de se terminer.

◆  SMOOTHIES

◆ Lorsque le système est en mode veille, appuyez sur le bouton « Smoothie ». Appuyez sur le bouton. Le voyant correspondant clignote et le buzzer retentit une fois. Appuyez ensuite sur le bouton marche/arrêt. Le voyant reste allumé et le système se met en marche.
◆ Commencez à travailler. L'affichage numérique indique un compte à rebours de 45. secondes. Le moteur fonctionne à la vitesse 1 pendant 2 secondes, puis passe à la vitesse 5 pendant 6 secondes, puis à la vitesse 9 pendant 12 secondes, et ce cycle se répète en revenant à la vitesse 1 pendant 2 secondes, puis à la vitesse 5 pendant 6 secondes, et à la vitesse 9 jusqu'à la fin.

◆  Sauce

◆ Lorsque le système est en veille, appuyez sur le bouton marche/arrêt. Le voyant correspondant clignote et un signal sonore retentit. Appuyez ensuite sur le bouton marche/arrêt. Le voyant reste allumé et le système se met en marche.
◆ Mise en marche. L'affichage numérique indique un compte à rebours de 20 secondes. Le moteur fonctionne à la vitesse 1 pendant 5 secondes, puis passe à la vitesse 5 pendant 10 secondes, puis à la vitesse 3 pendant 5 secondes et s'arrête finalement.

◆  BROYEUR

◆ Lorsque le système est en mode veille, appuyez sur le bouton de broyage bouton. Le voyant correspondant clignotera et le Un signal sonore retentit une fois. Appuyez ensuite de nouveau sur la touche « Marche/Arrêt ». Le voyant restera allumé et le système se mettra en

marche.

◆ Commencez à travailler. L'affichage numérique indique 0 40. Le compte à rebours commence. (Le moteur fonctionne en 3e vitesse pendant 5 secondes, puis passe en 9e vitesse pendant 15 secondes.) Le cycle se répète en continu 2 fois avant que l'opération ne prenne fin.

◆ **Pulse**

◆ En mode veille, maintenez la touche « PULSE » enfoncée pendant Au bout de 2 secondes, le moteur se met en marche immédiatement. L'affichage à 3 chiffres indique la durée de fonctionnement. Le moteur va Il fonctionnera d'abord en vitesse 1 pendant 3 secondes, puis passera en vitesse 9. Une fois la vitesse 9 atteinte, il continuera de fonctionner. Mangez à cette vitesse. À tout moment pendant cette période, si vous relâchez Si la clé est activée, le moteur s'arrêtera immédiatement de fonctionner.

◆ [Remarque : Chaque appui long est limité à 30 secondes. Après 30 secondes, Au bout de quelques secondes, il quittera automatiquement le mode de fonctionnement. [Il faut appuyer à nouveau sur la touche pour entrer en mode de fonctionnement.] Lors de la sélection de la fonction correspondante, l'écran d'affichage à 4 chiffres indiquera l'heure et le rapport engagés.

◆**Heure**

◆ Fonctionnement : Lors de la première pression sur l'icône, la durée par défaut est de 30 secondes. En appuyant sur « + » ou « - », la durée peut être modifiée. Après un cycle de 90 secondes, appuyez de nouveau sur le bouton « U ». Pour sélectionner la vitesse, appuyez sur « + » ou « - » afin d'augmenter ou de diminuer la durée de 1 à 9 niveaux.

Guide important

Protection automatique contre les surcharges :

Le moteur de votre mixeur est conçu pour se protéger contre la surchauffe. Si le moteur s'arrête, suivez ces instructions :



BOUTON DE RÉINITIALISATION DE LA PROTECTION CONTRE LA SURCHAUFFE

◆ Réduisez la quantité d'ingrédients dans votre récipient.

◆ Appuyez sur le bouton de réinitialisation de la protection contre la surchauffe situé sous la base du moteur.

◆ Éteignez la machine pendant 20 minutes maximum pour la réinitialiser.

◆ Le temps de réinitialisation sera prolongé en cas de températures ambiantes élevées.

◆ Pour réduire le temps de réinitialisation, débranchez la machine, retirez le pichet et souffler de l'air dans la partie centrale du fond avec un ventilateur ou sèche-cheveux en mode air froid.

◆ Mélanger à vitesse plus élevée pour éviter la surchauffe.

◆ Mélanger à vitesse faible ou moyenne peut provoquer une surchauffe.

Garantie

Réclamation conforme à la loi en vigueur.

Toute réclamation devra être accompagnée du reçu de paiement indiquant la date d'achat.

Lors du dépôt d'une réclamation, l'appareil doit être retourné au magasin où il a été acheté .

Faute Analyse

Statut	Cause	Solution
Pas fonctionnement	◆L'alimentation est débranchée ◆ Le dispositif de protection du moteur est déconnecté	◆ Branchez la fiche dans la prise. avec la tension correcte ◆ Placez le moteur principal dans un endroit ventilé pour qu'il refroidisse pendant environ 20 minutes.
Secousses excessives	◆Le moteur principal est déséquilibré ◆ La coupelle de conditionnement n'est pas complètement insérée dans le moteur principal ◆ Quantité excessive d'ingrédients	◆ Placez le moteur principal à l'endroit le plus large. ◆ Insérez complètement la coupelle de conditionnement dans le moteur principal. ◆ Ajuster la quantité d'ingrédients
De l'eau déborde du couvercle	◆ Le niveau d'eau dépasse le maximum ◆ Le couvercle n'est pas correctement fermé	◆ Ajuster la quantité d'eau ◆ Assurez-vous que le couvercle est correctement fermé.

Note:

Ci-dessus figurent l'analyse et le dépannage des problèmes courants. Pour tout autre problème, veuillez contacter notre service client. au département, ou rendez-vous directement à notre point de réparation désigné pour toute réparation.

Ne pas démonter et réparer soi-même.

Consignes de sécurité

Si vous n'utilisez pas le produit pendant une période prolongée ou si vous vous absentez pour une durée indéterminée, veuillez le débrancher. le cordon d'alimentation.
Même en mode veille, certaines pièces restent alimentées, et La détérioration de l'isolation ou une fuite électrique peuvent provoquer un incendie.
• Ne vaporisez pas d'huiles volatiles, de peintures ou d'insecticides sur le produit.
Cela pourrait provoquer un choc électrique ou un incendie.
Débranchez toujours le cordon d'alimentation lorsque le produit n'est pas utilisé. pendant une longue période ou lorsque vous êtes absent.
Certaines pièces restent sous tension en mode veille et peuvent provoquer un incendie en raison de fissures ou de fuites dans l'isolation.
• Ne tirez pas sur le cordon d'alimentation lorsque vous débranchez la machine.
Tenez toujours la prise et tirez-la directement.
Avant utilisation, assurez-vous que le cordon d'alimentation est correctement branché. La fiche doit s'insérer fermement dans la prise, sans jeu ni insertion incomplète.
• Ne marchez pas sur le cordon d'alimentation.
Endommager le cordon d'alimentation ou la prise peut entraîner un choc électrique, des brûlures ou une fuite de courant.
Si le cordon d'alimentation est endommagé, il doit être remplacé par le le fabricant, un agent de service ou un technicien qualifié afin d'éviter tout danger.

Coupez l'alimentation lorsque vous vous absentez ou avant de vous rendre à dormir.
Cela réduit le risque d'incendie causé par des défauts de câblage et contribue à économiser l'électricité.
• Ne pas exposer le produit à des substances combustibles ou zones où

des vapeurs d'huile mécanique sont présentes.
Cela peut provoquer des fissures, des odeurs ou des incendies.
• Ne pas utiliser ce produit dans des endroits humides comme les salles de bains.
L'humidité peut entraîner une mauvaise isolation, des fuites ou un dysfonctionnement.
• N'utilisez pas de cordons d'alimentation ou de prises endommagés.
Cela peut entraîner un choc électrique, un court-circuit ou un incendie.
• N'utilisez pas plusieurs multiprises ni ne partagez les prises de courant avec plusieurs autres appareils. autres appareils.
Une surcharge peut entraîner une surchauffe ou des risques d'incendie.
• Ne débranchez pas le cordon d'alimentation avec les mains mouillées.
Cela pourrait entraîner un choc électrique.

Consignes de sécurité

Pour garantir une utilisation en toute sécurité et éviter les blessures et les dommages matériels qui pourraient vous être causés. et autres, veuillez respecter les consignes de sécurité suivantes.
Toute utilisation incorrecte due à un non-respect des consignes peut entraîner des accidents.

Les situations suivantes n'ont pas été prises en compte :
..... Utilisation par des enfants non accompagnés et des personnes handicapées
..... Des enfants qui jouent avec le produit

Signification des symboles dans les instructions :



Fabricant : ZHONGSHAN CITY HAISHANG ELECTRIC APPLIANCE CO., LTD

Adresse : Pièce 401, Bâtiment 1, n° 18, route Mincheng Est, deuxième communauté de Jidong, ville de Xiaolan, ville de Zhongshan, province du Guangdong , Chine
Courriel : support@vevor.com



VEVOR

Upgrade · The Home Creator Way


Standmixer

MODELL: HS-608C

VEVOR
Upgrade·The Home Creator Way

Countertop Blenders

MODELL: HS-608C

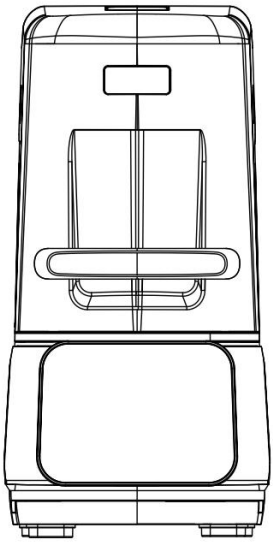

Dies ist die Originalanleitung. Bitte lesen Sie die gesamte Bedienungsanleitung vor der Inbetriebnahme sorgfältig durch. VEVOR behält sich die Auslegung der Bedienungsanleitung vor. Das Aussehen des Produkts kann von dem gelieferten Produkt abweichen. Wir bitten um Verständnis, dass wir Sie nicht erneut über etwaige Technologie- oder Software-Updates informieren werden .

	Warnung – Um das Verletzungsrisiko zu verringern, muss der Benutzer die Bedienungsanleitung sorgfältig lesen.

	Nur für den Innenbereich geeignet
	**KORREKTE ENTSORGUNG** Dieses Produkt unterliegt den Bestimmungen der europäischen Richtlinie 2012/19/EG. Das Symbol einer durchgestrichenen Mülltonne weist darauf hin, dass das Produkt in der Europäischen Union separat entsorgt werden muss. Dies gilt für das Produkt und sämtliches Zubehör, das mit diesem Symbol gekennzeichnet ist. Produkte dieser Art dürfen nicht im normalen Hausmüll entsorgt werden, sondern müssen zu einer Sammelstelle für das Recycling von Elektro- und Elektronikgeräten gebracht werden.
	**FCC-Informationen:** VORSICHT: Änderungen oder Modifikationen, die nicht ausdrücklich von der für die Einhaltung der Vorschriften verantwortlichen Partei genehmigt wurden, können zum Erlöschen der Berechtigung des Benutzers zum Betrieb des Geräts führen! Dieses Gerät entspricht Teil 15 der FCC-Bestimmungen. Der Betrieb unterliegt den folgenden zwei Bedingungen: 1) Dieses Produkt kann schädliche Störungen verursachen. 2) Dieses Produkt muss alle empfangenen Störungen akzeptieren, einschließlich solcher, die einen unerwünschten Betrieb verursachen können. **WARNUNG:** Änderungen oder Modifikationen an diesem Produkt, die nicht ausdrücklich von der für die Einhaltung der Vorschriften verantwortlichen Partei genehmigt wurden, können zum Verlust der Berechtigung des Benutzers zum Betrieb des Produkts führen. Hinweis: Dieses Produkt wurde getestet und entspricht den Grenzwerten für ein digitales Gerät der Klasse B gemäß Teil


	15 der FCC-Bestimmungen. Diese Grenzwerte sollen einen angemessenen Schutz vor schädlichen Störungen in Wohngebieten gewährleisten. Dieses Produkt erzeugt, verwendet und kann Hochfrequenzenergie abstrahlen. Bei nicht vorschriftsmäßiger Installation und Verwendung kann es Störungen des Funkverkehrs verursachen. Es kann jedoch nicht ausgeschlossen werden, dass in bestimmten Fällen Störungen auftreten. Sollte dieses Produkt Störungen beim Radio- oder Fernsehempfang verursachen (was durch Ein- und Ausschalten des Produkts festgestellt werden kann), wird dem Benutzer empfohlen, die Störung durch eine oder mehrere der folgenden Maßnahmen zu beheben. • Die Empfangsantenne neu ausrichten oder an einem anderen Ort aufstellen. • Vergrößern Sie den Abstand zwischen Produkt und Empfänger. • Schließen Sie das Produkt an eine Steckdose an, die zu einem anderen Stromkreis gehört als der, an dem der Empfänger angeschlossen ist. • Wenden Sie sich an Ihren Händler oder einen erfahrenen Radio-/Fernsehtechniker, um Unterstützung zu erhalten.

Einführung

Vielen Dank, dass Sie sich für unseren Hochleistungsmixer entschieden haben.
Alle Mitarbeiter unseres Unternehmens werden Ihnen mit vollem Einsatz zur Seite stehen.
Um diese Maschine richtig und effektiv nutzen zu können, lesen Sie bitte diese Bedienungsanleitung vor der Benutzung sorgfältig durch .

Name der Hauptkomponente

Die Abbildungen dienen nur als Referenz, bitte beachten Sie das tatsächliche Produkt!

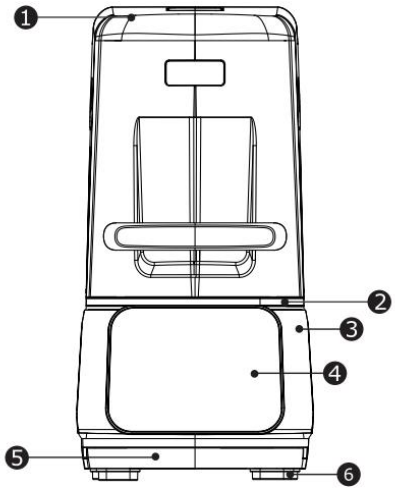

1. Schalldicht Abdeckung
2. Glasmatte
3. Basisgehäuse
4. Touchscreen Kontrolle
5. Basis unten
6. Gummi Füße

Das Gerät ist für den Hausgebrauch bestimmt und ähnliche Anwendungen wie :
Küchenangestellte in Geschäfte, Büros und andere Arbeitsumgebungen ;
Bauernhöfe ;
Von Gästen von Hotels, Motels und anderen Unterkünften ;
Bed-and-Breakfast-ähnliche Umgebungen .

Wichtige Hinweise

WARNUNG:

1. Warnung – Um das Verletzungsrisiko zu verringern, muss der Benutzer die Bedienungsanleitung sorgfältig lesen.
2. Das Produkt entspricht den geltenden Normen und Vorschriften. Die Installation dieses Geräts muss allen anwendbaren Vorschriften entsprechen und es darf nur in gut belüfteten Bereichen betrieben werden.

Bitte lesen Sie die Bedienungsanleitung vor der Installation und Inbetriebnahme des Geräts.
3. Dieses Produkt ist nicht für die Verwendung durch Personen (einschließlich Kinder) mit eingeschränkten physischen, sensorischen oder geistigen Fähigkeiten oder mangelnder Erfahrung und Kenntnis bestimmt, es sei denn, sie werden von einer für ihre Sicherheit verantwortlichen Person beaufsichtigt oder in die Verwendung des Geräts eingewiesen.
4. Kinder dürfen nicht mit dem Gerät spielen.
5. Dieses Produkt darf nicht von Kindern benutzt werden. Bewahren Sie das Gerät und das Netzkabel außerhalb der Reichweite von Kindern auf.
6. Dieses Produkt ist für den Einsatz im Haushalt und in ähnlichen Anwendungen bestimmt.
7. Bitte bewahren Sie das Produkt ordnungsgemäß auf. Prüfen Sie vor Gebrauch, ob das Produkt Mängel aufweist. Sollte es Mängel aufweisen, stellen Sie die Verwendung bitte ein.
8. Bitte verwenden Sie das Produkt nur gemäß dem vorgesehenen Verwendungszweck. Wir weisen auf mögliche Verletzungen durch unsachgemäße Verwendung hin.
9. Wenn das Netzkabel beschädigt ist, muss es vom Hersteller, seinem Kundendienst oder einer ähnlich qualifizierten Person ersetzt werden, um eine Gefährdung zu vermeiden.

Notiz:

◆Legen Sie keine Metallgegenstände wie Messer, Gabeln, Löffel usw. in die Tasse.

◆Reinigen Sie das Messer nicht direkt mit der Hand. Achten Sie bei der Verwendung von Reinigungswerkzeugen auf die Sicherheit.

◆ Der Inhalt der Tasse sollte nicht zu voll sein. Füllen Sie die Tasse nicht mehr als zu zwei Drittel ihres Fassungsvermögens.
Bitte den Deckel des Bechers vor Gebrauch befeuchten.

◆ Stellen Sie vor dem Starten sicher, dass die Tasse fest auf dem Sockel steht.

◆Aufgrund der hohen Leistung halten Sie den Becher bitte beim ersten Gebrauch leicht fest.

◆Achten Sie darauf, den Becher abzudecken, wenn Sie den Rührstab bei laufendem Motor verwenden.
◆Ob die Tasse auf dem Tisch steht oder nicht.
Benutzen Sie nicht Ihre Hand, um Essen aus dem Becher zu holen, da die Klinge scharf ist und man sich leicht schneiden kann.
◆Zum Ausgießen des Essens den Becher aus dem Gestell nehmen.
◆Achten Sie darauf, den Schalter vor und nach dem Einschalten nicht zu berühren .
◆Das Geschirr darf nicht in Wasser eingetaucht werden .




Beim Umgang ist Vorsicht geboten. Schneidklingen, insbesondere beim Entnehmen der Klingen aus den Auffangbechern, beim Entleeren Auffangbecher und während der Reinigung .
◆Denken Sie daran, den Stecker zu ziehen, wenn das Gerät nicht benutzt wird.
◆Heben Sie den Deckel des Bechers erst an, wenn sich das Rührmesser vollständig nicht mehr dreht.
◆Achten Sie darauf, den Rahmen vom Becher zu trennen, wenn Reinigen Sie die Reinigung und ziehen Sie vorher unbedingt den Stecker heraus.
◆Tauchen Sie den Motorsockel nicht in Wasser ein und geben Sie ihn nicht zur Reinigung in die Spülmaschine.
◆Halten Sie ausreichend Abstand, um zu verhindern, dass das Kind unsachgemäß behandelt wird. Bewegung und Gefahr verursachen, wenn die Kinder dürfen sich während des Startvorgangs nicht in der Nähe aufhalten.
◆Wenn das Netzkabel beschädigt ist, muss es ersetzt werden. durch einen Fachmann für die Wartung gemäß Herstellerangaben Abteilung oder ähnliche Abteilung, um Gefahren abzuwenden .

Reinigungs- und Wartungsmethoden

◆Ziehen Sie beim Reinigen und Warten immer den Stecker heraus.
◆ Den Becherkörper und den Deckel sorgfältig mit einem Schwamm oder Tuch abreiben und trocknen.
◆Führen Sie zum Reinigen nicht Ihre Hand in die Tasse.
◆Die rotierende Welle und den Motorsockel mit einem trockenen Tuch abwischen (Achtung! Nicht mit Wasser abspülen).
◆Wenn sich der Fleck nicht leicht abwischen lässt, tupfen Sie ihn mit einer neutralen Lotion ab und wischen Sie ihn anschließend mit einem trockenen Tuch ab, bis er sauber ist.

Funktionsbeschreibung

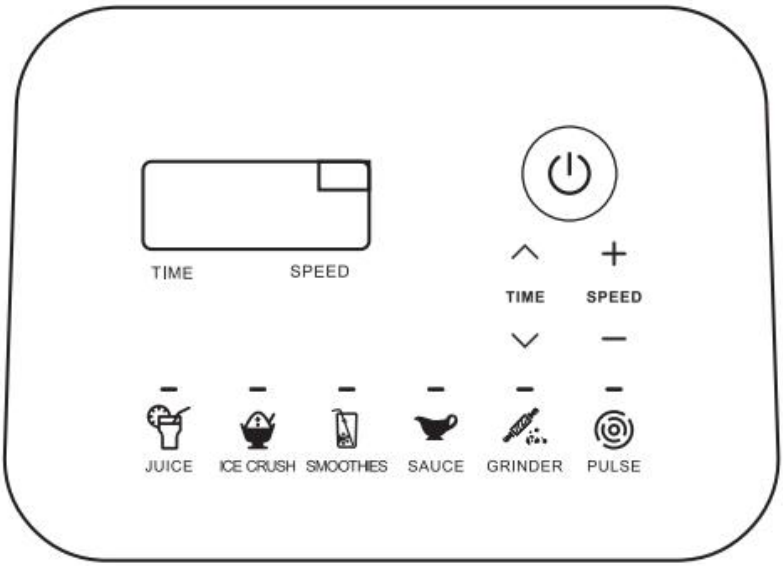

◆LED Anzeige

◆ Das System schaltet sich ein, der Summer gibt einen einzelnen Ton von sich,
und der gesamte Bildschirm (Digitalröhre und alle Kontrollleuchten) leuchtet 2 Sekunden lang statisch auf; dann leuchten die 6 Kontrollleuchten halb auf (die Farbsymbole des Bildschirms sind sichtbar), und Die 4-stellige Anzeige zeigt „0000“ an, was darauf hinweist, dass das

System befindet sich im Standby-Modus.

◆ **Start-/Abbrechen-Taste**

◆Wenn In stehen zu Modus auswählen Die gewünscht Arbeiten Im Modus blinkt die entsprechende Kontrollleuchte. Durch Drücken der „Ein/Aus“-Taste bleibt die Kontrollleuchte dauerhaft an. Das System wechselt dann in diesen Arbeitsmodus und beginnt zu arbeiten. Gemäß dem entsprechenden Programm gilt: Wenn innerhalb von 5 Sekunden die „Start/Abbrechen“-Taste nicht gedrückt wird, erlischt die Kontrollleuchte und das System kehrt automatisch zum vorherigen Zustand zurück. Standby-Zustand.

◆Beim Starten eines beliebigen Arbeitsmodus nach dem Einschalten klicken Sie

Durch Drücken der Ein-/Aus-Taste ertönt ein einzelner Signalton. Das System beendet daraufhin sofort den aktuellen Betrieb, verlässt den aktuellen Arbeitsmodus und kehrt in den Standby-Modus zurück. Zustand.

◆Beim Starten der Betriebsmodi Saft (JUICE), Smoothie (ICE CRUSH), Milchshake (SMOOTHIES), Soße (SAUCE) oder Zerkleinern (GRINDER) können keine anderen Tasten gedrückt werden, um den Betriebsmodus zu ändern. Beispielsweise können die Tasten „Zeit“ und „Getriebe“ nicht verwendet werden. Nur die „Ein/Aus-Taste“ kann verwendet werden, um den Arbeitsmodus zu beenden und in den Standby-Modus zurückzukehren.

◆ **SAFT**

◆Wenn sich das System im Standby-Modus befindet, drücken Sie die Taste „Juice“. Die zugehörige Kontrollleuchte blinkt. Drücken Sie anschließend einmal die Taste „Ein/Aus“. Die Kontrollleuchte leuchtet nun dauerhaft und das System ist betriebsbereit.

◆Starten Sie die Arbeit. Das Digitaldisplay zeigt 30 Sekunden an. Countdown. Der Motor läuft 3 Sekunden lang mit Geschwindigkeit 1, dann 25 Sekunden lang mit Geschwindigkeit 5 und anschließend 2 Sekunden

lang mit Geschwindigkeit 2, bevor er endet.

◆  EIS ZERQUETSCHEN

◆Wenn sich das System im Standby-Modus befindet, drücken Sie die Taste „Ice“. Die zugehörige Kontrollleuchte blinkt und ein Signalton ertönt. Drücken Sie anschließend den Ein-/Ausschalter. Die Kontrollleuchte bleibt an und das System ist betriebsbereit.

◆Arbeiten Sie jetzt. Die Digitalanzeige zeigt an 40 Sekunden Countdown. Der Motor startet im 1. Gang für 1 Sekunde, dann Der Motor läuft direkt im 9. Gang für 3 Sekunden und stoppt dann für 2 Sekunden (erst nachdem der Motor vollständig abgeschaltet hat). Nach dem Stopp kann der nächste Arbeitszyklus beginnen. Dieser Zyklus wird siebenmal ununterbrochen wiederholt, bevor er endet.

◆  SMOOTHIES

◆ Wenn sich das System im Standby-Modus befindet, drücken Sie die Taste „Smoothie“. Drücken Sie den Knopf. Die zugehörige Kontrollleuchte blinkt und ein Signalton ertönt. Drücken Sie anschließend den Ein-/Ausschalter. Die Kontrollleuchte bleibt an und das System ist betriebsbereit.

◆ Beginnen Sie mit der Arbeit. Das Digitaldisplay zeigt einen Countdown von 45 Sekunden an. Sekunden. Der Motor läuft 2 Sekunden lang mit Geschwindigkeit 1, dann schaltet er für 6 Sekunden auf Geschwindigkeit 5, dann für 12 Sekunden auf Geschwindigkeit 9, und dieser Zyklus wiederholt sich, indem er wieder für 2 Sekunden auf Geschwindigkeit 1, dann für 6 Sekunden auf Geschwindigkeit 5 und schließlich wieder auf Geschwindigkeit 9 schaltet, bis zum Ende.

◆  Soße

◆Wenn sich das System im Standby-Modus befindet, drücken Sie die Saucentaste. Die zugehörige Kontrollleuchte blinkt und ein Signalton ertönt. Drücken Sie anschließend den Ein-/Ausschalter. Die Kontrollleuchte bleibt an und das System ist betriebsbereit.
◆Starten Sie den Betrieb. Das Digitaldisplay zeigt einen 20-Sekunden-Countdown an. Der Motor läuft 5 Sekunden lang mit Stufe 1, dann 10 Sekunden lang mit Stufe 5, anschließend 5 Sekunden lang mit Stufe 3 und stoppt schließlich.

◆  MÜLLMAHLUNG

◆ Wenn sich das System im Standby-Modus befindet, drücken Sie die Schleiftaste. Drücken Sie die Taste. Die zugehörige Kontrollleuchte blinkt und die Ein Summer ertönt einmal. Drücken Sie anschließend erneut die Ein-/Aus-Taste. Die Kontrollleuchte bleibt an und das System ist betriebsbereit.
◆ Beginnen Sie mit der Arbeit. Die Digitalanzeige zeigt 0 40 an. Der Countdown beginnt. (Der Motor läuft 5 Sekunden lang im 3. Gang, dann schaltet er für 15 Sekunden in den 9. Gang.) Der Zyklus wiederholt sich zweimal ununterbrochen, bevor der Vorgang beendet ist.)

◆  Puls

◆ Im Standby-Modus die Taste „PULSE“ gedrückt halten für Nach 2 Sekunden startet der Motor sofort. Die 3-stellige Anzeige zeigt die Betriebszeit an. Der Motor wird Zuerst 3 Sekunden lang im 1. Gang fahren, dann in den 9. Gang schalten. Sobald die Geschwindigkeit den 9. Gang erreicht hat, fährt das Gerät weiter. Nehmen Sie diese Geschwindigkeit ein. Wenn Sie zu irgendeinem Zeitpunkt während dieses Zeitraums freisetzen Wenn Sie den Schlüssel ziehen, hört der Motor sofort auf zu funktionieren.
◆ [Hinweis: Jeder lange Druck ist auf 30 Sekunden begrenzt. Nach 30 Sekunden Nach wenigen Sekunden wird der Arbeitsmodus automatisch beendet. Die Taste muss erneut gedrückt werden, um in den Arbeitsmodus

zu gelangen. Bei Auswahl der entsprechenden Funktion werden auf dem 4-stelligen Display die entsprechende Uhrzeit und der Gang angezeigt.

◆Zeit

◆ Funktionsweise: Beim ersten Berühren der Symboltaste beträgt die Standarddauer 30 Sekunden. Durch Drücken von „+“ oder „-“ kann die Dauer ausgewählt werden. Die Dauer kann um 10–90 Sekunden erhöht oder verringert werden. Nach dem 90-Sekunden-Zyklus drücken Sie erneut die Taste „U“. Durch Drücken der Tasten „+“ oder „-“ kann die Geschwindigkeit ausgewählt und die Dauer in 9 Stufen erhöht oder verringert werden.

Wichtiger Leitfaden

Automatischer Überlastungsschutz:
Der Motor Ihres Mixers ist so konstruiert, dass er sich selbst vor Überhitzung schützt.
Sollte der Motor ausfallen, befolgen Sie diese Anweisungen:



ÜBERHITZESCHUTZ-RÜCKSETZTASTE

◆ Reduzieren Sie die Menge der Zutaten in Ihrem Behälter.

◆ Drücken Sie die Reset-Taste für den Überhitzungsschutz unterhalb des Motorsockels.

◆ Schalten Sie die Maschine für bis zu 20 Minuten aus, um sie zurückzusetzen.

◆ Die Reset-Zeit verlängert sich bei hohen Raumtemperaturen.
◆ Um die Reset-Zeit zu verkürzen, trennen Sie das Gerät vom Stromnetz und entfernen Sie die Nehmen Sie den Krug und blasen Sie mit einem Luftgewehr Luft in den mittleren Bereich des Bodens. Ventilator oder Haartrockner auf Kaltstufe.
◆ Um eine Überhitzung zu vermeiden, mit höherer Geschwindigkeit mixen.
◆ Mixen bei niedriger oder mittlerer Geschwindigkeit kann zu Überhitzung führen.

Garantie

Anspruch gemäß geltendem Recht.
Der Kassenbon mit Kaufdatum muss allen Reklamationen beigefügt werden.
Bei Geltendmachung eines Anspruchs muss das Gerät an das Geschäft zurückgegeben werden, in dem es gekauft wurde .

Fehler Analyse

Status	Ursache	Lösung
Nicht Arbeiten	◆Der Stromanschluss ist getrennt ◆ Die Schutzvorrichtung des Motors Ist getrennt	◆ Stecken Sie den Stecker in die Steckdose. mit der richtigen Spannung ◆ Den Hauptmotor etwa 20 Minuten lang an einem gut belüfteten Ort abkühlen lassen.
Übersch ütten	◆Der Hauptmotor ist unausgewogen ◆ Der Konditionierungsbecher ist nicht vollständig in den	◆ Platziere den Hauptmotor an der Fettstelle ◆ Setzen Sie den Konditionierungsbecher

	Hauptmotor eingesetzt. ◆ Zu große Menge an Zutaten	vollständig in den Hauptmotor ein. ◆ Passen Sie die Menge der Zutaten an
Wasser läuft aus dem Deckel	◆ Der Wasserstand überschreitet das Maximum ◆ Der Deckel ist nicht richtig geschlossen.	◆ Wassermenge anpassen ◆Stellen Sie sicher, dass der Deckel richtig verschlossen ist.

Notiz:
Oben finden Sie häufige Fehleranalyse- und Fehlerbehebungsmaßnahmen. Bei weiteren Problemen wenden Sie sich bitte an unseren Kundenservice. oder begeben Sie sich direkt zu unserer dafür vorgesehenen Reparaturstelle.
Die Demontage und Reparatur sollte nicht selbst durchgeführt werden.

Sicherheitshinweise

Wenn das Produkt längere Zeit nicht benutzt wird oder Sie für längere Zeit abwesend sind, ziehen Sie bitte den Netzstecker. das Netzkabel.
Selbst im Standby-Modus bleiben einige Teile unter Spannung, und Durch beschädigte Isolierung oder elektrische Leckagen können Brände entstehen.
• Sprühen Sie keine flüchtigen Öle, Farben oder Insektizide auf die Produkt.
Dies kann zu Stromschlägen oder Bränden führen.
Ziehen Sie immer den Netzstecker, wenn das Produkt nicht benutzt wird. für eine längere Zeit oder wenn Sie abwesend sind.
Einige Teile bleiben im Standby-Modus unter Spannung und können aufgrund von Isolationsrissen oder Leckagen einen Brand verursachen.
• Ziehen Sie beim Ausstecken nicht am Netzkabel.
Den Stecker immer direkt anfassen und herausziehen.
Vor der Benutzung sicherstellen, dass das Netzkabel fest eingesteckt ist.

Der Stecker muss fest in der Steckdose sitzen, ohne Wackeln oder unvollständiges Einstecken.
• Treten Sie nicht auf das Netzkabel.
Eine Beschädigung des Netzkabels oder der Steckdose kann zu Stromschlägen, Verbrennungen oder Leckagen führen.
Wenn das Netzkabel beschädigt ist, muss es ersetzt werden. Wenden Sie sich an den Hersteller, einen Servicepartner oder einen qualifizierten Techniker, um Gefahren zu vermeiden.

Schalten Sie den Strom ab, wenn Sie weggehen oder bevor Sie gehen. schlafen.
Dadurch wird das Risiko von Bränden durch Verkabelungsfehler verringert und Strom gespart.
• Setzen Sie das Produkt keinen brennbaren Stoffen aus oder Bereiche, in denen mechanische Öldämpfe vorhanden sind.
Dies kann zu Rissen, Gerüchen oder Bränden führen.
• Das Produkt darf nicht in feuchten Bereichen wie Badezimmern verwendet werden.
Feuchtigkeit kann zu schlechter Isolierung, Leckagen oder Funktionsstörungen führen.
• Beschädigte Netzkabel oder Stecker dürfen nicht verwendet werden.
Dies kann zu Stromschlag, Kurzschluss oder Brand führen.
• Verwenden Sie nicht mehrere Verlängerungssteckdosen oder teilen Sie Steckdosen mit anderen Personen. andere Geräte.
Eine Überlastung kann zu Überhitzung oder Brandgefahr führen.
• Ziehen Sie das Netzkabel nicht mit nassen Händen heraus.
Dies kann zu einem Stromschlag führen.

Sicherheitshinweise

Um eine sichere Nutzung zu gewährleisten und Verletzungen sowie Sachschäden zu vermeiden, die Ihnen entstehen können. und alle anderen werden gebeten, die folgenden Sicherheitsvorkehrungen zu

beachten.
Jede unsachgemäße Verwendung aufgrund Nichteinhaltung der Vorschriften kann zu Unfällen führen.

Folgende Situationen wurden nicht berücksichtigt:
..... Nutzung durch unbeaufsichtigte Kinder und Menschen mit Behinderungen
..... Kinder spielen mit dem Produkt

Bedeutung der Zeichen in der Anleitung:



Hersteller: ZHONGSHAN CITY HAISHANG ELECTRIC APPLIANCE CO., LTD
Adresse: Zimmer 401, Gebäude 1, Nr. 18 Mincheng East Road, Jidong Second Community, Xiaolan Town, Zhongshan City, Provinz Guangdong , China
E-Mail: support@vevor.com



VEVOR

Upgrade · The Home Creator Way


Countertop Blenders

MODEL:HS-608C

VEVOR
Upgrade·The Home Creator Way

Countertop Blenders

MODEL:HS-608C

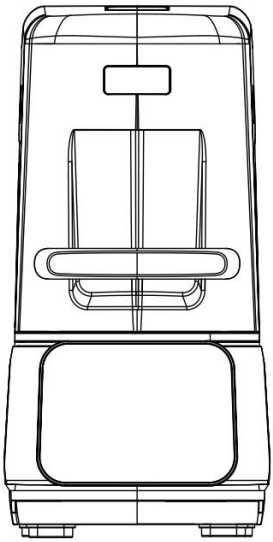

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

	Warning-To reduce the risk of injury, user must read instructions manual carefully.
	Indoor Use Only

	**CORRECT DISPOSAL** This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices
	**FCC Information:** CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment! This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This product may cause harmful interference. 2)This product must accept any interference received, including interference that may cause undesired operation. **WARNING:** Changes or modifications to this product not expressly approved by the party.responsible for compliance could void the user's authority to operate the product. Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television


	reception,which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures. · Reorient or relocate the receiving antenna. · Increase the distance between the product and receiver. · Connect the product to an outlet on a circuit different from that to which the receiver is connected. · Consult the dealer or an experienced radio/TV technician for assistance.

Introduction

Thank you for choosing our High Speed Blender.
All the staff of our company will serve you wholeheartedly.
In order to use this machine correctly and effectively, please readthis manual carefully before using.

Major Component Name

Pictures are for reference only,please referto the material object!

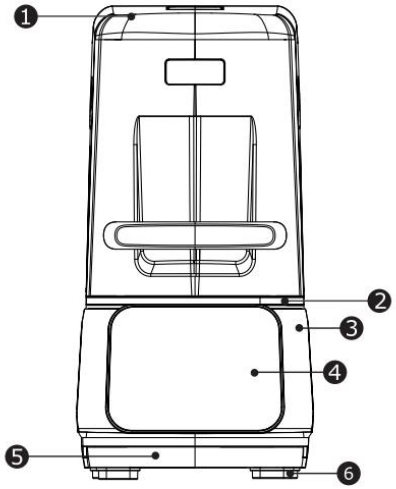

1.Soundproof Cover
2.Jar mat
3.Base Housing
4.Touch screen control
5.Base bottom
6. Rubber feet

The apparatus is intended to be used for domestic and similar applications as than:
kitchen employees in shops,offices and other workenvironments;
Farms;
By clients of hotels,motels and other residential-typeenvironments;
Bed and Breakfast type environments.

Points for Attention

WARNING:

1. Warning-To reduce the risk of injury, user must read instructions manual carefully.
2. The product complies with relevant standards and regulations. Installation of this device must comply with all applicable regulations, and it should only be operated in well-ventilated areas. Please read the user manual before installing and using this equipment.
3. This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. Children shall not play with the appliance.
5. This product shall not be used by children. Keep the appliance and its cord out of reach of children.
6. This product is intended to be used in household and similar applications
7. Please properly keep product. Check whether the product is abnormal before use. If it is abnormal, please stop using it.
8. Please use the product according to the intended use, warn of potential injury from misuse.
9. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Note:

◆Do not put metal objects such as knives,forks,spoons, etc.into the cup.

◆When cleaning,do not clean the knife directly by hand.If you use cleaning tools,please pay attention to safety.

◆ The contents of the cup should not be too full.Do not exceed two thirds of the capacity of the cup.

Please dose the lid of the cup when using.

◆ Before starting,make sure the cup is on the base. It is completely fixed on.

◆Because of the high horsepower,please hold the cup slightly when you start to use it.

◆Be sure to cover the cup when using the stirring bar while the motor is running.

◆Whether the cup is placed on the table or not.

Do not use your hand to fetch food from that cup because the blade is sharp and easy to cut.

◆To pour food out,remove the cup from the frame.

◆Be careful to touch the switch before and after start-up.

◆Utensils cannot be immersed in water.



Care should be taken when handling cutting blades especially when removing blades from containment cups,emptying containment cups,and during cleaning.

◆Remember to pull off the plug when not in use.

◆Do not lift the lid of the cup until the stirring knife has completely stopped rotating.

◆Be sure to separate the frame from the cup when cleaning and make sure to pull off the plug first.

◆Do not immerse the motor base in water or put it in the dishwasher for cleaning.


◆Keep a proper distance to prevent the child from improper movement and causing danger when the child is not allowed to be nearby during the start-up.

◆If the power cord is damaged,it must be replaced by a professional in the manufacturer's maintenance department or similar department in order to avoid danger.

Cleaning and Maintenance Methods

◆Always pull off the plug when cleaning and maintaining.
◆Carefully scrub the cup body and lid with a sponge or cloth and dry.
◆Do not put your hand into the cup for cleaning.
◆Wipe the rotating shaft and motor base with a dry cloth (remember!Do not rinse with water).
◆When it is not easy to wipe,wipe it with neutral lotion, and then wipe it with dry cloth until it is dlean.

Function Introduction

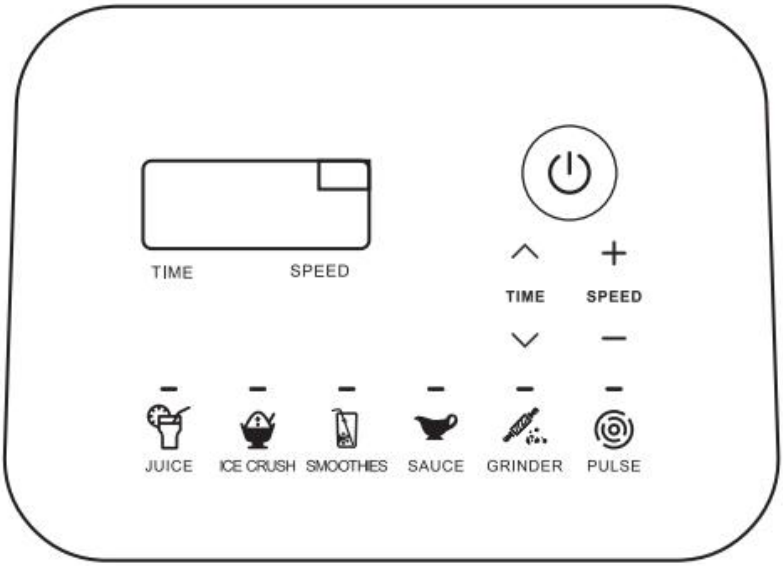

◆LED Display

◆ The system powers on,the buzzer emits a single sound,
and the entire screen(digtal tube and all indicator lights) is statically

illuminated for 2 seconds;then the 6 indicator lights are semi-lit(the color screen icons can be seen),and the 4-digt display shows "0000",indicating that the system is in standby mode.

◆ **Start/Cancel Button**

◆When in standby mode,select the desired working mode, and the corresponding indicator light will flash.Click the"On/Off Key",and the indicator light will remain on.The system will then enter this working mode and start working according to the corresponding program;if within 5 seconds,the "Start/Cancel Key"is not clicked,the indicator light will go off,and the system willautomatically return to the standby state.

◆When starting any working mode from the power on,click the "On/Off Key",and the buzzer willemit a single sound. The system willimmediately stop the current operation and exit the current working mode,returning to the standby state.

◆When starting the juice (JUICE), smoothie (ICE CRUSH),milkshake (SMOOTHIES), sauce(SAUCE), or grinder(GRINDER) working modes, no other keys can be pressedto change the working mode. For example, the "Time" and"Gear"keys cannot be used. Only the "On/Off Key" can beused to cancel the working mode and return to the standby state.

◆ **JUICE**

◆When the system is in standby mode, press the "Juice"button. The corresponding indicator light will flash. Thenclick the "On/Off Key"once. The indicator light will remainon and the system will start working.

◆Start working. The digital display shows a 30-second countdown. The motor operates at speed 1 for 3 seconds,then switches to speed 5 for 25 seconds, then switches to speed 2 for 2 seconds before ending.

◆ **ICE CRUSH**

◆When the system is in standby mode, press the "Ice"button. The

corresponding indicator light will flash and the buzzer will sound once. Then, click the "On/Off KeyKnob". The indicator light will remain on and the system will start working.

◆Start working.The digital display shows 40 seconds countdown.Motor starts in 1st gear for 1 second,then directly operates in 9th gear for 3 seconds,and the motor stops for 2 seconds(only after the motor has completely stopped can the next cycle of work begin).This cycle is repeated continuously for 7 cycles before ending.

◆  SMOOTHIES

◆ When the system is in standby mode, press the "Smoothie" button. The corresponding indicator light will flash and the buzzer will sound once. Then, click the "On/Off Key Knob".The indicator light will remain on and the system will start working.

◆ Start working. The digital display shows a countdown of 45 seconds. The motor operates at speed 1 for 2 seconds,then switches to speed 5 for 6 seconds, then to speed 9 for 12 seconds, and this cycle repeats by switching backto speed 1 for 2 seconds, then to speed '5 for 6 seconds,and to speed 9 until the end.

◆  Sauce

◆When the system is in standby mode, press the sauce button. The corresponding indicator light will flash and thebuzzer will sound once. Then, click the "On/Off key knob".The indicator light will remain on and the system will startworking.

◆Start working. The digital display shows 20 seconds countdown. The motor operates at speed 1 for 5 seconds,then switches to speed 5 for 10 seconds, then switches tospeed 3 for 5 seconds and finally stops.

◆ **GRINDER**

◆ When the system is in standby mode, press the grinding button. The corresponding indicator light will flash and the buzzer will sound once. Then click the "On/Off key" again.The indicator light will remain on and the system will start working.

◆ Start working. The digital display shows 040. The countdown begins. (The motor operates at 3rd gear for 5seconds, then switches to 9th gear for 15 seconds. This cycle repeats continuously for 2 times before the operation ends.)

◆ **PuLse**

◆ In the standby mode, press and hold the "PULSE" key for 2 seconds, and the motor will start working immediately.The 3-digit display shows the working time. The motor will first operate at 1 gear for 3 seconds, then switch to 9 gear.When the speed reaches 9 gear, it will continue to operat eat this speed. At any time during this period, if you release the key, the motor will immediately stop working.

◆ [Note: Each long press is limited to 30 seconds. After 30 seconds, it will automatically exit the working mode. You need to press the key again to enter the working mode.] When selecting the corresponding function, the 4-digitdisplay screen will show the corresponding time and gear.

◆**Time**

◆ Working process: When the icon key is touched for thefirst time, the default duration is 30 seconds. By pressing "+"or"-" to select the time, the duration can be increased or decreased by 10-90S After the 90S cycle,click the "U)"button again. When touch the Speed button by pressing "+"or "-"to select the speed, the durantion can be increased or decreased by 1-9 levels.

Important Guide

Automatic Overload Protection:
Your blender motor is designed to protect itself from overheating.
If the motor shuts off, follow these instructions:



OVERHEAT PROTECTION RESET BUTTON

◆Reduce the quantity of the ingredients in your container.
◆Press the overheat protection reset button under themotor base.
◆Turn off the the machine for up to 20 minutes to reset.
◆Reset time will be extended if high room temperatures exist.
◆To reduce the reset time, unplug the machine, remove the jug and blow air into the center section of the bottom with a fan or hair dryer on the cool setting.
◆Blend on higher speed to avoid overheating.
◆Blending on a low or medium speed can cause overheating.

Warranty

Claim according to current law.
Cash receipt with purchase date shall be enclosed with anyclaims.
When raising a claim the appliance must be returned to thestore of purchase.

Fault Analysis

Status	Cause	Solution

Not working	◆The powe is unplugged ◆ The protection device of themotor is disconnected	◆ Plug the plug into the socket with the correct voltage ◆ Put the main engine in ventilation places to cool for about 20 minutes
Over shaking	◆The main engine is imbalanced ◆ The conditioning cup is not completely.put into the main engine ◆ Over amount of ingredients	◆ Put the main engine in fat place ◆ Put the conditioning cup completely into the main engine ◆ Adjust the amount of ingredents
Water spilling from the lid	◆ The water exceeds the maximum ◆ The lid is not correctly covered	◆ Adjust the amount of water ◆Make sure the lid is correctly covered

Note:
Above are common trouble analysis and troubleshooting methods.For other troubles, please contact our customer service department, or go directly to our designated repair point for repair.
Do not dismantle and repair yourself.

Safety Instrutions

When the product will not be used for a long period of time,or if you are leaving for an extended absence, please unplug the power cord.
Even in standby mode, some parts remain energized, and insulation deterioration or electrical leakage may cause fire.
• Do not spray volatile oils, paints, or insecticides on the product.
Doing so may cause electric shock or fire.
Always unplug the power cord when the product is not in use for a long

time or when you are away.
Some parts remain energized in standby mode and may causefire due to insulation cracks or leakage.
• Do not pull the power cord when unplugging.
Always hold and pull the plug directly.
Ensure the power cord is plugged in securely before use.The plug must fit tightly into the socket with no looseness or incomplete insertion.
• Do not step on the power cord.
Damaging the power cord or socket can lead to electric shock, burns, or leakage.
If the power cord is damaged, it must be replaced by the manufacturer, a service agent, or a qualified technician to avoid danger.

Switch off the power when you are away or before going to sleep.
This reduces the risk of fire caused by wiring faults and helps save electricity.
• Do not expose the product to combustible substances or areas where mechanical oil vapors are present.
This can cause cracks, odors, or fire accidents.
• Do not use the product in damp areas such as bathrooms.
Moisture can cause poor insulation, leakage, or malfunction.
• Do not use damaged power cords or plugs.
This may result in electric shock, short circuit, or fire.
• Do not use multiple extension sockets or share outlets with other appliances.
Overloading may cause overheating or fire hazards.
• Do not unplug the power cord with wet hands.
Doing so may result in electric shock.

Safety Instrutions

To ensure safe use and avoid injury and property damage caused to you and others please do comply with the following safety precautions.

Any incorrect use due to non-compliance might lead to accidents

The following situations haven't been taken into consideration:

..... Use by un-attended children and the disabled

..... Children playing with the product

Meaning of the signs in the instructions:



Manufacturer: ZHONGSHAN CITY HAISHANG ELECTRIC APPLIANCE CO., LTD

Address: 401 Room, Building 1, No.18 Mincheng east Road, Jidong second community, Xiaolan Town, ZHONGSHAN CITY Guangdong Province, CHINA

E-mail: support@vevor.com



VEVOR

Upgrade · The Home Creator Way


Countertop Blenders

MODEL:HS-608C

VEVOR
Upgrade·The Home Creator Way

Countertop Blenders

MODEL:HS-608C

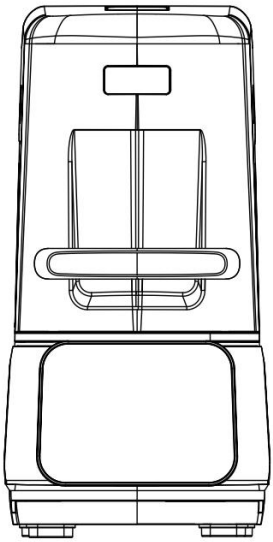

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

	Warning-To reduce the risk of injury, user must read instructions manual carefully.
	Indoor Use Only

	**CORRECT DISPOSAL** This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices
	**FCC Information:** CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment! This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This product may cause harmful interference. 2)This product must accept any interference received, including interference that may cause undesired operation. **WARNING:** Changes or modifications to this product not expressly approved by the party.responsible for compliance could void the user's authority to operate the product. Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television


	reception,which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures. · Reorient or relocate the receiving antenna. · Increase the distance between the product and receiver. · Connect the product to an outlet on a circuit different from that to which the receiver is connected. · Consult the dealer or an experienced radio/TV technician for assistance.

Introduction

Thank you for choosing our High Speed Blender.
All the staff of our company will serve you wholeheartedly.
In order to use this machine correctly and effectively, please readthis manual carefully before using.

Major Component Name

Pictures are for reference only,please referto the material object!

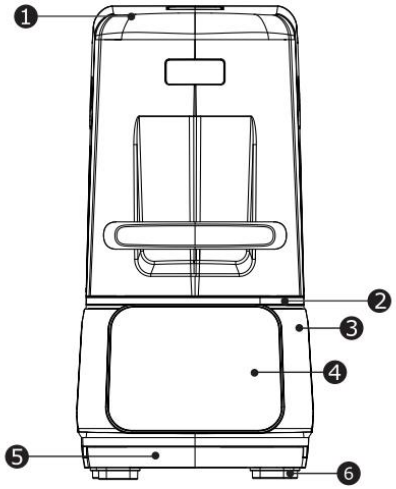

1.Soundproof Cover
2.Jar mat
3.Base Housing
4.Touch screen control
5.Base bottom
6. Rubber feet

The apparatus is intended to be used for domestic and similar applications as than:
kitchen employees in shops,offices and other workenvironments;
Farms;
By clients of hotels,motels and other residential-typeenvironments;
Bed and Breakfast type environments.

Points for Attention

WARNING:

1. Warning-To reduce the risk of injury, user must read instructions manual carefully.
2. The product complies with relevant standards and regulations. Installation of this device must comply with all applicable regulations, and it should only be operated in well-ventilated areas. Please read the user manual before installing and using this equipment.
3. This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. Children shall not play with the appliance.
5. This product shall not be used by children. Keep the appliance and its cord out of reach of children.
6. This product is intended to be used in household and similar applications
7. Please properly keep product. Check whether the product is abnormal before use. If it is abnormal, please stop using it.
8. Please use the product according to the intended use, warn of potential injury from misuse.
9. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Note:

◆Do not put metal objects such as knives,forks,spoons, etc.into the cup.

◆When cleaning,do not clean the knife directly by hand.If you use cleaning tools,please pay attention to safety.

◆ The contents of the cup should not be too full.Do not exceed two thirds of the capacity of the cup.

Please dose the lid of the cup when using.

◆ Before starting,make sure the cup is on the base. It is completely fixed on.

◆Because of the high horsepower,please hold the cup slightly when you start to use it.

◆Be sure to cover the cup when using the stirring bar while the motor is running.

◆Whether the cup is placed on the table or not.

Do not use your hand to fetch food from that cup because the blade is sharp and easy to cut.

◆To pour food out,remove the cup from the frame.

◆Be careful to touch the switch before and after start-up.

◆Utensils cannot be immersed in water.



Care should be taken when handling cutting blades especially when removing blades from containment cups,emptying containment cups,and during cleaning.

◆Remember to pull off the plug when not in use.

◆Do not lift the lid of the cup until the stirring knife has completely stopped rotating.

◆Be sure to separate the frame from the cup when cleaning and make sure to pull off the plug first.

◆Do not immerse the motor base in water or put it in the dishwasher for cleaning.


◆Keep a proper distance to prevent the child from improper movement and causing danger when the child is not allowed to be nearby during the start-up.

◆If the power cord is damaged,it must be replaced by a professional in the manufacturer's maintenance department or similar department in order to avoid danger.

Cleaning and Maintenance Methods

◆Always pull off the plug when cleaning and maintaining.
◆Carefully scrub the cup body and lid with a sponge or cloth and dry.
◆Do not put your hand into the cup for cleaning.
◆Wipe the rotating shaft and motor base with a dry cloth (remember!Do not rinse with water).
◆When it is not easy to wipe,wipe it with neutral lotion, and then wipe it with dry cloth until it is dlean.

Function Introduction

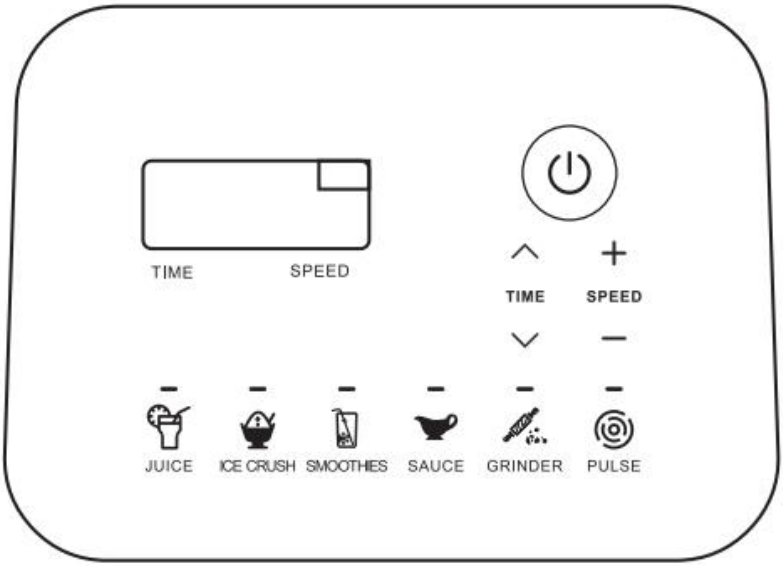

◆LED Display

◆ The system powers on,the buzzer emits a single sound,
and the entire screen(digtal tube and all indicator lights) is statically

illuminated for 2 seconds;then the 6 indicator lights are semi-lit(the color screen icons can be seen),and the 4-digt display shows "0000",indicating that the system is in standby mode.

◆ **Start/Cancel Button**

◆When in standby mode,select the desired working mode, and the corresponding indicator light will flash.Click the"On/Off Key",and the indicator light will remain on.The system will then enter this working mode and start working according to the corresponding program;if within 5 seconds,the "Start/Cancel Key"is not clicked,the indicator light will go off,and the system willautomatically return to the standby state.

◆When starting any working mode from the power on,click the "On/Off Key",and the buzzer willemit a single sound. The system willimmediately stop the current operation and exit the current working mode,returning to the standby state.

◆When starting the juice (JUICE), smoothie (ICE CRUSH),milkshake (SMOOTHIES), sauce(SAUCE), or grinder(GRINDER) working modes, no other keys can be pressedto change the working mode. For example, the "Time" and"Gear"keys cannot be used. Only the "On/Off Key" can beused to cancel the working mode and return to the standby state.

◆ **JUICE**

◆When the system is in standby mode, press the "Juice"button. The corresponding indicator light will flash. Thenclick the "On/Off Key"once. The indicator light will remainon and the system will start working.

◆Start working. The digital display shows a 30-second countdown. The motor operates at speed 1 for 3 seconds,then switches to speed 5 for 25 seconds, then switches to speed 2 for 2 seconds before ending.

◆ **ICE CRUSH**

◆When the system is in standby mode, press the "Ice"button. The

corresponding indicator light will flash and the buzzer will sound once. Then, click the "On/Off KeyKnob". The indicator light will remain on and the system will start working.

◆Start working.The digital display shows 40 seconds countdown.Motor starts in 1st gear for 1 second,then directly operates in 9th gear for 3 seconds,and the motor stops for 2 seconds(only after the motor has completely stopped can the next cycle of work begin).This cycle is repeated continuously for 7 cycles before ending.

◆  SMOOTHIES

◆ When the system is in standby mode, press the "Smoothie" button. The corresponding indicator light will flash and the buzzer will sound once. Then, click the "On/Off Key Knob".The indicator light will remain on and the system will start working.

◆ Start working. The digital display shows a countdown of 45 seconds. The motor operates at speed 1 for 2 seconds,then switches to speed 5 for 6 seconds, then to speed 9 for 12 seconds, and this cycle repeats by switching backto speed 1 for 2 seconds, then to speed '5 for 6 seconds,and to speed 9 until the end.

◆  Sauce

◆When the system is in standby mode, press the sauce button. The corresponding indicator light will flash and thebuzzer will sound once. Then, click the "On/Off key knob".The indicator light will remain on and the system will startworking.

◆Start working. The digital display shows 20 seconds countdown. The motor operates at speed 1 for 5 seconds,then switches to speed 5 for 10 seconds, then switches tospeed 3 for 5 seconds and finally stops.

◆ **GRINDER**

◆ When the system is in standby mode, press the grinding button. The corresponding indicator light will flash and the buzzer will sound once. Then click the "On/Off key" again.The indicator light will remain on and the system will start working.

◆ Start working. The digital display shows 040. The countdown begins. (The motor operates at 3rd gear for 5seconds, then switches to 9th gear for 15 seconds. This cycle repeats continuously for 2 times before the operation ends.)

◆ **PuLse**

◆ In the standby mode, press and hold the "PULSE" key for 2 seconds, and the motor will start working immediately.The 3-digit display shows the working time. The motor will first operate at 1 gear for 3 seconds, then switch to 9 gear.When the speed reaches 9 gear, it will continue to operat eat this speed. At any time during this period, if you release the key, the motor will immediately stop working.

◆ [Note: Each long press is limited to 30 seconds. After 30 seconds, it will automatically exit the working mode. You need to press the key again to enter the working mode.] When selecting the corresponding function, the 4-digitdisplay screen will show the corresponding time and gear.

◆**Time**

◆ Working process: When the icon key is touched for thefirst time, the default duration is 30 seconds. By pressing "+"or"-" to select the time, the duration can be increased or decreased by 10-90S After the 90S cycle,click the "U)"button again. When touch the Speed button by pressing "+"or "-"to select the speed, the durantion can be increased or decreased by 1-9 levels.

Important Guide

Automatic Overload Protection:
Your blender motor is designed to protect itself from overheating.
If the motor shuts off, follow these instructions:



OVERHEAT PROTECTION RESET BUTTON

◆Reduce the quantity of the ingredients in your container.
◆Press the overheat protection reset button under themotor base.
◆Turn off the the machine for up to 20 minutes to reset.
◆Reset time will be extended if high room temperatures exist.
◆To reduce the reset time, unplug the machine, remove the jug and blow air into the center section of the bottom with a fan or hair dryer on the cool setting.
◆Blend on higher speed to avoid overheating.
◆Blending on a low or medium speed can cause overheating.

Warranty

Claim according to current law.
Cash receipt with purchase date shall be enclosed with anyclaims.
When raising a claim the appliance must be returned to thestore of purchase.

Fault Analysis

Status	Cause	Solution

Not working	◆The powe is unplugged ◆ The protection device of themotor is disconnected	◆ Plug the plug into the socket with the correct voltage ◆ Put the main engine in ventilation places to cool for about 20 minutes
Over shaking	◆The main engine is imbalanced ◆ The conditioning cup is not completely.put into the main engine ◆ Over amount of ingredients	◆ Put the main engine in fat place ◆ Put the conditioning cup completely into the main engine ◆ Adjust the amount of ingredents
Water spilling from the lid	◆ The water exceeds the maximum ◆ The lid is not correctly covered	◆ Adjust the amount of water ◆Make sure the lid is correctly covered

Note:
Above are common trouble analysis and troubleshooting methods.For other troubles, please contact our customer service department, or go directly to our designated repair point for repair.
Do not dismantle and repair yourself.

Safety Instrutions

When the product will not be used for a long period of time,or if you are leaving for an extended absence, please unplug the power cord.
Even in standby mode, some parts remain energized, and insulation deterioration or electrical leakage may cause fire.
• Do not spray volatile oils, paints, or insecticides on the product.
Doing so may cause electric shock or fire.
Always unplug the power cord when the product is not in use for a long

time or when you are away.
Some parts remain energized in standby mode and may causefire due to insulation cracks or leakage.
• Do not pull the power cord when unplugging.
Always hold and pull the plug directly.
Ensure the power cord is plugged in securely before use.The plug must fit tightly into the socket with no looseness or incomplete insertion.
• Do not step on the power cord.
Damaging the power cord or socket can lead to electric shock, burns, or leakage.
If the power cord is damaged, it must be replaced by the manufacturer, a service agent, or a qualified technician to avoid danger.

Switch off the power when you are away or before going to sleep.
This reduces the risk of fire caused by wiring faults and helps save electricity.
• Do not expose the product to combustible substances or areas where mechanical oil vapors are present.
This can cause cracks, odors, or fire accidents.
• Do not use the product in damp areas such as bathrooms.
Moisture can cause poor insulation, leakage, or malfunction.
• Do not use damaged power cords or plugs.
This may result in electric shock, short circuit, or fire.
• Do not use multiple extension sockets or share outlets with other appliances.
Overloading may cause overheating or fire hazards.
• Do not unplug the power cord with wet hands.
Doing so may result in electric shock.

Safety Instrutions

To ensure safe use and avoid injury and property damage caused to you and others please do comply with the following safety precautions.

Any incorrect use due to non-compliance might lead to accidents

The following situations haven't been taken into consideration:

..... Use by un-attended children and the disabled

..... Children playing with the product

Meaning of the signs in the instructions:



Manufacturer: ZHONGSHAN CITY HAISHANG ELECTRIC APPLIANCE CO., LTD

Address: 401 Room, Building 1, No.18 Mincheng east Road, Jidong second community, Xiaolan Town, ZHONGSHAN CITY Guangdong Province, CHINA

E-mail: support@vevor.com



VEVOR

Upgrade · The Home Creator Way


Countertop Blenders

MODEL:HS-608C

VEVOR
Upgrade·The Home Creator Way

Countertop Blenders

MODEL:HS-608C

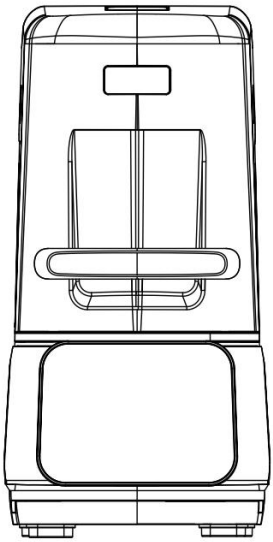

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

	Warning-To reduce the risk of injury, user must read instructions manual carefully.
	Indoor Use Only

	**CORRECT DISPOSAL** This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices
	**FCC Information:** CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment! This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This product may cause harmful interference. 2)This product must accept any interference received, including interference that may cause undesired operation. **WARNING:** Changes or modifications to this product not expressly approved by the party.responsible for compliance could void the user's authority to operate the product. Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television


	reception,which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures. · Reorient or relocate the receiving antenna. · Increase the distance between the product and receiver. · Connect the product to an outlet on a circuit different from that to which the receiver is connected. · Consult the dealer or an experienced radio/TV technician for assistance.

Introduction

Thank you for choosing our High Speed Blender.
All the staff of our company will serve you wholeheartedly.
In order to use this machine correctly and effectively, please readthis manual carefully before using.

Major Component Name

Pictures are for reference only,please referto the material object!

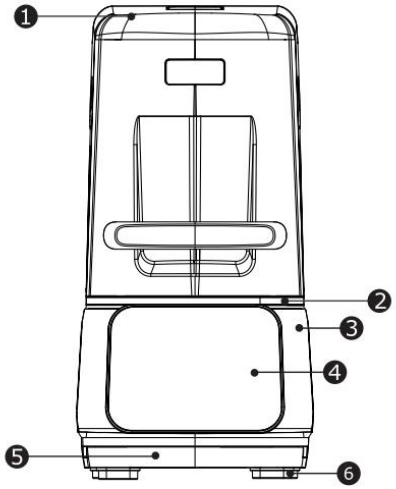

1.Soundproof Cover
2.Jar mat
3.Base Housing
4.Touch screen control
5.Base bottom
6. Rubber feet

The apparatus is intended to be used for domestic and similar applications as than:
kitchen employees in shops,offices and other workenvironments;
Farms;
By clients of hotels,motels and other residential-typeenvironments;
Bed and Breakfast type environments.

Points for Attention

WARNING:

1. Warning-To reduce the risk of injury, user must read instructions manual carefully.
2. The product complies with relevant standards and regulations. Installation of this device must comply with all applicable regulations, and it should only be operated in well-ventilated areas. Please read the user manual before installing and using this equipment.
3. This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. Children shall not play with the appliance.
5. This product shall not be used by children. Keep the appliance and its cord out of reach of children.
6. This product is intended to be used in household and similar applications
7. Please properly keep product. Check whether the product is abnormal before use. If it is abnormal, please stop using it.
8. Please use the product according to the intended use, warn of potential injury from misuse.
9. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Note:

◆Do not put metal objects such as knives,forks,spoons, etc.into the cup.

◆When cleaning,do not clean the knife directly by hand.If you use cleaning tools,please pay attention to safety.

◆ The contents of the cup should not be too full.Do not exceed two thirds of the capacity of the cup.

Please dose the lid of the cup when using.

◆ Before starting,make sure the cup is on the base. It is completely fixed on.

◆Because of the high horsepower,please hold the cup slightly when you start to use it.

◆Be sure to cover the cup when using the stirring bar while the motor is running.

◆Whether the cup is placed on the table or not.

Do not use your hand to fetch food from that cup because the blade is sharp and easy to cut.

◆To pour food out,remove the cup from the frame.

◆Be careful to touch the switch before and after start-up.

◆Utensils cannot be immersed in water.



Care should be taken when handling cutting blades especially when removing blades from containment cups,emptying containment cups,and during cleaning.

◆Remember to pull off the plug when not in use.

◆Do not lift the lid of the cup until the stirring knife has completely stopped rotating.

◆Be sure to separate the frame from the cup when cleaning and make sure to pull off the plug first.

◆Do not immerse the motor base in water or put it in the dishwasher for cleaning.


◆Keep a proper distance to prevent the child from improper movement and causing danger when the child is not allowed to be nearby during the start-up.

◆If the power cord is damaged,it must be replaced by a professional in the manufacturer's maintenance department or similar department in order to avoid danger.

Cleaning and Maintenance Methods

◆Always pull off the plug when cleaning and maintaining.
◆Carefully scrub the cup body and lid with a sponge or cloth and dry.
◆Do not put your hand into the cup for cleaning.
◆Wipe the rotating shaft and motor base with a dry cloth (remember!Do not rinse with water).
◆When it is not easy to wipe,wipe it with neutral lotion, and then wipe it with dry cloth until it is dlean.

Function Introduction

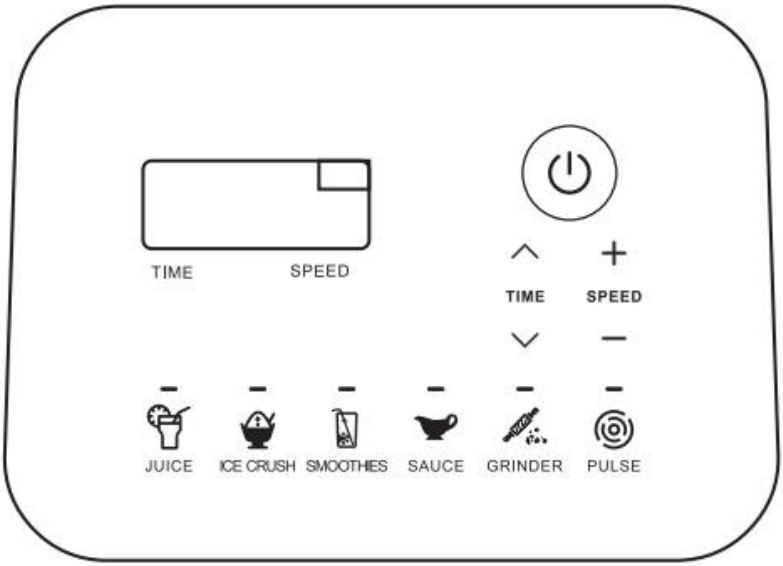

◆LED Display

◆ The system powers on,the buzzer emits a single sound,
and the entire screen(digtal tube and all indicator lights) is statically

illuminated for 2 seconds;then the 6 indicator lights are semi-lit(the color screen icons can be seen),and the 4-digt display shows "0000",indicating that the system is in standby mode.

◆ **Start/Cancel Button**

◆When in standby mode,select the desired working mode, and the corresponding indicator light will flash.Click the"On/Off Key",and the indicator light will remain on.The system will then enter this working mode and start working according to the corresponding program;if within 5 seconds,the "Start/Cancel Key"is not clicked,the indicator light will go off,and the system willautomatically return to the standby state.

◆When starting any working mode from the power on,click the "On/Off Key",and the buzzer willemit a single sound. The system willimmediately stop the current operation and exit the current working mode,returning to the standby state.

◆When starting the juice (JUICE), smoothie (ICE CRUSH),milkshake (SMOOTHIES), sauce(SAUCE), or grinder(GRINDER) working modes, no other keys can be pressedto change the working mode. For example, the "Time" and"Gear"keys cannot be used. Only the "On/Off Key" can beused to cancel the working mode and return to the standby state.

◆ **JUICE**

◆When the system is in standby mode, press the "Juice"button. The corresponding indicator light will flash. Thenclick the "On/Off Key"once. The indicator light will remainon and the system will start working.

◆Start working. The digital display shows a 30-second countdown. The motor operates at speed 1 for 3 seconds,then switches to speed 5 for 25 seconds, then switches to speed 2 for 2 seconds before ending.

◆ **ICE CRUSH**

◆When the system is in standby mode, press the "Ice"button. The

corresponding indicator light will flash and the buzzer will sound once. Then, click the "On/Off KeyKnob". The indicator light will remain on and the system will start working.

◆Start working.The digital display shows 40 seconds countdown.Motor starts in 1st gear for 1 second,then directly operates in 9th gear for 3 seconds,and the motor stops for 2 seconds(only after the motor has completely stopped can the next cycle of work begin).This cycle is repeated continuously for 7 cycles before ending.

◆  SMOOTHIES

◆ When the system is in standby mode, press the "Smoothie" button. The corresponding indicator light will flash and the buzzer will sound once. Then, click the "On/Off Key Knob".The indicator light will remain on and the system will start working.

◆ Start working. The digital display shows a countdown of 45 seconds. The motor operates at speed 1 for 2 seconds,then switches to speed 5 for 6 seconds, then to speed 9 for 12 seconds, and this cycle repeats by switching backto speed 1 for 2 seconds, then to speed '5 for 6 seconds,and to speed 9 until the end.

◆  Sauce

◆When the system is in standby mode, press the sauce button. The corresponding indicator light will flash and thebuzzer will sound once. Then, click the "On/Off key knob".The indicator light will remain on and the system will startworking.

◆Start working. The digital display shows 20 seconds countdown. The motor operates at speed 1 for 5 seconds,then switches to speed 5 for 10 seconds, then switches tospeed 3 for 5 seconds and finally stops.

◆ **GRINDER**

◆ When the system is in standby mode, press the grinding button. The corresponding indicator light will flash and the buzzer will sound once. Then click the "On/Off key" again.The indicator light will remain on and the system will start working.

◆ Start working. The digital display shows 040. The countdown begins. (The motor operates at 3rd gear for 5seconds, then switches to 9th gear for 15 seconds. This cycle repeats continuously for 2 times before the operation ends.)

◆ **PuLse**

◆ In the standby mode, press and hold the "PULSE" key for 2 seconds, and the motor will start working immediately.The 3-digit display shows the working time. The motor will first operate at 1 gear for 3 seconds, then switch to 9 gear.When the speed reaches 9 gear, it will continue to operat eat this speed. At any time during this period, if you release the key, the motor will immediately stop working.

◆ [Note: Each long press is limited to 30 seconds. After 30 seconds, it will automatically exit the working mode. You need to press the key again to enter the working mode.] When selecting the corresponding function, the 4-digitdisplay screen will show the corresponding time and gear.

◆**Time**

◆ Working process: When the icon key is touched for thefirst time, the default duration is 30 seconds. By pressing "+"or"-" to select the time, the duration can be increased or decreased by 10-90S After the 90S cycle,click the "U)"button again. When touch the Speed button by pressing "+"or "-"to select the speed, the durantion can be increased or decreased by 1-9 levels.

Important Guide

Automatic Overload Protection:
Your blender motor is designed to protect itself from overheating.
If the motor shuts off, follow these instructions:



OVERHEAT PROTECTION RESET BUTTON

◆Reduce the quantity of the ingredients in your container.
◆Press the overheat protection reset button under themotor base.
◆Turn off the the machine for up to 20 minutes to reset.
◆Reset time will be extended if high room temperatures exist.
◆To reduce the reset time, unplug the machine, remove the jug and blow air into the center section of the bottom with a fan or hair dryer on the cool setting.
◆Blend on higher speed to avoid overheating.
◆Blending on a low or medium speed can cause overheating.

Warranty

Claim according to current law.
Cash receipt with purchase date shall be enclosed with anyclaims.
When raising a claim the appliance must be returned to thestore of purchase.

Fault Analysis

Status	Cause	Solution

Not working	◆The powe is unplugged ◆ The protection device of themotor is disconnected	◆ Plug the plug into the socket with the correct voltage ◆ Put the main engine in ventilation places to cool for about 20 minutes
Over shaking	◆The main engine is imbalanced ◆ The conditioning cup is not completely.put into the main engine ◆ Over amount of ingredients	◆ Put the main engine in fat place ◆ Put the conditioning cup completely into the main engine ◆ Adjust the amount of ingredents
Water spilling from the lid	◆ The water exceeds the maximum ◆ The lid is not correctly covered	◆ Adjust the amount of water ◆Make sure the lid is correctly covered

Note:
Above are common trouble analysis and troubleshooting methods.For other troubles, please contact our customer service department, or go directly to our designated repair point for repair.
Do not dismantle and repair yourself.

Safety Instrutions

When the product will not be used for a long period of time,or if you are leaving for an extended absence, please unplug the power cord.
Even in standby mode, some parts remain energized, and insulation deterioration or electrical leakage may cause fire.
• Do not spray volatile oils, paints, or insecticides on the product.
Doing so may cause electric shock or fire.
Always unplug the power cord when the product is not in use for a long

time or when you are away.
Some parts remain energized in standby mode and may causefire due to insulation cracks or leakage.
• Do not pull the power cord when unplugging.
Always hold and pull the plug directly.
Ensure the power cord is plugged in securely before use.The plug must fit tightly into the socket with no looseness or incomplete insertion.
• Do not step on the power cord.
Damaging the power cord or socket can lead to electric shock, burns, or leakage.
If the power cord is damaged, it must be replaced by the manufacturer, a service agent, or a qualified technician to avoid danger.

Switch off the power when you are away or before going to sleep.
This reduces the risk of fire caused by wiring faults and helps save electricity.
• Do not expose the product to combustible substances or areas where mechanical oil vapors are present.
This can cause cracks, odors, or fire accidents.
• Do not use the product in damp areas such as bathrooms.
Moisture can cause poor insulation, leakage, or malfunction.
• Do not use damaged power cords or plugs.
This may result in electric shock, short circuit, or fire.
• Do not use multiple extension sockets or share outlets with other appliances.
Overloading may cause overheating or fire hazards.
• Do not unplug the power cord with wet hands.
Doing so may result in electric shock.

Safety Instrutions

To ensure safe use and avoid injury and property damage caused to you and others please do comply with the following safety precautions.

Any incorrect use due to non-compliance might lead to accidents

The following situations haven't been taken into consideration:

..... Use by un-attended children and the disabled

..... Children playing with the product

Meaning of the signs in the instructions:



Manufacturer: ZHONGSHAN CITY HAISHANG ELECTRIC APPLIANCE CO., LTD

Address: 401 Room, Building 1, No.18 Mincheng east Road, Jidong second community, Xiaolan Town, ZHONGSHAN CITY Guangdong Province, CHINA

E-mail: support@vevor.com



VEVOR

Upgrade · The Home Creator Way


Countertop Blenders

MODEL:HS-608C

VEVOR
Upgrade·The Home Creator Way

Countertop Blenders

MODEL:HS-608C

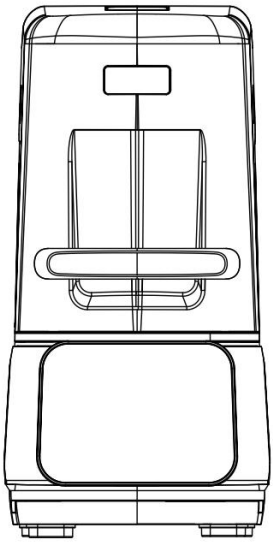

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

	Warning-To reduce the risk of injury, user must read instructions manual carefully.
	Indoor Use Only

	**CORRECT DISPOSAL** This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices
	**FCC Information:** CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment! This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This product may cause harmful interference. 2)This product must accept any interference received, including interference that may cause undesired operation. **WARNING:** Changes or modifications to this product not expressly approved by the party.responsible for compliance could void the user's authority to operate the product. Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television


	reception,which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures. · Reorient or relocate the receiving antenna. · Increase the distance between the product and receiver. · Connect the product to an outlet on a circuit different from that to which the receiver is connected. · Consult the dealer or an experienced radio/TV technician for assistance.

Introduction

Thank you for choosing our High Speed Blender.
All the staff of our company will serve you wholeheartedly.
In order to use this machine correctly and effectively, please readthis manual carefully before using.

Major Component Name

Pictures are for reference only,please referto the material object!

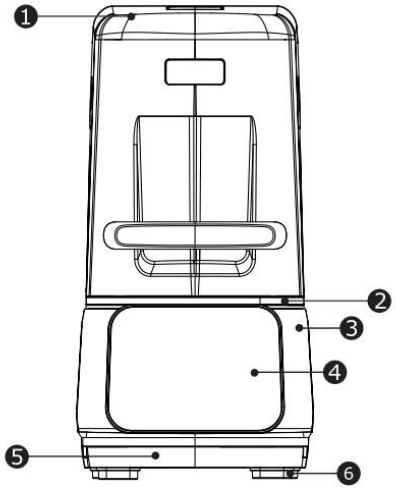

1.Soundproof Cover
2.Jar mat
3.Base Housing
4.Touch screen control
5.Base bottom
6. Rubber feet

The apparatus is intended to be used for domestic and similar applications as than:
kitchen employees in shops,offices and other workenvironments;
Farms;
By clients of hotels,motels and other residential-typeenvironments;
Bed and Breakfast type environments.

Points for Attention

WARNING:

1. Warning-To reduce the risk of injury, user must read instructions manual carefully.
2. The product complies with relevant standards and regulations. Installation of this device must comply with all applicable regulations, and it should only be operated in well-ventilated areas. Please read the user manual before installing and using this equipment.
3. This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. Children shall not play with the appliance.
5. This product shall not be used by children. Keep the appliance and its cord out of reach of children.
6. This product is intended to be used in household and similar applications
7. Please properly keep product. Check whether the product is abnormal before use. If it is abnormal, please stop using it.
8. Please use the product according to the intended use, warn of potential injury from misuse.
9. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Note:

◆Do not put metal objects such as knives,forks,spoons, etc.into the cup.

◆When cleaning,do not clean the knife directly by hand.If you use cleaning tools,please pay attention to safety.

◆ The contents of the cup should not be too full.Do not exceed two thirds of the capacity of the cup.

Please dose the lid of the cup when using.

◆ Before starting,make sure the cup is on the base. It is completely fixed on.

◆Because of the high horsepower,please hold the cup slightly when you start to use it.

◆Be sure to cover the cup when using the stirring bar while the motor is running.

◆Whether the cup is placed on the table or not.

Do not use your hand to fetch food from that cup because the blade is sharp and easy to cut.

◆To pour food out,remove the cup from the frame.

◆Be careful to touch the switch before and after start-up.

◆Utensils cannot be immersed in water.



Care should be taken when handling cutting blades especially when removing blades from containment cups,emptying containment cups,and during cleaning.

◆Remember to pull off the plug when not in use.

◆Do not lift the lid of the cup until the stirring knife has completely stopped rotating.

◆Be sure to separate the frame from the cup when cleaning and make sure to pull off the plug first.

◆Do not immerse the motor base in water or put it in the dishwasher for cleaning.


◆Keep a proper distance to prevent the child from improper movement and causing danger when the child is not allowed to be nearby during the start-up.

◆If the power cord is damaged,it must be replaced by a professional in the manufacturer's maintenance department or similar department in order to avoid danger.

Cleaning and Maintenance Methods

◆Always pull off the plug when cleaning and maintaining.
◆Carefully scrub the cup body and lid with a sponge or cloth and dry.
◆Do not put your hand into the cup for cleaning.
◆Wipe the rotating shaft and motor base with a dry cloth (remember!Do not rinse with water).
◆When it is not easy to wipe,wipe it with neutral lotion, and then wipe it with dry cloth until it is dlean.

Function Introduction

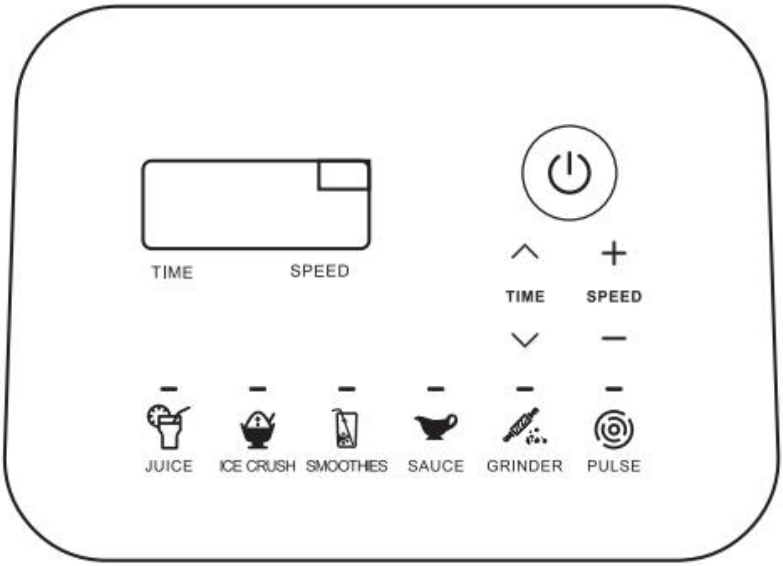

◆LED Display

◆ The system powers on,the buzzer emits a single sound,
and the entire screen(digtal tube and all indicator lights) is statically

illuminated for 2 seconds;then the 6 indicator lights are semi-lit(the color screen icons can be seen),and the 4-digt display shows "0000",indicating that the system is in standby mode.

◆ **Start/Cancel Button**

◆When in standby mode,select the desired working mode, and the corresponding indicator light will flash.Click the"On/Off Key",and the indicator light will remain on.The system will then enter this working mode and start working according to the corresponding program;if within 5 seconds,the "Start/Cancel Key"is not clicked,the indicator light will go off,and the system willautomatically return to the standby state.

◆When starting any working mode from the power on,click the "On/Off Key",and the buzzer willemit a single sound. The system willimmediately stop the current operation and exit the current working mode,returning to the standby state.

◆When starting the juice (JUICE), smoothie (ICE CRUSH),milkshake (SMOOTHIES), sauce(SAUCE), or grinder(GRINDER) working modes, no other keys can be pressedto change the working mode. For example, the "Time" and"Gear"keys cannot be used. Only the "On/Off Key" can beused to cancel the working mode and return to the standby state.

◆ **JUICE**

◆When the system is in standby mode, press the "Juice"button. The corresponding indicator light will flash. Thenclick the "On/Off Key"once. The indicator light will remainon and the system will start working.

◆Start working. The digital display shows a 30-second countdown. The motor operates at speed 1 for 3 seconds,then switches to speed 5 for 25 seconds, then switches to speed 2 for 2 seconds before ending.

◆ **ICE CRUSH**

◆When the system is in standby mode, press the "Ice"button. The

corresponding indicator light will flash and the buzzer will sound once. Then, click the "On/Off KeyKnob". The indicator light will remain on and the system will start working.

◆Start working.The digital display shows 40 seconds countdown.Motor starts in 1st gear for 1 second,then directly operates in 9th gear for 3 seconds,and the motor stops for 2 seconds(only after the motor has completely stopped can the next cycle of work begin).This cycle is repeated continuously for 7 cycles before ending.

◆  SMOOTHIES

◆ When the system is in standby mode, press the "Smoothie" button. The corresponding indicator light will flash and the buzzer will sound once. Then, click the "On/Off Key Knob".The indicator light will remain on and the system will start working.

◆ Start working. The digital display shows a countdown of 45 seconds. The motor operates at speed 1 for 2 seconds,then switches to speed 5 for 6 seconds, then to speed 9 for 12 seconds, and this cycle repeats by switching backto speed 1 for 2 seconds, then to speed '5 for 6 seconds,and to speed 9 until the end.

◆  Sauce

◆When the system is in standby mode, press the sauce button. The corresponding indicator light will flash and thebuzzer will sound once. Then, click the "On/Off key knob".The indicator light will remain on and the system will startworking.

◆Start working. The digital display shows 20 seconds countdown. The motor operates at speed 1 for 5 seconds,then switches to speed 5 for 10 seconds, then switches tospeed 3 for 5 seconds and finally stops.

◆ **GRINDER**

◆ When the system is in standby mode, press the grinding button. The corresponding indicator light will flash and the buzzer will sound once. Then click the "On/Off key" again.The indicator light will remain on and the system will start working.

◆ Start working. The digital display shows 040. The countdown begins. (The motor operates at 3rd gear for 5seconds, then switches to 9th gear for 15 seconds. This cycle repeats continuously for 2 times before the operation ends.)

◆ **PuLse**

◆ In the standby mode, press and hold the "PULSE" key for 2 seconds, and the motor will start working immediately.The 3-digit display shows the working time. The motor will first operate at 1 gear for 3 seconds, then switch to 9 gear.When the speed reaches 9 gear, it will continue to operat eat this speed. At any time during this period, if you release the key, the motor will immediately stop working.

◆ [Note: Each long press is limited to 30 seconds. After 30 seconds, it will automatically exit the working mode. You need to press the key again to enter the working mode.] When selecting the corresponding function, the 4-digitdisplay screen will show the corresponding time and gear.

◆**Time**

◆ Working process: When the icon key is touched for thefirst time, the default duration is 30 seconds. By pressing "+"or"-" to select the time, the duration can be increased or decreased by 10-90S After the 90S cycle,click the "U)"button again. When touch the Speed button by pressing "+"or "-"to select the speed, the durantion can be increased or decreased by 1-9 levels.

Important Guide

Automatic Overload Protection:
Your blender motor is designed to protect itself from overheating.
If the motor shuts off, follow these instructions:



OVERHEAT PROTECTION RESET BUTTON

◆Reduce the quantity of the ingredients in your container.
◆Press the overheat protection reset button under themotor base.
◆Turn off the the machine for up to 20 minutes to reset.
◆Reset time will be extended if high room temperatures exist.
◆To reduce the reset time, unplug the machine, remove the jug and blow air into the center section of the bottom with a fan or hair dryer on the cool setting.
◆Blend on higher speed to avoid overheating.
◆Blending on a low or medium speed can cause overheating.

Warranty

Claim according to current law.
Cash receipt with purchase date shall be enclosed with anyclaims.
When raising a claim the appliance must be returned to thestore of purchase.

Fault Analysis

Status	Cause	Solution

Not working	◆The powe is unplugged ◆ The protection device of themotor is disconnected	◆ Plug the plug into the socket with the correct voltage ◆ Put the main engine in ventilation places to cool for about 20 minutes
Over shaking	◆The main engine is imbalanced ◆ The conditioning cup is not completely.put into the main engine ◆ Over amount of ingredients	◆ Put the main engine in fat place ◆ Put the conditioning cup completely into the main engine ◆ Adjust the amount of ingredents
Water spilling from the lid	◆ The water exceeds the maximum ◆ The lid is not correctly covered	◆ Adjust the amount of water ◆Make sure the lid is correctly covered

Note:
Above are common trouble analysis and troubleshooting methods.For other troubles, please contact our customer service department, or go directly to our designated repair point for repair.
Do not dismantle and repair yourself.

Safety Instrutions

When the product will not be used for a long period of time,or if you are leaving for an extended absence, please unplug the power cord.
Even in standby mode, some parts remain energized, and insulation deterioration or electrical leakage may cause fire.
• Do not spray volatile oils, paints, or insecticides on the product.
Doing so may cause electric shock or fire.
Always unplug the power cord when the product is not in use for a long

time or when you are away.
Some parts remain energized in standby mode and may causefire due to insulation cracks or leakage.
• Do not pull the power cord when unplugging.
Always hold and pull the plug directly.
Ensure the power cord is plugged in securely before use.The plug must fit tightly into the socket with no looseness or incomplete insertion.
• Do not step on the power cord.
Damaging the power cord or socket can lead to electric shock, burns, or leakage.
If the power cord is damaged, it must be replaced by the manufacturer, a service agent, or a qualified technician to avoid danger.

Switch off the power when you are away or before going to sleep.
This reduces the risk of fire caused by wiring faults and helps save electricity.
• Do not expose the product to combustible substances or areas where mechanical oil vapors are present.
This can cause cracks, odors, or fire accidents.
• Do not use the product in damp areas such as bathrooms.
Moisture can cause poor insulation, leakage, or malfunction.
• Do not use damaged power cords or plugs.
This may result in electric shock, short circuit, or fire.
• Do not use multiple extension sockets or share outlets with other appliances.
Overloading may cause overheating or fire hazards.
• Do not unplug the power cord with wet hands.
Doing so may result in electric shock.

Safety Instrutions

To ensure safe use and avoid injury and property damage caused to you and others please do comply with the following safety precautions.

Any incorrect use due to non-compliance might lead to accidents

The following situations haven't been taken into consideration:

..... Use by un-attended children and the disabled

..... Children playing with the product

Meaning of the signs in the instructions:



Manufacturer: ZHONGSHAN CITY HAISHANG ELECTRIC APPLIANCE CO., LTD

Address: 401 Room, Building 1, No.18 Mincheng east Road, Jidong second community, Xiaolan Town, ZHONGSHAN CITY Guangdong Province, CHINA

E-mail: support@vevor.com



VEVOR

Upgrade · The Home Creator Way


Countertop Blenders

MODEL:HS-608C

VEVOR
Upgrade·The Home Creator Way

Countertop Blenders

MODEL:HS-608C

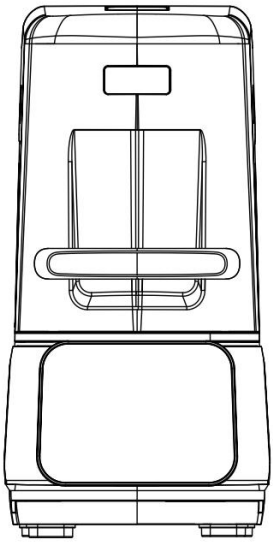

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

	Warning-To reduce the risk of injury, user must read instructions manual carefully.
	Indoor Use Only

	**CORRECT DISPOSAL** This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices
	**FCC Information:** CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment! This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This product may cause harmful interference. 2)This product must accept any interference received, including interference that may cause undesired operation. **WARNING:** Changes or modifications to this product not expressly approved by the party.responsible for compliance could void the user's authority to operate the product. Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television


	reception,which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures. · Reorient or relocate the receiving antenna. · Increase the distance between the product and receiver. · Connect the product to an outlet on a circuit different from that to which the receiver is connected. · Consult the dealer or an experienced radio/TV technician for assistance.

Introduction

Thank you for choosing our High Speed Blender.
All the staff of our company will serve you wholeheartedly.
In order to use this machine correctly and effectively, please readthis manual carefully before using.

Major Component Name

Pictures are for reference only,please referto the material object!

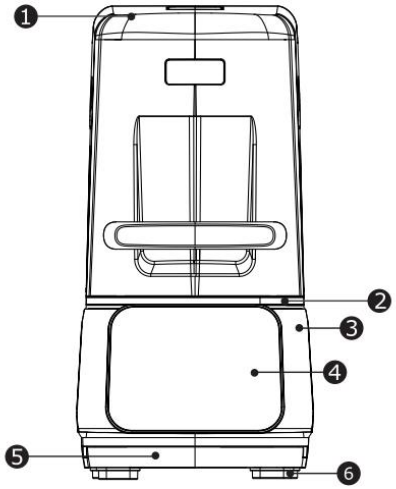

1.Soundproof Cover
2.Jar mat
3.Base Housing
4.Touch screen control
5.Base bottom
6. Rubber feet

The apparatus is intended to be used for domestic and similar applications as than:
kitchen employees in shops,offices and other workenvironments;
Farms;
By clients of hotels,motels and other residential-typeenvironments;
Bed and Breakfast type environments.

Points for Attention

WARNING:

1. Warning-To reduce the risk of injury, user must read instructions manual carefully.
2. The product complies with relevant standards and regulations. Installation of this device must comply with all applicable regulations, and it should only be operated in well-ventilated areas. Please read the user manual before installing and using this equipment.
3. This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. Children shall not play with the appliance.
5. This product shall not be used by children. Keep the appliance and its cord out of reach of children.
6. This product is intended to be used in household and similar applications
7. Please properly keep product. Check whether the product is abnormal before use. If it is abnormal, please stop using it.
8. Please use the product according to the intended use, warn of potential injury from misuse.
9. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Note:

◆Do not put metal objects such as knives,forks,spoons, etc.into the cup.

◆When cleaning,do not clean the knife directly by hand.If you use cleaning tools,please pay attention to safety.

◆ The contents of the cup should not be too full.Do not exceed two thirds of the capacity of the cup.

Please dose the lid of the cup when using.

◆ Before starting,make sure the cup is on the base. It is completely fixed on.

◆Because of the high horsepower,please hold the cup slightly when you start to use it.

◆Be sure to cover the cup when using the stirring bar while the motor is running.

◆Whether the cup is placed on the table or not.

Do not use your hand to fetch food from that cup because the blade is sharp and easy to cut.

◆To pour food out,remove the cup from the frame.

◆Be careful to touch the switch before and after start-up.

◆Utensils cannot be immersed in water.



Care should be taken when handling cutting blades especially when removing blades from containment cups,emptying containment cups,and during cleaning.

◆Remember to pull off the plug when not in use.

◆Do not lift the lid of the cup until the stirring knife has completely stopped rotating.

◆Be sure to separate the frame from the cup when cleaning and make sure to pull off the plug first.

◆Do not immerse the motor base in water or put it in the dishwasher for cleaning.


◆Keep a proper distance to prevent the child from improper movement and causing danger when the child is not allowed to be nearby during the start-up.

◆If the power cord is damaged,it must be replaced by a professional in the manufacturer's maintenance department or similar department in order to avoid danger.

Cleaning and Maintenance Methods

◆Always pull off the plug when cleaning and maintaining.
◆Carefully scrub the cup body and lid with a sponge or cloth and dry.
◆Do not put your hand into the cup for cleaning.
◆Wipe the rotating shaft and motor base with a dry cloth (remember!Do not rinse with water).
◆When it is not easy to wipe,wipe it with neutral lotion, and then wipe it with dry cloth until it is dlean.

Function Introduction

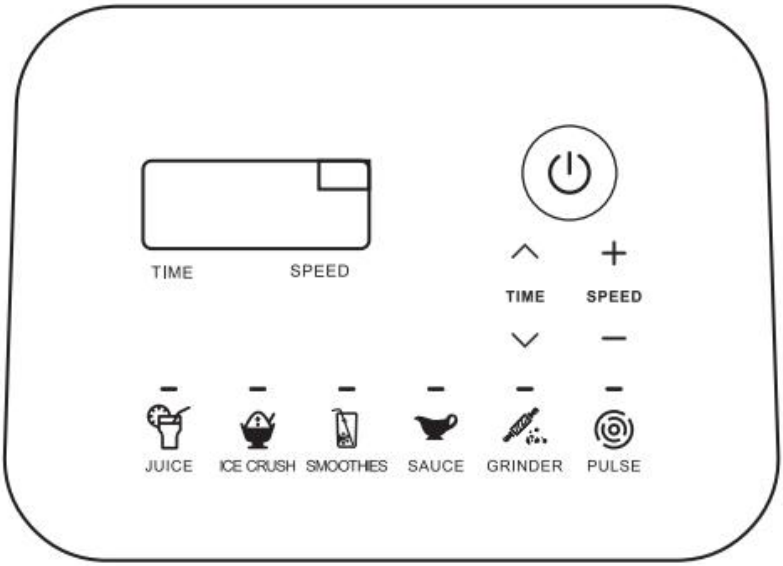

◆LED Display

◆ The system powers on,the buzzer emits a single sound,
and the entire screen(digtal tube and all indicator lights) is statically

illuminated for 2 seconds;then the 6 indicator lights are semi-lit(the color screen icons can be seen),and the 4-digt display shows "0000",indicating that the system is in standby mode.

◆ **Start/Cancel Button**

◆When in standby mode,select the desired working mode, and the corresponding indicator light will flash.Click the"On/Off Key",and the indicator light will remain on.The system will then enter this working mode and start working according to the corresponding program;if within 5 seconds,the "Start/Cancel Key"is not clicked,the indicator light will go off,and the system willautomatically return to the standby state.

◆When starting any working mode from the power on,click the "On/Off Key",and the buzzer willemit a single sound. The system willimmediately stop the current operation and exit the current working mode,returning to the standby state.

◆When starting the juice (JUICE), smoothie (ICE CRUSH),milkshake (SMOOTHIES), sauce(SAUCE), or grinder(GRINDER) working modes, no other keys can be pressedto change the working mode. For example, the "Time" and"Gear"keys cannot be used. Only the "On/Off Key" can beused to cancel the working mode and return to the standby state.

◆ **JUICE**

◆When the system is in standby mode, press the "Juice"button. The corresponding indicator light will flash. Thenclick the "On/Off Key"once. The indicator light will remainon and the system will start working.

◆Start working. The digital display shows a 30-second countdown. The motor operates at speed 1 for 3 seconds,then switches to speed 5 for 25 seconds, then switches to speed 2 for 2 seconds before ending.

◆ **ICE CRUSH**

◆When the system is in standby mode, press the "Ice"button. The

corresponding indicator light will flash and the buzzer will sound once. Then, click the "On/Off KeyKnob". The indicator light will remain on and the system will start working.

◆Start working.The digital display shows 40 seconds countdown.Motor starts in 1st gear for 1 second,then directly operates in 9th gear for 3 seconds,and the motor stops for 2 seconds(only after the motor has completely stopped can the next cycle of work begin).This cycle is repeated continuously for 7 cycles before ending.

◆  SMOOTHIES

◆ When the system is in standby mode, press the "Smoothie" button. The corresponding indicator light will flash and the buzzer will sound once. Then, click the "On/Off Key Knob".The indicator light will remain on and the system will start working.

◆ Start working. The digital display shows a countdown of 45 seconds. The motor operates at speed 1 for 2 seconds,then switches to speed 5 for 6 seconds, then to speed 9 for 12 seconds, and this cycle repeats by switching backto speed 1 for 2 seconds, then to speed '5 for 6 seconds,and to speed 9 until the end.

◆  Sauce

◆When the system is in standby mode, press the sauce button. The corresponding indicator light will flash and thebuzzer will sound once. Then, click the "On/Off key knob".The indicator light will remain on and the system will startworking.

◆Start working. The digital display shows 20 seconds countdown. The motor operates at speed 1 for 5 seconds,then switches to speed 5 for 10 seconds, then switches tospeed 3 for 5 seconds and finally stops.

◆ **GRINDER**

◆ When the system is in standby mode, press the grinding button. The corresponding indicator light will flash and the buzzer will sound once. Then click the "On/Off key" again.The indicator light will remain on and the system will start working.

◆ Start working. The digital display shows 040. The countdown begins. (The motor operates at 3rd gear for 5seconds, then switches to 9th gear for 15 seconds. This cycle repeats continuously for 2 times before the operation ends.)

◆ **PuLse**

◆ In the standby mode, press and hold the "PULSE" key for 2 seconds, and the motor will start working immediately.The 3-digit display shows the working time. The motor will first operate at 1 gear for 3 seconds, then switch to 9 gear.When the speed reaches 9 gear, it will continue to operat eat this speed. At any time during this period, if you release the key, the motor will immediately stop working.

◆ [Note: Each long press is limited to 30 seconds. After 30 seconds, it will automatically exit the working mode. You need to press the key again to enter the working mode.] When selecting the corresponding function, the 4-digitdisplay screen will show the corresponding time and gear.

◆**Time**

◆ Working process: When the icon key is touched for thefirst time, the default duration is 30 seconds. By pressing "+"or"-" to select the time, the duration can be increased or decreased by 10-90S After the 90S cycle,click the "U)"button again. When touch the Speed button by pressing "+"or "-"to select the speed, the durantion can be increased or decreased by 1-9 levels.

Important Guide

Automatic Overload Protection:
Your blender motor is designed to protect itself from overheating.
If the motor shuts off, follow these instructions:



OVERHEAT PROTECTION RESET BUTTON

◆Reduce the quantity of the ingredients in your container.
◆Press the overheat protection reset button under themotor base.
◆Turn off the the machine for up to 20 minutes to reset.
◆Reset time will be extended if high room temperatures exist.
◆To reduce the reset time, unplug the machine, remove the jug and blow air into the center section of the bottom with a fan or hair dryer on the cool setting.
◆Blend on higher speed to avoid overheating.
◆Blending on a low or medium speed can cause overheating.

Warranty

Claim according to current law.
Cash receipt with purchase date shall be enclosed with anyclaims.
When raising a claim the appliance must be returned to thestore of purchase.

Fault Analysis

Status	Cause	Solution

Not working	◆The powe is unplugged ◆ The protection device of themotor is disconnected	◆ Plug the plug into the socket with the correct voltage ◆ Put the main engine in ventilation places to cool for about 20 minutes
Over shaking	◆The main engine is imbalanced ◆ The conditioning cup is not completely.put into the main engine ◆ Over amount of ingredients	◆ Put the main engine in fat place ◆ Put the conditioning cup completely into the main engine ◆ Adjust the amount of ingredents
Water spilling from the lid	◆ The water exceeds the maximum ◆ The lid is not correctly covered	◆ Adjust the amount of water ◆Make sure the lid is correctly covered

Note:
Above are common trouble analysis and troubleshooting methods.For other troubles, please contact our customer service department, or go directly to our designated repair point for repair.
Do not dismantle and repair yourself.

Safety Instrutions

When the product will not be used for a long period of time,or if you are leaving for an extended absence, please unplug the power cord.
Even in standby mode, some parts remain energized, and insulation deterioration or electrical leakage may cause fire.
• Do not spray volatile oils, paints, or insecticides on the product.
Doing so may cause electric shock or fire.
Always unplug the power cord when the product is not in use for a long

time or when you are away.
Some parts remain energized in standby mode and may causefire due to insulation cracks or leakage.
• Do not pull the power cord when unplugging.
Always hold and pull the plug directly.
Ensure the power cord is plugged in securely before use.The plug must fit tightly into the socket with no looseness or incomplete insertion.
• Do not step on the power cord.
Damaging the power cord or socket can lead to electric shock, burns, or leakage.
If the power cord is damaged, it must be replaced by the manufacturer, a service agent, or a qualified technician to avoid danger.

Switch off the power when you are away or before going to sleep.
This reduces the risk of fire caused by wiring faults and helps save electricity.
• Do not expose the product to combustible substances or areas where mechanical oil vapors are present.
This can cause cracks, odors, or fire accidents.
• Do not use the product in damp areas such as bathrooms.
Moisture can cause poor insulation, leakage, or malfunction.
• Do not use damaged power cords or plugs.
This may result in electric shock, short circuit, or fire.
• Do not use multiple extension sockets or share outlets with other appliances.
Overloading may cause overheating or fire hazards.
• Do not unplug the power cord with wet hands.
Doing so may result in electric shock.

Safety Instrutions

To ensure safe use and avoid injury and property damage caused to you and others please do comply with the following safety precautions.

Any incorrect use due to non-compliance might lead to accidents

The following situations haven't been taken into consideration:

..... Use by un-attended children and the disabled

..... Children playing with the product

Meaning of the signs in the instructions:



Manufacturer: ZHONGSHAN CITY HAISHANG ELECTRIC APPLIANCE CO., LTD

Address: 401 Room, Building 1, No.18 Mincheng east Road, Jidong second community, Xiaolan Town, ZHONGSHAN CITY Guangdong Province, CHINA

E-mail: support@vevor.com

