VEVOR

Upgrade · The Home Creator Way


Wheel Rim Cover Hubcaps

MODEL: T-R16-20 T-R16-10 T-R15-10 T-R16-7 tongyong3

VEVOR Support Center

1	T-R16-20		3	T-R15-10	
2	T-R16-10		4	T-R16-7	
5	TONGYONG 3				

MODEL: T-R16-20 T-R16-10 T-R15-10 T-R16-7 tongyong3

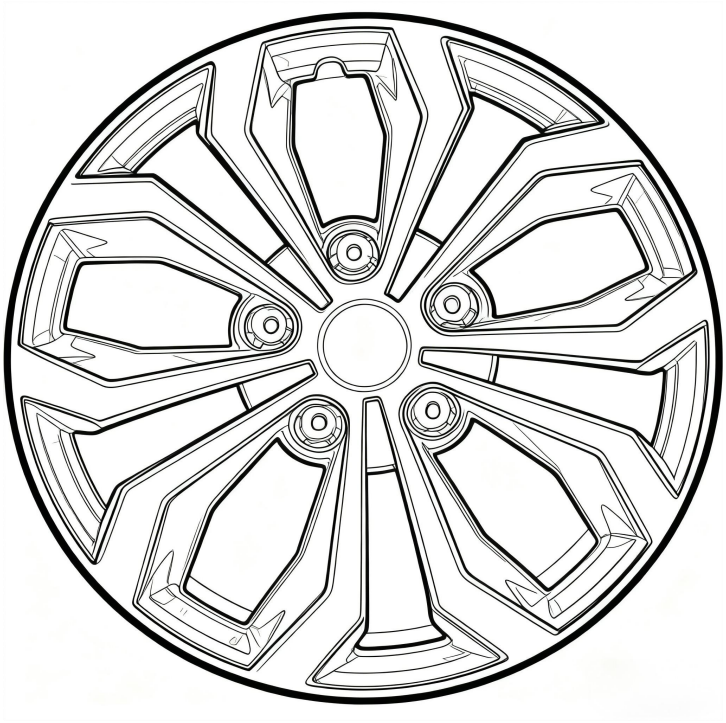

<Picture Only For Reference >

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

IMPORTANT SAFEGUARDS



WARNING: Read and understand this entire manual before operating or servicing this product. Failure to follow these warnings and instructions can cause personal injury or damage to valuable property.

1.Assemble only according to these instructions. Improper assembly can create hazards. The manufacturer declines all responsibility in case of damages due to a bad installation.

2.Caution with the risks of pinching or cuts during assembly.

3.Avoid children using the product. And this product is not a toy. Do not allow children to play.

4.Wear ANSI-approved safety goggles and heavy-duty work gloves during assembly and use.

5.Keep the assembly area clean and well-lit.

6.Keep bystanders out of the area during assembly.

7.Do not assemble when tired or when under the influence of alcohol, drugs or medication.

8.Product capabilities apply to properly and completely assembled product only.

9.The product complies with relevant standards and regulations.Installation of this device must comply with all applicable regulations,and it should only be operated in well-ventilated areas.

10.This product is not intended for use by persons (including children) with reduced physical,sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

11.Please properly keep product.Check whether the product is abnormal before use. If it is abnormal,please stop using it.



12.Please use the product according to the intended use, warn of potential injury from misuse.



13.For additional information regarding the parts listed in the following pages, please refer to the Assembly Diagram of this manual. Unwrap and

separate all parts in a clean work area. Please keep small spare parts out of children's reach.
14.If damage occurs to the hubcap after installation—whether from road debris impact or driver error—it is not considered a product defect. Replacement must be purchased separately.

SAVE THESE INSTRUCTIONS

SPECIFICATION

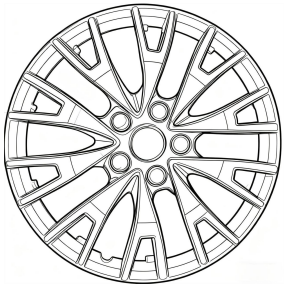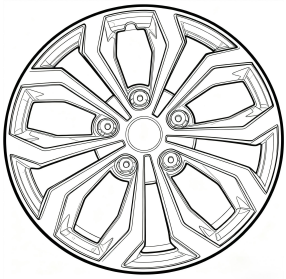Model	**T-R16-20**	**T-R15-10**	**T-R16-10**
Material	ABS+PC	ABS	
Wheel Specification	R16	R15	R16
Number of spoke	20	10	
Color	Black	Silver+Black	
QTY	4	4	
Suitable wheel	Steel wheel	Steel wheel	
Feature			

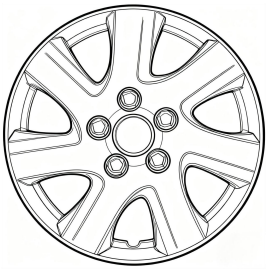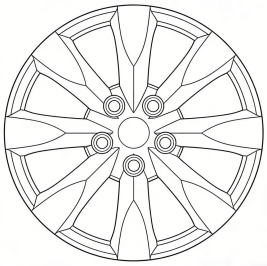Model	T-R16-7	tongyong3
Material	ABS+PC	ABS+PC
Wheel Specification	R16	R16
Number of spoke	7	8
Color	Silver	Silver
QTY	4	4
Suitable wheel	Steel wheel	Steel wheel
Feature		

CAUTION:

All general-purpose hubcaps follow the following applicable and inapplicable situations.

Applies to base stock wheels of this type, as shown in the figure A.



(Figure A)

Not suitable for aluminum alloy wheels figure B:



(Figure B)

It should also be noted that the following two types of special steel wheels are not applicable(Figure C).





(Figure C)

Steel wheel with raised center & long lug nut

Steel wheel hub with external counterweight blocks


PACKAGE LIST


No.	Name	Picture	QTY
1	Wheel Rim Cover Hubcap	/	4
2	Support ring		4
3	Manual	/	1

INSTALLATION


STEP1: Mounting the support ring.


1.Insert the support ring into the groove of the hubcap clapper, noting that the position of the gap should be corresponding.

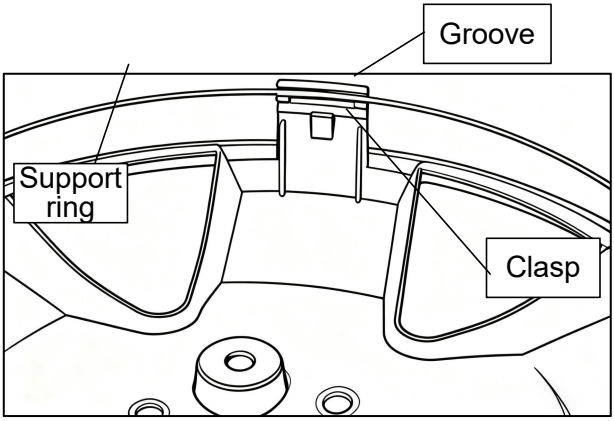


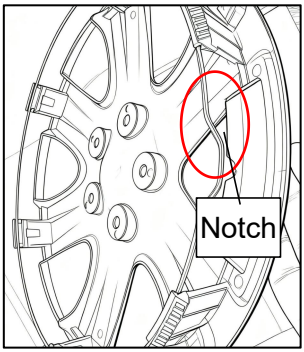



Note: The support ring has a disconnecting gap that needs to be held open and inserted into the clasp during installation.

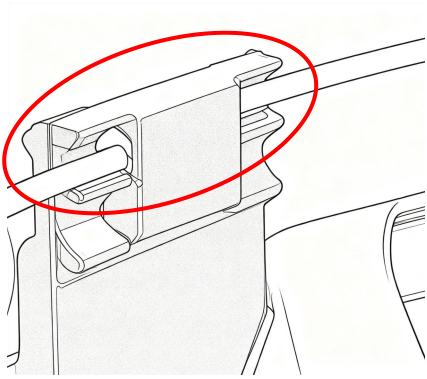


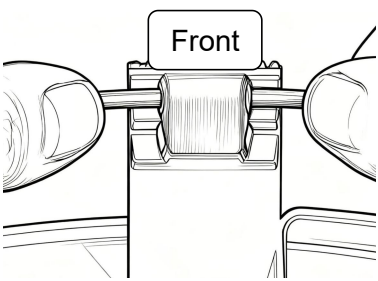

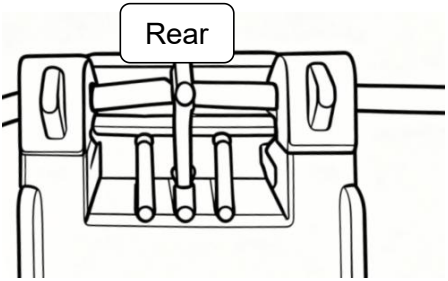


As shown in the figure, since the wheel hub sizes of different brands vary, the support rings can be adjusted from small to large in the 1st, 2nd, and 3rd gears to find the appropriate tension.

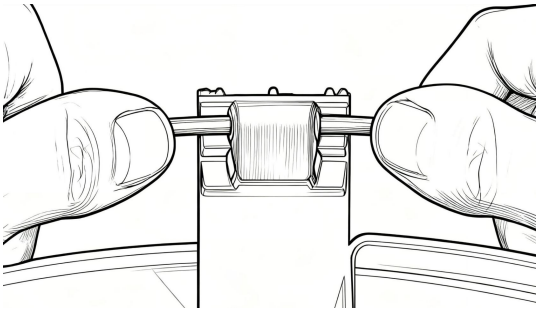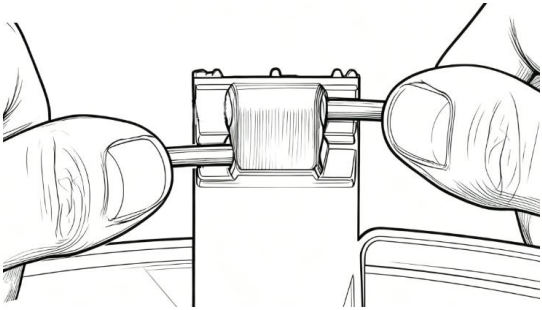
	**Gear 1** **Small Wheels**
	**Gear 2** **Middle wheels**

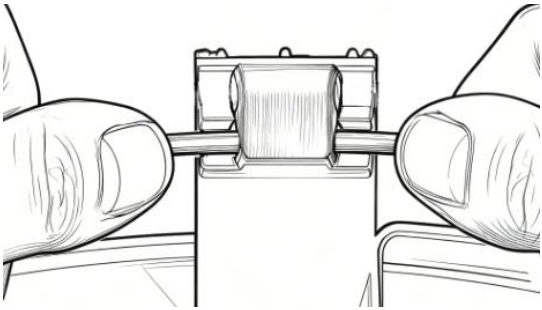	**Gear 3** **Large wheels**

2. Install the hubcap

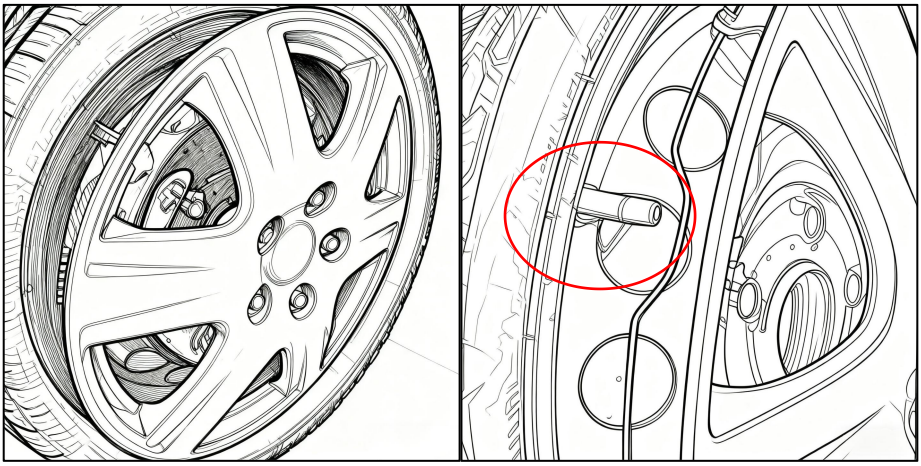

1)Align the hubcap with the wheel, noting that the valve nozzle corresponds to the notch.

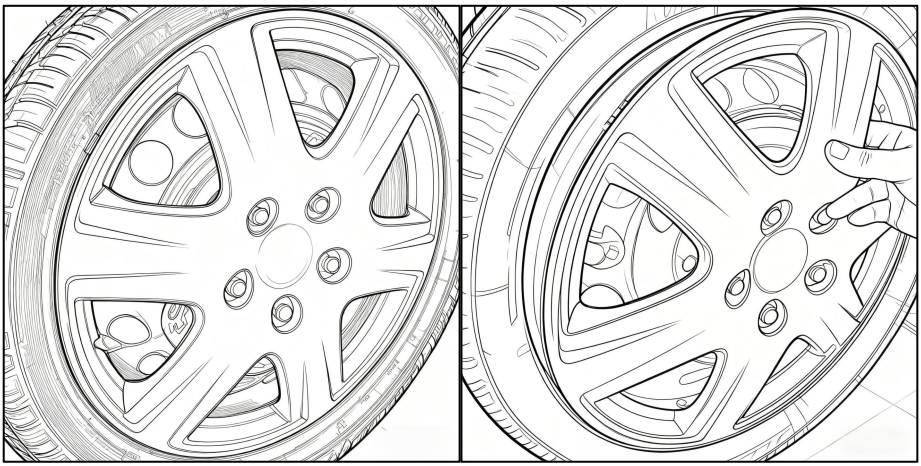

2)First press the middle buckle firmly in and then gently press the outer round edge, hear the "click" to indicate that the installation is in place. Check whether the hub cover is tightly attached to the hub.

